


Signature Edition® GOLD

INFUSION PUMP

Models 7130/7131 and 7230/7231
(Guardrails® Safety Software Compatible)

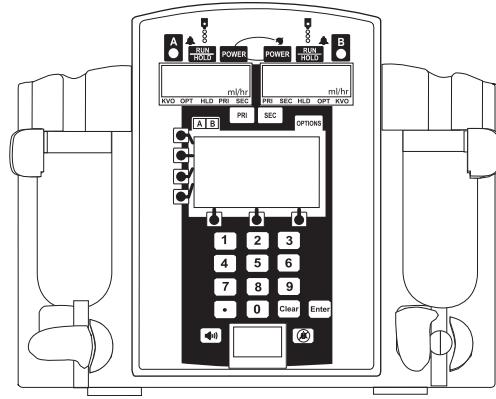

DIRECTIONS FOR USE

NOTE to Guardrails® Safety Software Users:

This instrument is compatible with the Guardrails® Safety Software for Signature Edition® GOLD Infusion Pumps. If the Profiles Feature is not enabled (Off), this Directions for Use applies.

If the Profiles Feature is enabled (On) with the Guardrails® Software, the user interfaces may be different. For further information, refer to the Directions for Use for the Signature Edition® GOLD Infusion Pump with the Guardrails® Software installed.

TABLE OF CONTENTS

INTRODUCTION

ABOUT THE INSTRUMENT	1
NEW USER INTERFACE FEATURES	2
CONTROLS AND INDICATORS	3
DISPLAYS	5
Main LCD Display	5
Rate Display(s)	6
Lower Display	6
AROUND THE INSTRUMENTS	7
SYMBOLS AND TERMS	8

BASIC SYSTEM OPERATION

WARNINGS AND CAUTIONS	11
PREPARING AN INFUSION	16
Preparing Primary Solution Container	16
Preparing Primary Administration Set	16
Loading Primary Administration Set	17
START-UP	18
PRIMARY INFUSION	19
Making Changes During Primary Infusion	20
Resuming an Interrupted Primary Infusion	21
KVO MODE	21
Resuming Primary Operation from KVO	21
SECONDARY INFUSION	22
Making Changes During Secondary Infusion	24
Viewing or Changing Primary Settings During Secondary Infusion	24
Resuming an Interrupted Secondary Infusion	25
CHANGING PRIMARY SOLUTION CONTAINER	26
UNLOADING SET	26
POWERING OFF	27
AIR-IN-LINE AND ACCUMULATED AIR-IN-LINE	27
Single or Accumulated Air Bubble Detection (NO Reset Feature)	28
Single or Accumulated Air Bubble Detection (Reset Feature Available)	28
ALARMS, ALERTS AND PROMPTS	29

ADVANCED OPERATIONS

DYNAMIC MONITORING® SYSTEM	41
Monitoring Options - General	41
Monitoring Options - Resistance Mode	44
Resistance Alert	45
Resistance Trend Graphs	46
Monitoring Options - Pressure Mode	48
Adjustable Pressure Alarm	50
Pressure Baseline	51
Pressure Trend Graphs	53
Detection of Upstream Occlusions	56

INTRODUCTION

BASIC SYSTEM
OPERATION

ADVANCED
OPERATIONS

ADDITIONAL
FEATURES

MAINTENANCE

APPENDIX

ADVANCED OPERATIONS (Continued)

DRUG SPECIFIC DOSE RATE CALCULATOR (DRC)	56
Facts About DRC	57
Entering a New Program	57
Making Changes During DRC Program	65
Resuming an Interrupted DRC Program	70
Quitting DRC Program	71
MULTI-STEP PROGRAM	71
Entering a New Program	72
Making Changes During Multi-Step Program	76
Resuming an Interrupted Multi-Step Program	79
Quitting Multi-Step Program	80
MULTI-DOSE PROGRAM	80
Entering a New Program	81
Making Changes During Multi-Dose Program	84
Resuming an Interrupted Multi-Dose Program	85
Quitting Multi-Dose Program	87
LOADING DOSE	87
Entering a New Program	87
Making Changes During Loading Dose Program	89
Viewing or Changing Primary Settings During Loading Dose Infusion	89
Resuming an Interrupted Loading Dose Program	91

ADDITIONAL FEATURES

BATTERY MANAGEMENT SYSTEM	93
Battery Power Gauge	93
Battery Recharge	94
NURSE CALL (7130/7230 ONLY)	94
Activating Nurse Call Feature	94
If an Alarm Occurs	94
PANEL LOCK	95
Turning Panel Lock Feature On	95
Turning Panel Lock Feature Off	95
POLE CLAMP	96
Changing Pole Clamp Orientation	96
FLOW SENSOR	97
RS-232 COMPUTER LINK	98
Connecting to a Computer	98
Disconnecting from a Computer	99

MAINTENANCE

SPECIFICATIONS	101
CONFIGURABLE OPTIONS	104
UNPACKING	106
CHECK-IN AND CONFIGURATION	106
Rate Accuracy Qualification Test	106
Set Sensor Check / Pressure Calibration Verification	110
Functional Test	110
Flow Stop Test	112
Ground Current Leakage Test	112

MAINTENANCE (Continued)

CHECK-IN AND CONFIGURATION (Continued)	
Ground Resistance Test	112
Instrument Configuration	112
STORAGE	112
CLEANING	113
Air-in-Line Assembly	114
INSPECTION REQUIREMENTS	115
SERVICE INFORMATION	116
Customer Service	116
Technical Support	116
Product Return	116
WARRANTY	117
APPENDIX	
TRUMPET AND START-UP CURVES	119

INTRODUCTION

BASIC SYSTEM
OPERATION

ADVANCED
OPERATIONS

ADDITIONAL
FEATURES

MAINTENANCE

APPENDIX

GENERAL CONTACT INFORMATION

Customer Advocacy

For clinical and technical questions, feedback, and troubleshooting assistance.

Phone, toll-free, within the United States and Canada: (800) 854-7128, Ext. 7812
E-Mail: CustomerFeedback@alarismed.com

Technical Support - North America

For technical information related to maintenance procedures and service manual support.

United States:

Phone:
(858) 458-6003
Toll-free: (800) 854-7128, Ext. 6003

Canada:

Phone, Toll-free:
Eastern: (800) 908-9918
Western: (800) 908-9919

For more detailed information, refer to the "Service Information" section of this document.

Technical Support and Customer Service - UK

For technical and service information.

Customer Service:

Freephone: 0800 917 8776
Fax: 01256 330 860

Technical Support:

Freephone: 0800 389 6972

For more detailed information, refer to the "Service Information" section of this document.

About the Instrument

The Signature Edition® GOLD Infusion Pump includes Model 7130/7131 and Model 7230/7231 Infusion Pumps with Resistance Monitoring Mode, Adjustable Pressure Capability, and AccuSlide® Flow Regulator administration sets.

- The single channel (Model 7130/7131) provides a full range of features in a small, easy-to-use, linear peristaltic pump.
- The dual channel (Model 7230/7231) offers the same features while providing two, independent infusion pumps in one instrument.

ALARIS Medical Systems® Infusion Pumps are intended for use in today's growing professional healthcare environment, including healthcare facilities, home care, and medical transport that utilize infusion pumps for the delivery of fluids, medications, blood, and blood products.

The ALARIS Medical Systems® Infusion Pumps covered in this document is indicated for continuous or intermittent delivery through clinically acceptable routes of administration; such as, intravenous (IV), intra-arterial (IA), subcutaneous, epidural, enteral, and irrigation of fluid spaces.

The Signature Edition® Pump uses a wide variety of AccuSlide® Flow Regulator administration sets. The ALARIS Medical Systems® 72 Series administration sets are designed for use with the instruments as well as for gravity-flow, stand-alone use. The unique, patented Accuslide® Flow Regulator has an integral flow control device that minimizes accidental free-flow when the set is removed from the instrument and provides accurate rate control during gravity administration.

Qualified service personnel can configure many features of the instrument to meet specialized needs. The ☐ symbol is used throughout this document to indicate the configurable options. Refer to the “☐ Configurable Options” section in the “Maintenance” chapter of this document for a list of the configurable options and their default settings. Refer to the Technical Service Manual for the procedure to set selected configuration parameters.

New User Interface Features

The user interface differences between instruments having Version 2.78 software and those having Version 4.06 (North America) or Version 4.08 (Europe), are as follows:

- **New Patient?** prompt during start-up.

Unless all power is lost, previous infusion parameters are retained in memory until the instrument is powered on and **New Patient? Yes** is selected (six-hour memory rule no longer applies). (For programming information, refer to "Start-Up" section in "Basic System Operation" chapter.)

- Flashing KVO rate during KVO alert.

When the instrument reaches KVO status, the KVO LED indicator and the KVO rate flash. (For further information, refer to "KVO Mode" section in "Basic System Operation" chapter.)

- Maximum rate notification.

A prompt displays if the programmed infusion rate exceeds the configured maximum rate. (For further information, refer to "Alarms, Alerts and Prompts" section in "Basic System Operation" chapter.)

- Pressure limit notification.


In the Adjustable Pressure Mode, a prompt displays if the default pressure alarm setting exceeds the configured maximum pressure. The default setting is the occlusion level at power up, and can be adjusted down or up to the maximum level. This feature is only configurable by qualified service personnel. (For further information, refer to "Alarms, Alerts and Prompts" section in "Basic System Operation" chapter.)

- Combined drug list in Dose Rate Calculator Mode.

In the Dose Rate Calculator Mode, the drug list is no longer divided between "short" and "extended" lists, but is combined into one list. [For programming information, refer to "Drug Specific Dose Rate Calculator (DRC), Entering a New Program" section in "Advanced Operations" chapter.]


Controls and Indicators

Model 7130/7131

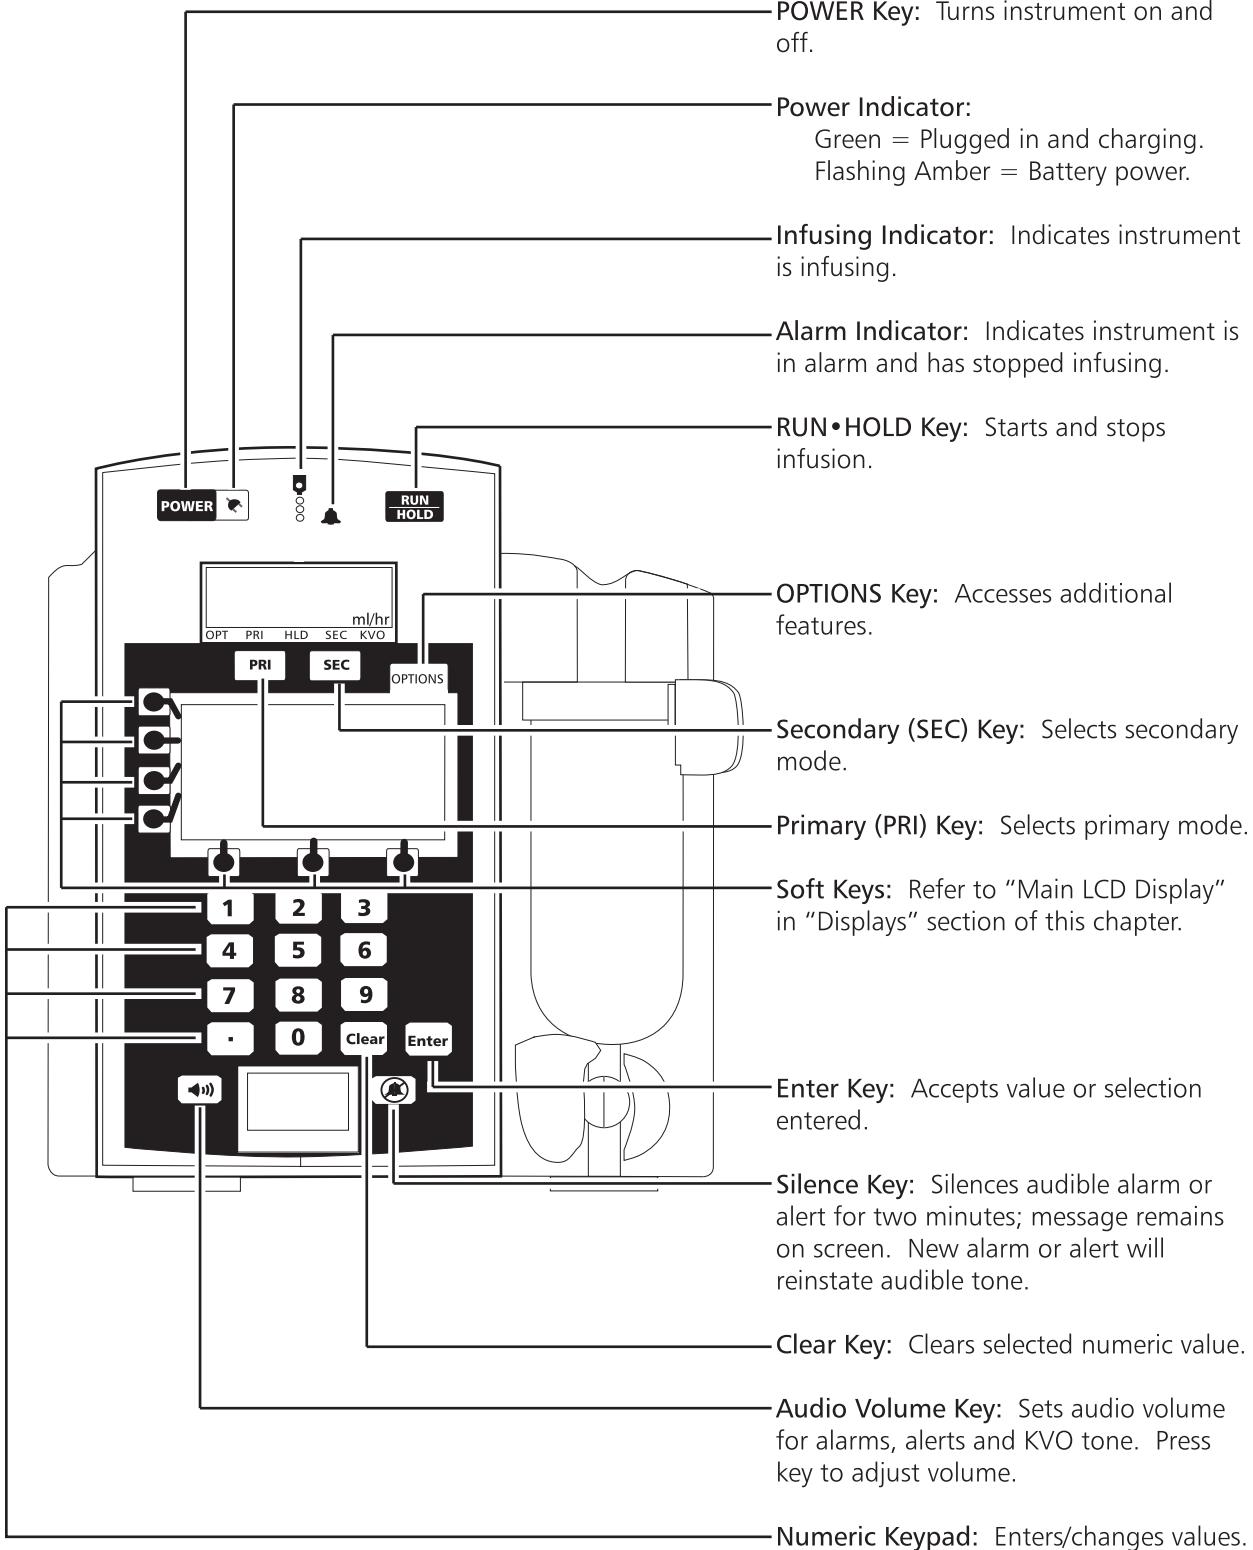

Controls and Indicators (Continued)

Model 7230/7231

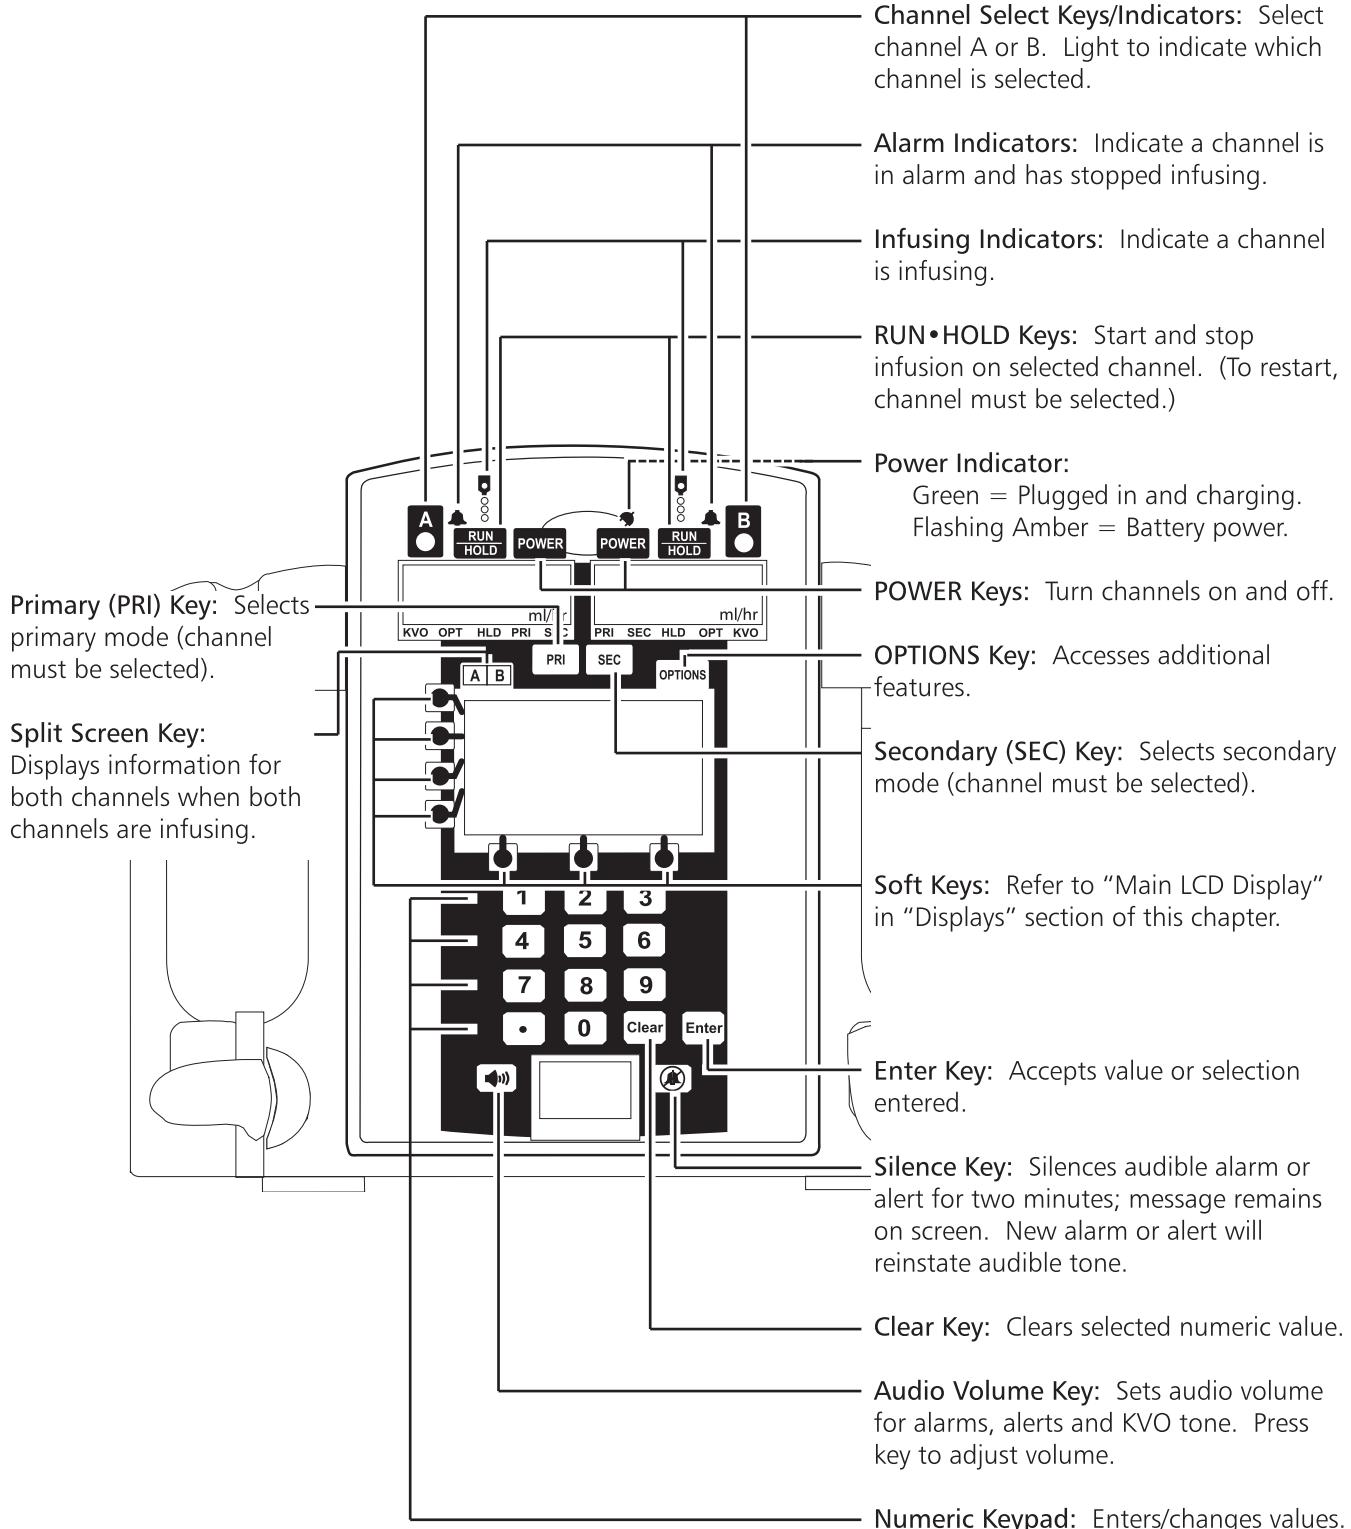

Displays

Main LCD Display

The Main LCD Display is backlit for easy viewing. The backlight dims when operating on battery power as an energy-saving feature. Pressing any key automatically turns the backlight up again.

CAUTION

Appearance of lines and/or dots that remain on constantly when the device is powered on may indicate improper functioning of the Main LCD Display. Although the instrument is functioning properly, return the instrument to qualified service personnel.

Channel Indicator (*dual channel only*)

Indicates which channel is currently selected.

Highlight

Indicates value is selected. Values must be highlighted to be changed.

A flashing highlight indicates entry is incomplete. Complete entry and press **ENTER**, or clear existing value, enter desired value and press **ENTER**.

Soft Keys

The keys on the side and bottom of the Main LCD Display serve a variety of functions. What each key does is indicated by the text in the display at the time.

"Active" Soft Keys

Indicated by a "TICK" (■) mark next to the key.

1. Press an active key to highlight desired area in display.
2. Enter a value using numeric keypad.
3. Press **ENTER** to accept highlighted value.



"Inactive" Soft Keys

Indicated by having no "TICK" (■) mark at the left and bottom edges of the display.

Split Screen (*dual channel only*)

When both channels are infusing, the split screen showing programmed information is displayed after one minute.

Pressing **A B** shows the split screen immediately.

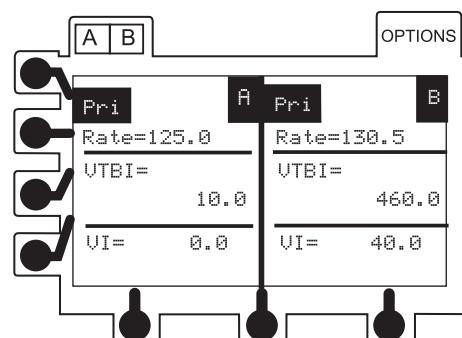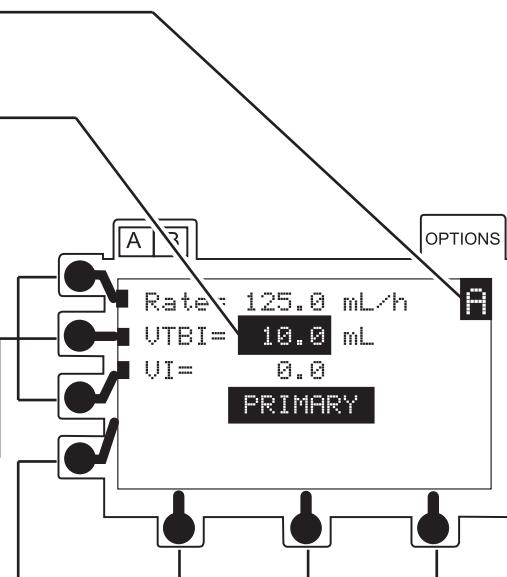

Displays (Continued)

Rate Display(s)

The LED rate display is easily viewed from a distance.

Rate Display(s)

Indicates current infusion rate(s) in mL/h. Flashes to indicate hold or alarm condition, and when in KVO mode.



Model 7130/7131 Status Bar

Indicates which mode the instrument is in: *Optional Modes, Primary, Hold, Secondary, or KVO*.

Model 7230/7131 Status Bars

Indicate which mode each channel is in: *KVO, Optional Modes, Hold, Primary, or Secondary*.



Lower Display

The lower LCD display is backlit for easy viewing. The display dims when operating on battery power, as an energy-saving feature.

Panel Lock Indicator

Displayed if panel lock is on.

Audio Volume Indicator

Indicates audio volume for alarms and alerts.

Computer Mode Indicator


Displayed if instrument is in computer monitor mode.

Instrument ID Label

Characters are entered by qualified service personnel to identify configuration, "ownership", location, etc.

Battery Power Gauge



Indicates approximate battery time remaining under current infusing conditions.

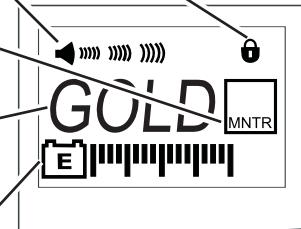

NOTES:

- The instrument label and battery gauge are always displayed, even when the instrument is turned off; however, the battery gauge does not represent the battery time remaining when the instrument is turned off.
- To ensure a more accurate battery gauge reading, review the battery gauge five minutes after starting an infusion. The gauge updates for each program change while infusing. Battery run time may be affected by the operating mode, rate, monitoring options, and back pressure.

Around the Instruments

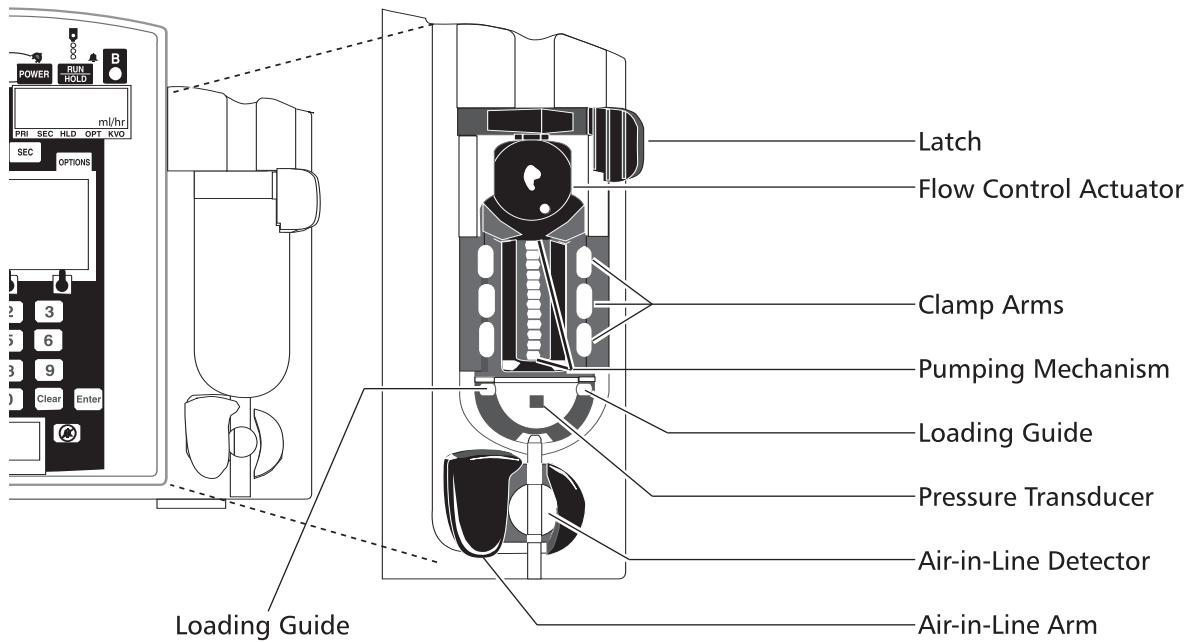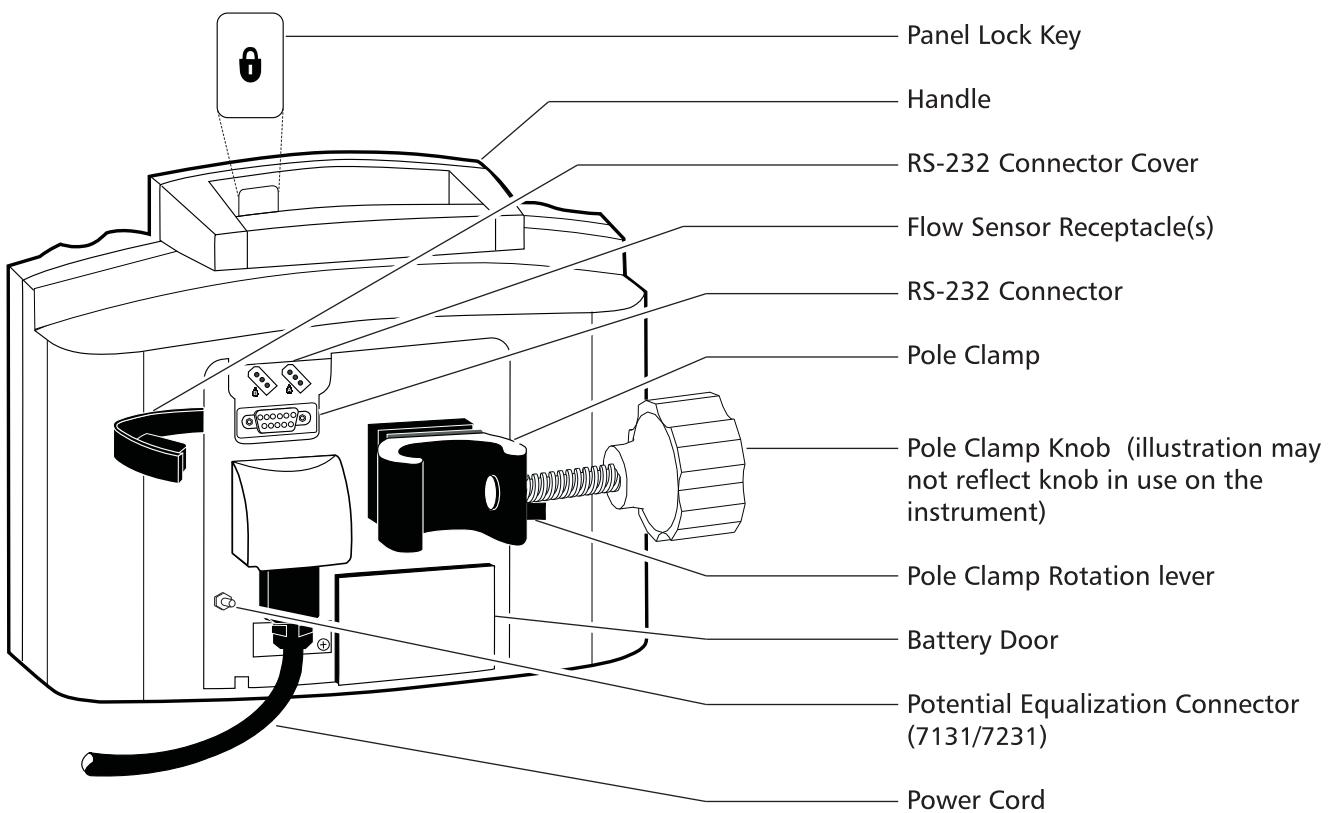

Symbols and Terms



Alarm indicator.



Attention: Refer to accompanying documentation.



Audio volume.



Approximate battery time remaining under current infusing conditions. Battery gauge does not represent battery time remaining when instrument is turned off.



Conformité Européenne [CE - Marking] notified body "0086": British Standards Institution.



Configurable Option.



Electrical shock protection rating: Type CF



Electrical shock protection rating: Type CF, Defibrillation-Proof

NOTE: Depending on manufacturing and distribution timing, the Signature Edition® GOLD Infusion Pump may bear either the CF or CF Defibrillator-Proof symbol on the main rating label. The Signature Edition® GOLD Infusion Pump has been tested and complies with IEC 60601-1 Amendment 2, Clause 17 (h) for Defibrillator-Proof Equipment.



Explosion risk if used in presence of flammable anesthetics.



Flow sensor receptacle (optional), channel A.



Flow sensor receptacle (optional), channel B.



Infusing indicator.



Indicates degree of protection, liquid ingress.



Manufacturing Date: Number adjacent to symbol indicates month and year of manufacture.



Nurse Call (optional for 7130/7230).



Consult operating instructions.

Symbols and Terms (Continued)

	Panel lock.
	Green = instrument plugged into AC power and battery being charged. Flashing amber = instrument running on battery power and battery being depleted.
	RS-232 connector.
	CAUTION: Federal (U.S.A.) law restricts this device to sale by or on the order of a physician.
	Silence mode.
	Split screen (<i>dual channel instrument only</i>).
Transition Tone	A brief tone during transition from one mode to another.
	Canadian Certification Mark: Products bearing this mark have been tested and certified in accordance with applicable Canadian electrical safety and performance standards (CSA C22.2 No. 125).
	U.S. Certification Mark: Products bearing this mark have been tested and certified in accordance with applicable U.S. electrical safety and performance standards (UL 544).
Single-Use	Single-Use. Do not re-use.
	Product contains a particular element; such as, = DEHP in fluid pathway.
	Product DOES NOT contain a particular element; such as, = set is latex-free.
	Drops per milliliter specification for product will be identified on drop symbol.
	Product incorporates SmartSite® Needle-Free Valve Ports and should not be accessed by a needle.
	Approximate set priming volume.
	Expiration date for product will be identified near hour glass symbol.
	Do not use if package is damaged.

Symbols and Terms (Continued)

cm	centimeter
day	day (d)
gm	gram (g)
h	hour
HLD	infusion in "hold" mode
in	inch
kg	kilogram
KVO	"keep vein open" infusion rate mode
lb	pound
mcg	microgram (μg)
mcL	microliter (μL)
mEq	milliequivalent
mg	milligram
min	minute
mL	milliliter
mUn	milliunit
nan	nanogram (ng)
OPT	"options" mode
PRI	"primary" infusion mode
rev	revolution (r)
SEC	"secondary" infusion mode
Un	unit
VI	volume infused
VTBI	volume to be infused
wks	weeks

Rx Only

NOTE: Although the Signature Edition® Pump is built and tested to exacting specifications, it is not intended to replace the supervision of IV infusions by medical personnel. The user should become thoroughly familiar with the features and operation of the system and exercise vigilance in its utilization.

WARNING

A warning is an alert to potential serious outcomes (death, injury or serious adverse events) to the patient or user.

CAUTION

A caution is an alert to take special care for the safe and effective use of the device.

Warnings and Cautions

To ensure proper performance of the Signature Edition® Pump and to reduce potential injury, observe the following precautions.

Epidural Administration

The instrument can be used for epidural administration of anesthetic and analgesic drugs. This application is only appropriate when using analgesics and anesthetics labeled for continuous epidural administration and catheters intended specifically for epidural use. Use only an ALARIS Medical Systems® 72 Series administration set, **without** a 'Y' connector or injection port, for epidural infusions. The instrument's secondary features must **not** be used when the instrument is being used for epidural administration of anesthetic and analgesic drugs.

- Epidural administration of anesthetic drugs: Use indwelling catheters specifically indicated for short-term (96 hours or less) anesthetic epidural drug delivery.
- Epidural administration of analgesic drugs: Use indwelling catheters specifically indicated for either short-term or long-term analgesic epidural drug delivery.

WARNING

Epidural administration of drugs other than those indicated for epidural use could result in serious injury to the patient.

WARNING

It is strongly recommended that the infusion instrument, source container, and administration set used for epidural drug delivery be clearly differentiated from those used for other types of administration.

Warnings and Cautions (Continued)

CAUTION

Prior to use, ALARIS Medical Systems recommends that users become familiar with the instrument, the administration sets and any accessories that may be used.

WARNING

This instrument is designed to stop fluid flow under alarm conditions. Periodic patient monitoring must be performed to ensure the infusion is proceeding as expected. It is neither designed nor intended to detect infiltrations and will not alarm under infiltration conditions.

WARNING

Hospital personnel must ensure the compatibility of the drugs, as well as the performance of each instrument, as part of the overall infusion. Potential hazards include drug interactions, inappropriate delivery rates, and pressure alarms.

WARNING

The use of positive displacement infusion devices ported together with gravity flow infusion systems into a common IV site may impede the flow of common "gravity only" systems, affecting their performance (hospital personnel must ensure the performance of the common IV site is satisfactory under these circumstances).

WARNING

Each time the instrument is turned on, verify and/or set the monitoring mode, resistance alert and/or pressure alarm limit. If the monitoring mode, resistance alert and/or pressure alarm limit are not verified, the instrument may not be operating with the desired occlusion detection parameter(s).

WARNING

References in this document to specific drugs and drug doses are for example only. Refer to specific drug product labeling for information concerning appropriate administration techniques and dosages.

Warnings and Cautions (Continued)


Parallel Infusions

There are no contraindications regarding the use of the Signature Edition® Pump with any other positive displacement infusion device when ported together into a common IV site location.

User Precautions

To ensure proper performance of the instrument and to reduce potential injury to the operator, observe the following precautions.

- Disconnect from main (AC) and battery power when performing maintenance.
- Do not open the instrument case. There are no user-serviceable parts inside. The case should only be opened by qualified service personnel using proper grounding techniques. When the case is opened, an electrical shock hazard exists which can result in serious injury to persons and instrument component damage.
- The power cord must be connected to a properly grounded three-wire receptacle ("Hospital Grade").

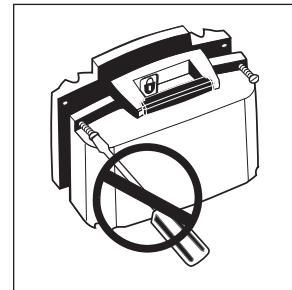

Administration Sets

- A list of approved administration sets recommended by ALARIS Medical Systems for use with the Signature Edition® Pump is provided on the Set Compatibility Card.
- Before operating the instrument, verify that the administration set is free from kinks and is installed correctly in the instrument.
- ALARIS Medical Systems® 72 Series administration sets are supplied with a sterile fluid path for one-time use only. Do not resterilize.
- For set replacement interval, refer to facility protocol and/or government standards (such as, CDC guidelines in the United States).
- Fluid path is STERILE and NONPYROGENIC.
- Discard if packaging is not intact or protector caps are unattached.
- For IV push medication (put instrument on hold), clamp tubing above the port.

WARNING

Use only ALARIS Medical Systems® 72 Series administration sets. The use of any other set may cause improper instrument operation, resulting in inaccurate fluid delivery or other potential hazard.

Warnings and Cautions (Continued)

User Precautions (Continued)

Administration Sets (Continued)

- Flush port(s) per facility protocol.
- Discard administration set per facility protocol.

SmartSite® Needle-Free System:


- SmartSite® Needle-Free Valve Port is contraindicated for blunt cannula systems.
- Swab top of SmartSite® Needle-Free Valve Port with preferred antiseptic prior to each access.

NOTES:

- *If applicable, attach syringe to SmartSite® Needle-Free Valve Port and aspirate minute air bubbles.*
- *In an emergency, SmartSite® Valve may be accessed by a needle and will leak if punctured. To access port with needle without causing leakage, attach a "PRN" adapter of sufficient length to SmartSite® Needle-Free Valve Port.*

Artifacts

It is normal for infusion devices to produce nonhazardous currents when infusing electrolytes. These currents vary in proportion to the infusion device flow rate. When the ECG monitoring system is not functioning under optimal conditions, these currents may appear as artifacts, simulating actual ECG readings. To determine if ECG abnormalities are caused by patient condition or the ECG equipment, place the infusion device on hold. If the ECG readings become normal, the ECG equipment requires attention. Proper setup of the ECG equipment should eliminate these artifacts. Reference the appropriate ECG monitoring system documentation for instructions on setup and maintenance.

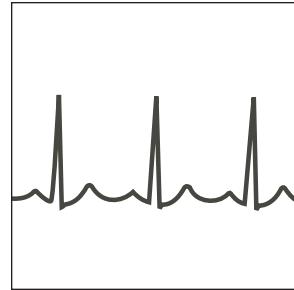

Contraindications


None known.

Warnings and Cautions (Continued)

User Precautions (Continued)

Dropping/Jarring

Should an instrument be dropped or severely jarred, it should be immediately taken out of service and inspected by qualified service personnel to ensure its proper function prior to reuse.

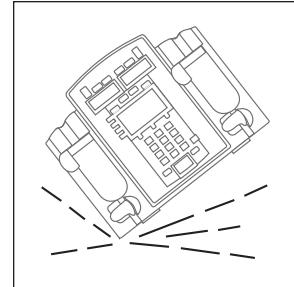


Operating Environment

Not for use in the presence of flammable anesthetics.

◀ DANGER ▶

Explosion risk if used in the presence of flammable anesthetics.

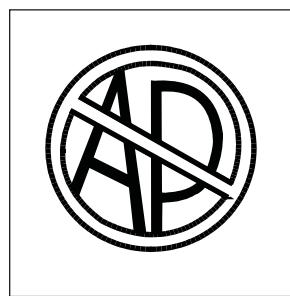


Radio Frequency Interference

Operating the instrument near equipment which radiates high energy radio frequencies (electrosurgical/cauterizing equipment, portable radios, cellular telephones, etc.) may cause false alarm conditions. If this happens, reposition the instrument away from the source of interference or turn off the instrument and manually regulate the flow with the AccuSlide® Flow Regulator regulating clamp.

WARNING


Use of accessories or cables other than those specified may result in degraded electromagnetic compatibility performance of this device.

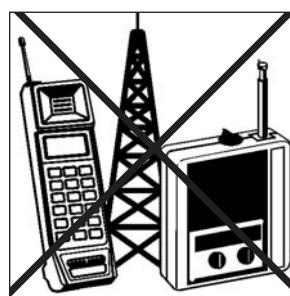

Preparing an Infusion

Preparing Primary Solution Container


Prepare the primary solution container in accordance with the manufacturer's directions for use.

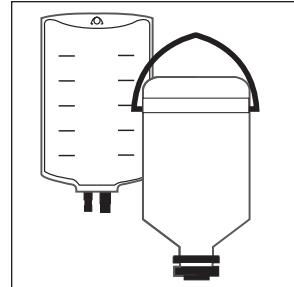

Preparing Primary Administration Set

Use only an ALARIS Medical Systems® 72 Series administration set.


- Slide AccuSlide® Flow Regulator thumb clamp down until an audible "click" verifies it is in fully closed position.

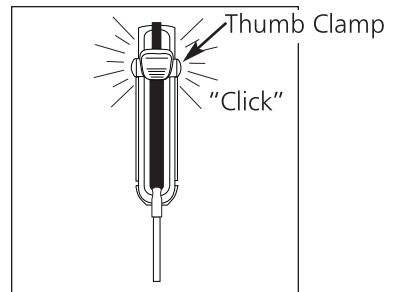

AccuSlide® Flow Regulator


- Spike solution container.
- Fill drip chamber to 2/3 full.

NOTE: Open the vent cap on the spike if the container requires venting.

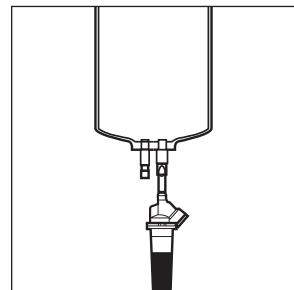

- Invert AccuSlide® Flow Regulator.
- To prime set, slide AccuSlide® Flow Regulator thumb clamp to open position.
- When priming is complete, close AccuSlide® Flow Regulator clamp. Verify no fluid is flowing.
- A gravity flow rate may be adjusted with AccuSlide® Flow Regulator thumb clamp, if desired.


Slide up to open
for priming.

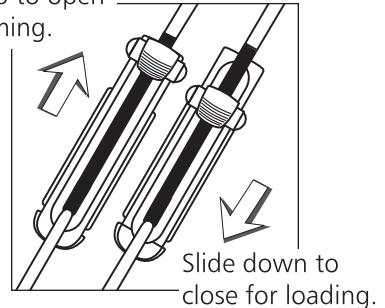


Preparing an Infusion (Continued)

Loading Primary Administration Set


- Slide AccuSlide® Flow Regulator thumb clamp down until an audible "click" verifies it is in fully closed position.

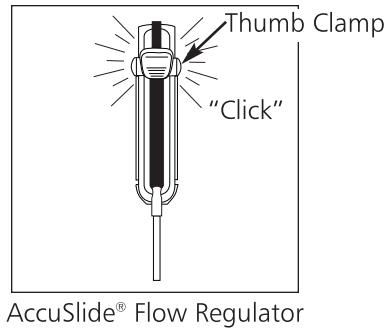

- Using both hands, press top and bottom of AccuSlide® Flow Regulator into instrument until it snaps into place.
 - Verify three gray "fingers" (clamp arms) on each side of pumping mechanism have engaged AccuSlide® Flow Regulator.
 - Let go of set. A properly loaded set should stay in instrument.

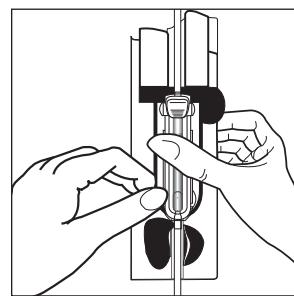


- Press firmly just below blue thumb clamp on AccuSlide® Flow Regulator with one hand while using other hand to close latch fully to left.
 - If resistance is met while closing latch, remove set, verify AccuSlide® Flow Regulator is fully closed and then reinstall set.
 - Verify thumb clamp has moved to open (up) position prior to starting infusion.

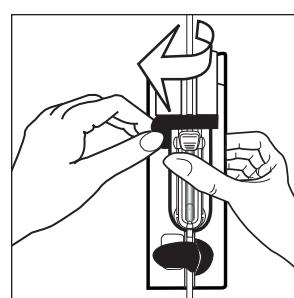

WARNING

After set installation, verify no fluid is flowing through the administration set's drip chamber, to avoid free-flow.

- Attach set to patient's vascular access device.
- Verify flow from IV container after starting infusion.

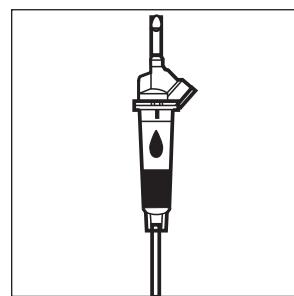

Start-Up

1. To turn channel on, press **POWER**.
 - Instrument performs a self test.
 - All indicators and displays momentarily light.
 - An audio tone sounds.

WARNING

Each time the instrument is turned on verify and/or set the monitoring mode, resistance alert and/or pressure alarm limit. If the monitoring mode, resistance alert and/or pressure alarm limit are not verified, the instrument may not be operating with the desired occlusion detection parameter(s).

CAUTION

Appearance of lines and/or dots that remain on constantly when the device is powered on may indicate improper functioning of the Main LCD Display. Although the instrument is functioning properly, return it to qualified service personnel.

- System start-up page is momentarily displayed.

NOTE: "XX.XX" in the illustrated start-up page represents the current software revision.




- Hold indicator flashes.
-
- When self test is complete, **NEW PATIENT?** screen appears.
2. To retain previous infusion parameters, press **no** soft key.

NOTE: Infusion parameters (rate, VTBI, etc.) are retained in memory unless all power is lost (no AC and a depleted battery).

OR

To clear all infusion parameters from memory, press **yes** soft key.

- Primary setup page is displayed and instrument is ready for programming.

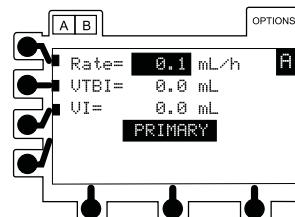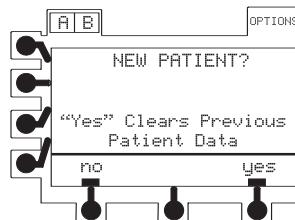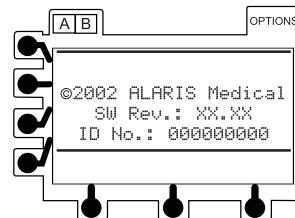

Primary Infusion


1. Follow "Start-Up" steps.
 - Primary setup page appears.
 - Primary infusion rate is highlighted.
2. If current primary infusion rate is appropriate, press **[ENTER]**.

OR

To enter a new infusion rate, use numeric keypad.

Press **[ENTER]**.

- Primary VTBI is highlighted.

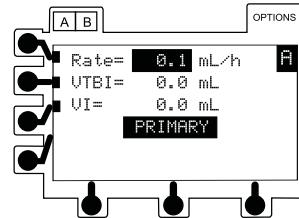


3. If current primary VTBI is appropriate, press **[ENTER]**.

OR

To enter a new VTBI, use numeric keypad. Press **[ENTER]**.

- VI is highlighted.

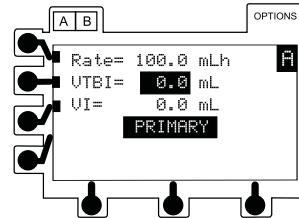


NOTE: If the flow sensor option is in use, VTBI can be turned OFF by selecting VTBI, pressing **[CLEAR]** and then **[ENTER]**.

OR

The primary VTBI can be deleted from the primary mode setup page (Configurable Options).


4. If there is a VI value that needs to be cleared, press **[CLEAR]** or 0 (zero key). Press **[ENTER]**.

- If cleared, volume infused is reset to 0.0 mL.

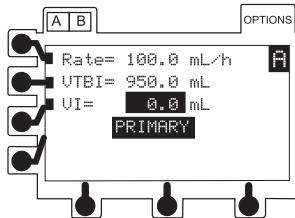

5. To start primary infusion, verify programming parameters and then press channel's **[RUN HOLD]**.

- Channel's infusing indicators light.
- After starting infusion, verify flow from IV container.

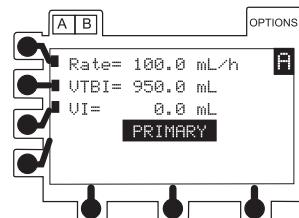


NOTE: Prerun prompts may appear if the start-up procedures were not completed. Refer to the "Alarms, Alerts and Prompts" section of this document to determine the appropriate action.

Primary Infusion (Continued)


Making Changes During Primary Infusion

Select the desired channel (A/B), as necessary. The channel does not need to be on hold to change the settings for Rate or VTBI, or to clear the VI.

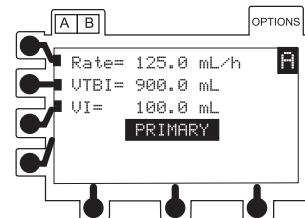

1. Press soft key next to parameter to be edited.
 - Current value is highlighted.

Changing Primary Infusion Rate

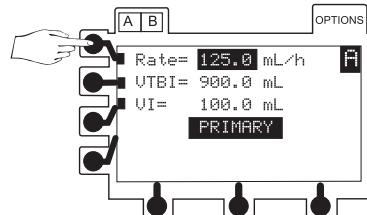


NOTE: If the flow sensor option is in use, VTBI can be turned OFF by selecting VTBI, pressing [CLEAR] and then [ENTER].

OR

The primary VTBI can be deleted from the primary mode setup page (Configure Options).


2. To enter a new value, use numeric keypad.
3. To accept new value, press [ENTER].

Change Primary VTBI

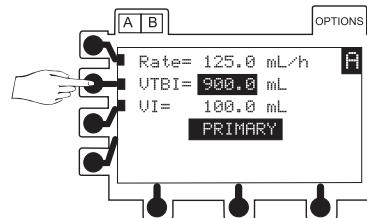

Clearing Volume Infused

1. Press VI soft key.
 - Current value is highlighted.
2. To reset volume infused to 0.0 mL, press [CLEAR] or 0 key.
3. To accept new value, press [ENTER].

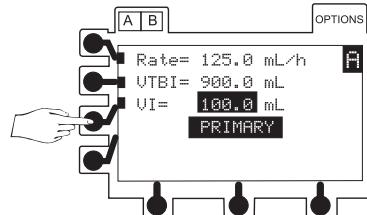


Primary Infusion (Continued)

Resuming an Interrupted Primary Infusion

- Follow "Start-Up" steps and select **NEW PATIENT?** - no.

*NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, **NEW PATIENT?** screen does not appear.*


- Primary infusion page appears.
- Verify all settings are correct. If a change is required, refer to "Making Changes During Primary Infusion" section.
 - To resume primary infusion, press **RUN HOLD**.

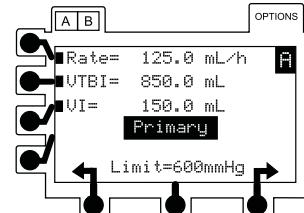

KVO Mode

The KVO (keep-vein-open) mode automatically occurs when the primary VTBI has counted down to 0.0 mL. The channel switches to the preset KVO rate or remains at the current rate, whichever is less.


- KVO rate is flashing in rate LED display. Main LCD Display continues to show programmed infusion rate.
- KVO flashes in infusion status bar.
- KVO alert tone sounds. Press audio volume key to adjust.
- VTBI = 0** (7130/7230) or **INFUSION IN KVO** (7131/7231) message flashes and alert tone continues until channel is placed on hold.

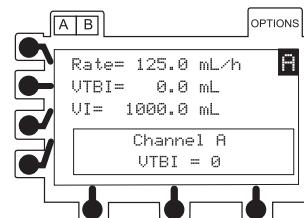

Resuming Primary Operation from KVO

Select the desired channel, as necessary.


- To place channel on hold, press channel's **RUN HOLD**.
- Press **VTBI** soft key.
 - Primary VTBI is highlighted.
- To enter a new VTBI, use numeric keypad.

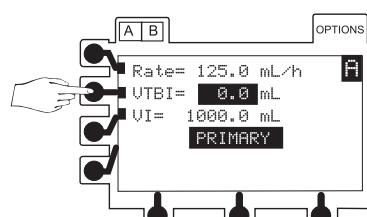

KVO Mode (Continued)

Resuming Primary Operation from KVO (Continued)

4. To accept new value, press **ENTER**.
5. To resume primary infusion, press channel's **RUN HOLD**.

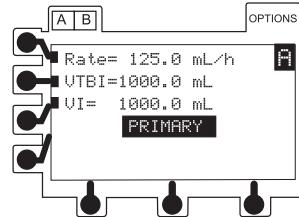


Secondary Infusion

This mode is designed to support automatic secondary infusions ("piggybacking") in the same instrument channel. When the secondary VTBI reaches zero, a transition tone will sound (if the transition tone feature is enabled), **Secondary Complete** message will be displayed for a few seconds and the primary settings will automatically take effect. Both channels of a dual channel instrument can be programmed for primary and secondary operation.

When the device is programmed and delivering in the secondary mode, the primary infusion is temporarily stopped and fluid is drawn from the secondary container. Delivery from the primary container resumes when the fluid level in the secondary line is level with the fluid in the primary container.

NOTES:

- Prepare the secondary container and set. Lower the primary container using the hanger included with the secondary set. If a flow sensor is being used, it must be placed on the primary line.
- The maximum rate for a secondary infusion is 270 mL/h.
- The flow sensor is not used for the first 25 mL delivered when changing from secondary to primary. This is to account for overfill of secondary containers.

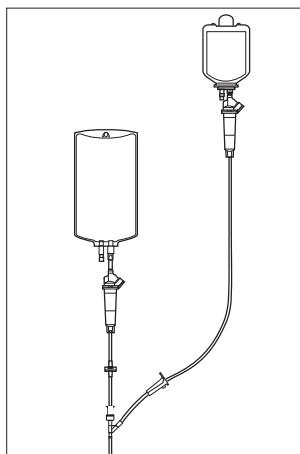

WARNING

- Secondary applications require the use of a check valve set on the primary IV line.
- The secondary solution container must be higher than the primary solution container.
- The secondary VTBI settings require consideration of such variables as factory overfill, medication additions, etc. Underestimating the volume will cause the remaining secondary solution to be infused at the primary rate; overestimating will result in the primary solution being infused at the secondary rate. Multiple doses from a single container are not possible.
- The clamp on the secondary set must be opened. If the clamp is not opened, the fluid will be delivered from the primary container.
- The secondary set must be primed prior to beginning the secondary infusion.


Secondary Infusion (Continued)

- Follow "Start-Up" steps.
 - Primary setup page appears.


NOTE: If programming a secondary from a running primary, place the channel on hold and then proceed.

- Verify primary settings are appropriate.

- Press **SEC**.
 - Secondary setup page appears.
 - Secondary infusion rate is highlighted.

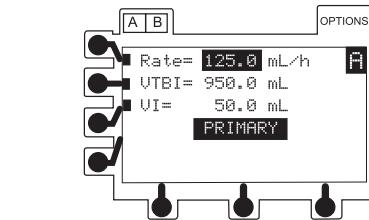**CAUTION**

Do not access the secondary key until first confirming the primary program.

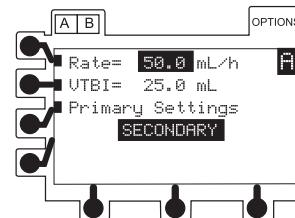

- If current secondary infusion rate is appropriate, press **ENTER**.

OR

To enter a new infusion rate, use numeric keypad. Press **ENTER**.


- Secondary VTBI is highlighted.

NOTE: The maximum rate for a secondary infusion is 270 mL/h.


- If current secondary VTBI is appropriate, press **ENTER**.

OR

To enter a new VTBI, use numeric keypad. Press **ENTER**.

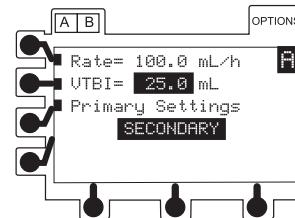

- To start secondary infusion, press channel's **RUN HOLD**.
 - Channel's infusing indicators light.
 - When secondary infusion is complete, instrument automatically switches to primary infusion parameters.

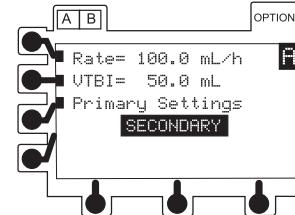


Secondary Infusion (Continued)

Making Changes During Secondary Infusion


Select the desired channel, as necessary. The channel does not need to be on hold to change the settings for Rate or VTBI.

1. Press soft key next to parameter to be edited.
 - Current value is highlighted.

Changing Secondary Infusion Rate

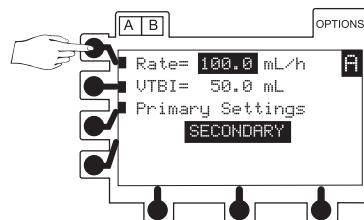

Changing Secondary VTBI

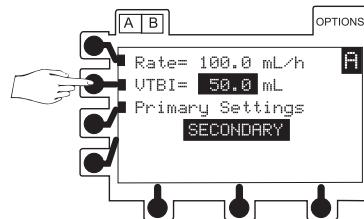



2. To enter a new value, use numeric keypad.
3. To accept, press **ENTER**.

Viewing or Changing Primary Settings During Secondary Infusion

Select desired channel, as necessary.

1. Press **Primary Settings** soft key.
 - Primary rate (**Pri Rate**), primary volume to be infused (**Pri VTBI**) and total volume infused (**Total VI**) are displayed.
 - Display returns to normal secondary page after six seconds.
2. Press soft key for **Pri Rate**, **Pri VTBI** or **Total VI** to:
 - “freeze” display
 - highlight value

Changing Primary Infusion Rate

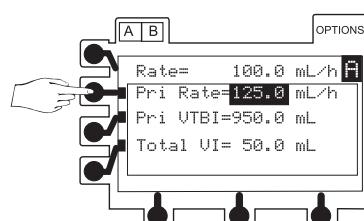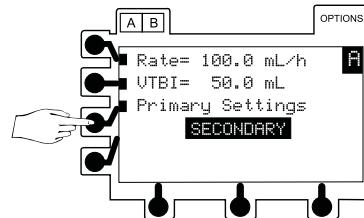

Secondary Infusion (Continued)

Viewing or Changing Primary Settings During Secondary Infusion (Continued)


NOTE: If the flow sensor option is in use, VTBI can be turned OFF by selecting VTBI, pressing **CLEAR** and then **ENTER**.

OR

The primary VTBI can be deleted from the primary mode setup page (Configurable Options).


3. To enter new value(s), use numeric keypad.
4. To accept new value(s), press **ENTER**.

Changing Primary VTBI

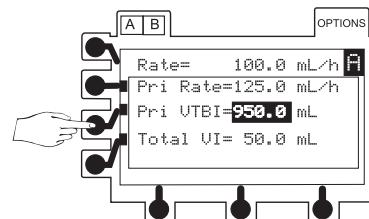

Clearing Volume Infused

1. Press **Total VI** soft key.
 - Current value is highlighted.
2. To reset volume infused to 0.0 mL, press **CLEAR** or 0 (zero key).
3. To accept new value, press **ENTER**.
 - Display returns to normal secondary page after six seconds.


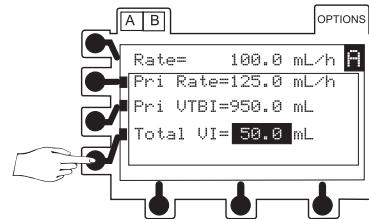


Resuming an Interrupted Secondary Infusion

1. Follow "Start-Up" steps and select **NEW PATIENT?** - no.


NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, **NEW PATIENT?** screen does not appear.

- **Return To Secondary?** appears.
2. Press **yes** soft key.
- NOTE:** Pressing **no** soft key returns screen to primary infusion page.
- Secondary infusion page appears.
3. Verify all settings are correct. If a change is required, refer to "Making Changes During Secondary Infusion" section.
 4. To resume secondary infusion, press **RUN HOLD**.

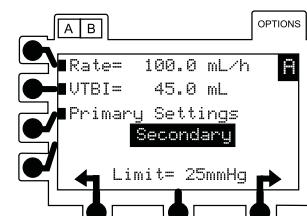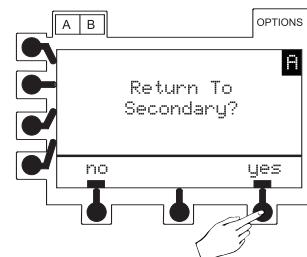



Changing Primary Solution Container

1. Place channel on hold.
2. Remove empty solution container.
3. Spike new container.
 - Ensure drip chamber is filled to 2/3 full.
4. Press VTBI soft key.
5. To enter a new VTBI, use numeric keypad. Press **ENTER**.
6. To restart infusion, press channel's **RUN HOLD**.

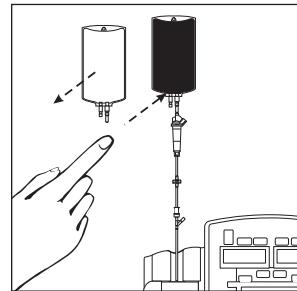

Unloading Set

1. Place channel on hold.
2. Open latch.
 - AccuSlide® Flow Regulator automatically closes to prevent accidental free-flow.
3. Press latch fully to right.
 - Set is ejected from instrument.

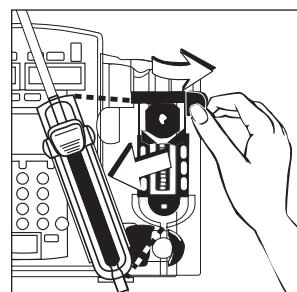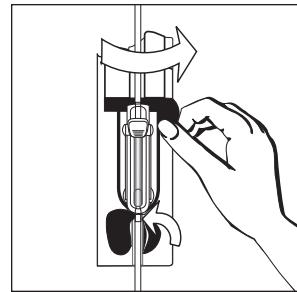

WARNING

To prevent free-flow, verify the AccuSlide® Flow Regulator is closed when the set is removed from the instrument.

CAUTION


Do not attempt to force the set from the instrument. Send the instrument to qualified service personnel.

Unloading Set (Continued)

4. Whenever instrument is not in use, close latch(es).
5. Turn off power, as necessary.

Powering Off

Press and hold channel's **POWER** until display turns off.

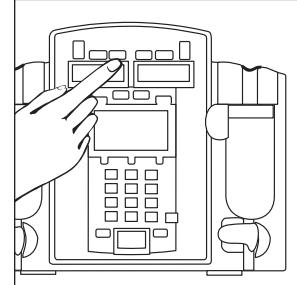


Air-in-Line and Accumulated Air-in-Line

The Air-in-Line Detection System provides clinicians the ability to detect inappropriate amounts of air in the IV line. The instrument is configurable to allow single bubble or accumulated air detection. Accumulated air detection is based on measurement of the average percentage produced by small air bubbles passing the detector.

Air is detected by an emitter (Air-in-Line arm) which rotates into position as the latch is closed. A receiver (Air-in-Line Detector), opposite the arm and just below the Pumping Mechanism, sends the Air-in-Line information to the main processor.

Qualified biomedical personnel may configure one of four possible sensitivity levels. The instrument is also configurable to permit the operator to clear (reset) any air registered in the instrument's memory.



NOTE: Ensure that the tubing is properly inserted into the air detector to avoid false alarms. The tubing may be reshaped to ensure optimum contact with the sensors. Periodically clean the Air-in-Line Detector to ensure a clear signal can be received (refer to "Cleaning" section of this document).

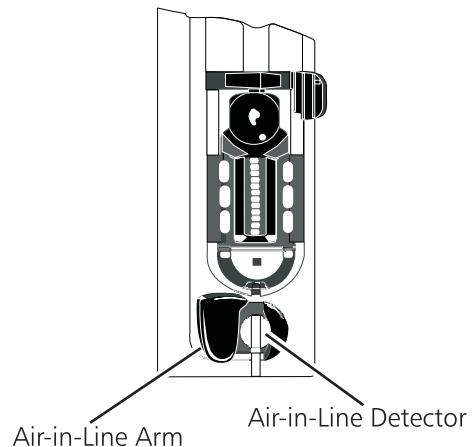

Air-in-Line and Accumulated Air-in-Line (Continued)

Single or Accumulated Air Bubble Detection (NO Reset Feature)

1. To place channel on hold, press **hold** soft key.

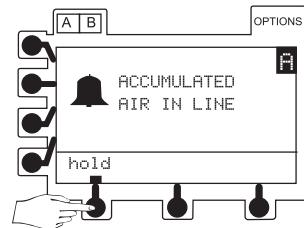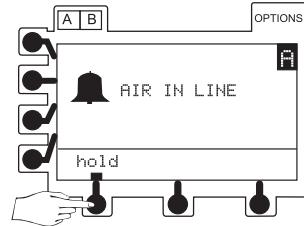

2. Remove air per hospital protocol.



NOTE: Opening the latch or turning the channel off will clear air memory.

3. To resume infusion, reinstall set and then press **RUN HOLD**.



Single or Accumulated Air Bubble Detection (Reset Feature Available)

If air volume is clinically insignificant, press **reset** soft key or **RUN HOLD** key, followed by **run** soft key or **RUN HOLD** key to resume infusion.

- Subsequent air bubbles trigger alarm.

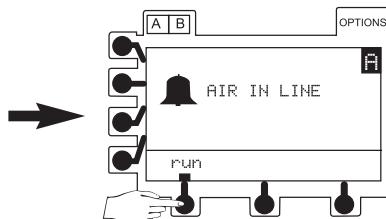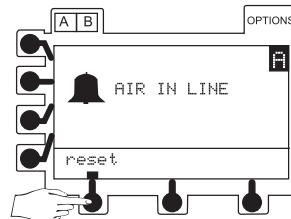

OR

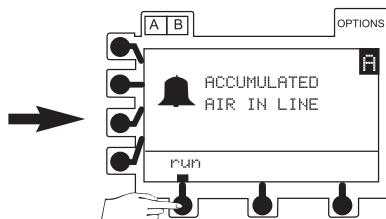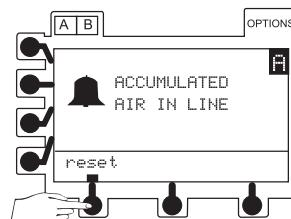

Alarms, Alerts and Prompts

There are three types of displayed messages. The messages are listed alphabetically on the following pages, with a probable cause and suggested remedy next to each one. Use this section in conjunction with the appropriate clinical practice or hospital procedure.

ALARM: instrument or channel problem.

- infusion stops
-  icon illuminates
- alarm tone sounds
- rate LED display flashes
- message appears in Main LCD Display



ALERT: may indicate a change in infusion status.

- channel continues to operate
- alert tone sounds
- message appears in Main LCD Display

PROMPT: infusion status not changed.

Start-up procedures were not completed or an invalid key was pressed.

NOTE: When using the dual channel instrument, some messages will also display "Channel A" or "Channel B", to indicate which channel is affected. Always verify the channel is selected before making any changes.

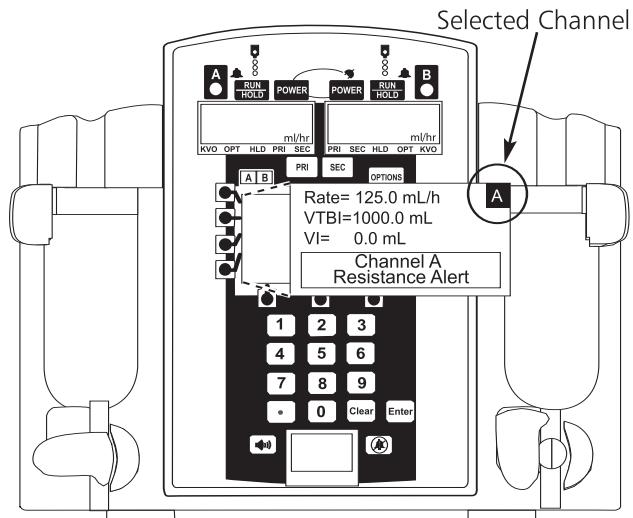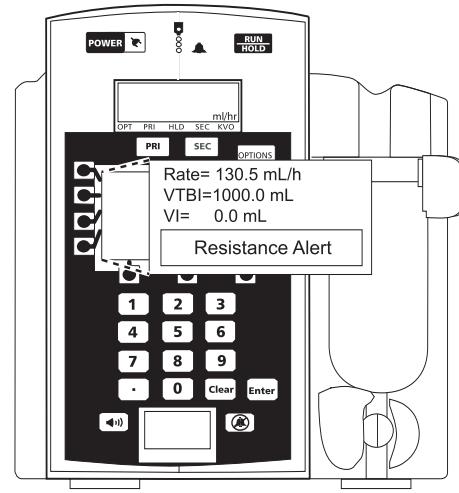

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
ACCUMULATED AIR IN LINE Alarm hold soft key active	Air detector has detected multiple small bubbles. Air-in-Line Reset feature is off.	Press hold soft key. Open latch to remove set. Clear air per hospital protocol. Reinstall set. Press to resume infusion.
ACCUMULATED AIR IN LINE Alarm reset soft key active	Air detector has detected multiple small bubbles. Air-in-Line Reset feature is on.	Ensure air-in-line sensors are thoroughly cleaned. Refer to "Cleaning" section in this document for further instructions.
Air In Line Prompt	Air detector has detected air prior to starting infusion or is in poor contact with set.	Evaluate air in set. Remove air. If air bubbles are clinically insignificant, press reset soft key and then press run soft key to resume infusion.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
AIR IN LINE Alarm hold soft key active	Air detector has detected an air bubble larger than configured threshold tolerance. [C O] Air-in-Line Reset feature is off.	Press hold soft key. Open latch to remove set. Clear air per hospital protocol. Reinstall set. Press [RUN HOLD] to resume infusion. At flow rates of 1.0 mL/h and below, verify upstream fluid path is unobstructed. Ensure air-in-line sensors are thoroughly cleaned. Refer to "Cleaning" section in this document for further instructions.
AIR IN LINE Alarm reset soft key active	Air detector has detected an air bubble larger than configured threshold tolerance. [C O] Air-in-Line Reset feature is on.	Evaluate air in set. Remove air. If air bubbles are clinically insignificant, press reset soft key and then press run soft key to resume infusion. At flow rates of 1.0 mL/h and below, verify upstream fluid path is unobstructed. Ensure air-in-line sensors are thoroughly cleaned. Refer to "Cleaning" section in this document for further instructions.
BATTERY DEPLETED (Plug In) Alarm	Battery is too low to operate instrument.	Plug power cord into an AC outlet immediately. Press run soft key or [RUN HOLD] to resume infusion.
Battery Low Alert	Battery has 30 minutes or less of charge remaining.	Plug power cord into an AC outlet as soon as possible.
Both A & B Not Running Prompt Dual channel instrument only.	[A B] was pressed, but both channels are not infusing.	Both channels must be infusing for split screen feature to operate.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
CHANNEL MALFUNCTION Alarm Dual channel instrument only.	Channel malfunction.	Turn channel off and then on. If problem persists, do not use channel. Contact qualified service personnel.
Channel Not On Prompt Dual channel instrument only.	Channel's  or  was pressed, but channel is not on.	Channel must be turned on to view or change settings.
Checking Line Alert	Flow has been obstructed.  Auto Restart Plus™ Feature is on.	Auto Restart Plus™ Feature must be on for downstream occlusion alerts (not required for upstream occlusion alerts). Check administration set for probable cause (kinked tubing, clogged filter, etc.).
Complete Entry Alert	 was not pressed to accept a new value.	Press  to confirm entry or press  twice to return to previous settings.
Complete or OK Setup Prompt	 was pressed before setup was completed or okayed.	Complete setup. Press ok soft key.
COMPUTER LINK FAILURE Alarm	RS-232 connection to computer was disrupted.  Computer Link feature is in monitor mode.	Check RS-232 connections. Clearing this alarm automatically puts instrument in monitor mode. Reestablish infusion.
Dose Complete Alert	A dose delivery has just been completed.  Multi-Dose Alert feature is on.	Channel will automatically switch to timer (). If Dose Complete Alert Option is activated, press cancel alert soft key to silence audio signal.
Dose Out of Range Prompt	Calculated dose is outside allowable range.	Verify and reenter settings.

NOTE: Channel will operate as previously programmed until  is pressed.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
Dose Rate Running Prompt	[PRI] or [SEC] was pressed while running in Dose Rate program.	Channel must be on hold to change modes.
Entry Invalid Prompt	An invalid value was entered during programming.	Press [CLEAR] or 0 key to clear entry. Enter appropriate value.
FLOW SENSOR UNPLUGGED  Alarm	Flow sensor is unplugged from back of instrument.	Plug flow sensor into flow sensor receptacle.
HOLD TIME EXCEEDED  Alarm	Channel has been on hold for two minutes and no keys have been pressed (on either channel if dual channel).	Press hold soft key to return to hold mode.
INFUSION IN KVO (7131/7231) Alert	VTBI has counted down to zero. Channel is in KVO mode.	Put channel on hold to reenter a primary VTBI. Change solution container, if necessary. OR Terminate infusion.
INSTRUMENT MALFUNCTION  Alarm	Instrument malfunction. For a dual channel instrument, neither channel is functional.	Turn instrument off and then on. If problem persists, do not use instrument. Contact qualified service personnel.
Instrument Self-Check Is Due Please Eject the Set Prompt	Instrument/channel has not performed self-check within programmed interval.	If set is loaded: Eject set, wait five seconds and then reload set. If <u>no</u> set is loaded: Load set, wait one minute and then eject set. Wait five seconds and then reload set.
Invalid Entry Rate Out of Range Prompt	Instrument has calculated a rate less than 0.1 mL/h.	Verify and reenter settings.
KEY STUCK  Alarm	A key is stuck or was held down too long.	Release key. Turn instrument off (both channels if dual channel instrument) and then on. If problem persists, do not use instrument. Contact qualified service personnel.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
LATCH OPEN  Alarm	Latch was opened during an infusion.	Check for proper set installation. Close latch. Press run soft key.
LATCH OPEN Prompt	Latch is open (prior to starting an infusion).	Close latch fully to left.
Load Dose Complete Alert	Loading Dose program has just been completed.	Channel will automatically switch to primary infusion.
Load Dose Running Prompt	PRI or SEC was pressed while running in Loading Dose program.	Channel must be on hold to change modes.
Maintenance Reminder Prompt	Periodic maintenance interval has elapsed. C O Maintenance Reminder feature is on.	Notify Biomedical Engineering department. If desired, press continue soft key to temporarily bypass reminder.
Max Rate = XXX.X mL/h Prompt	User has attempted to enter a rate greater than maximum configured rate or instrument has calculated a rate greater than maximum configured rate. C O Default maximum rate is 999.99 mL/h.	Verify and reenter settings.
NOTE: XXX.X represents the maximum flow rate configured for the instrument.		NOTE: In the secondary mode, the maximum flow rate will be 270 mL/h or the maximum configured rate, whichever is less.
Multi-Dose Running Prompt	PRI or SEC was pressed while running in Multi-Dose program.	Channel must be on hold to change modes.
Multi-Step Complete Alert	Multi-Step program has just been completed.	Channel will automatically switch to KVO infusion.
Multi-Step Running Prompt	PRI or SEC was pressed while running in Multi-Step program.	Channel must be on hold to change modes.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
New Baseline Set Prompt	A new Manual Pressure Baseline has successfully been set.  Manual Pressure Baseline feature is on.	Baseline will remain set until a new manual baseline is set, instrument is turned off or latch has been opened.
No Numeric Entries Prompt	A numeric key was pressed during nonnumeric selection.	Wait several seconds for popup to finish. Press ok soft key to approve all displayed information. OR Press  soft key to view available unit selections.
NO UPSTREAM FLOW DETECTED  Alarm	Flow has been obstructed between container and instrument when using a flow sensor.	Check to see if container is empty, flow sensor is mispositioned or clouded, tubing is kinked or air vent is closed. Verify correct set connections and open fluid path. Press run soft key to restart infusion.
NOTE: Infusing fluids which form smaller drops through a 60 drops/mL set at high rates may result in a "No Upstream Flow Detected" alarm. (This is because the small, rapidly falling drops form a continuous stream which does not trigger the flow sensor). In this event, unplug the flow sensor from the instrument.		
OCCLUSION DOWNSTREAM  Alarm	Pressure in IV line has exceeded a pressure alarm threshold. OR Resistance has reached 100%.	Check administration set for probable cause (kinked tubing, closed stopcock, high resistance catheter, etc.). Press run soft key to restart infusion.
Occlusion Downstream Prompt	A very high pressure exists in fluid line while baseline is being set.  Pressure Baseline feature is on.	Remove source of high pressure and repeat setting of pressure baseline.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
OCCLUSION UPSTREAM  Alarm	Flow has been obstructed between fluid container and instrument.	Check administration set for probable cause (kinked tubing, closed clamp, etc.). Press run soft key to restart infusion. (See "Detection of Upstream Occlusion" section for more information.)
Ok Entry Prompt	User has attempted to go to another page before pressing ok soft key.	Verify selection and press ok soft key.
Panel Locked Prompt	A key was pressed.  Panel lock feature is on.	Turn panel lock off to access panel controls. Panel lock key is located behind handle.
Place on Hold to Change Prompt	A key was pressed during KVO.	Channel must be on hold to make changes.
Place on Hold to Set Pressure Baseline Prompt	SET PRESSURE BASELINE function has been selected while running.  Pressure Baseline feature is on.	Place instrument on hold before performing manual SET PRESSURE BASELINE operation.
Press and Hold Key to Turn Off Prompt	POWER was pressed.	Press and hold POWER until display turns off.
Pressure Limit XXX mmHg Prompt	An elevated pressure was present in fluid path when pressure baseline was established. This may reduce maximum available pressure range.	Reload delivery set and verify no obstruction exists which could cause excess pressure. <ul style="list-style-type: none">• If Pressure Baseline feature is on, repeat manual setting of pressure baseline. <p style="text-align: right;">OTHERWISE</p> <ul style="list-style-type: none">• Restarting infusion will automatically set pressure baseline
Pressure Limit Must Be Less Than or Equal to XXX mmHg Prompt	User has attempted to increase pressure alarm limit to a level higher than configured maximum pressure.	Choose a pressure alarm limit that is less than, or equal to, configured maximum pressure.
NOTE: XXX represents the configured maximum pressure.		

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
Pressure Unstable Cannot Set Baseline Prompt	Excessive variation in pressure due to motion, flow from other instruments or blood pressure prevents accurate setting of pressure baseline. C_O Pressure Baseline feature is on.	Reduce or temporarily remove sources of variation while performing manual baseline setting operation.
PRIMARY FLOW DETECTED DURING SECONDARY  Alarm	Instrument detected flow from primary container during secondary infusion. NOTE: <i>Alarm can only occur when using optional flow sensor.</i>	Verify: • Flow sensor is on primary line. • Primary set has check valve. • Secondary infusion is complete (underfilled solution container). • Secondary set fluid path is not blocked. • Secondary settings are correct. Press run soft key to restart infusion.
Pri Running Prompt	PRI or SEC was pressed while channel was running in primary mode.	Channel must be on hold to change modes.
Program Lost Re-Enter Settings Prompt	Instrument detected a memory or power failure. Existing operating parameters have been erased.	Press continue soft key and reenter all infusion settings. NOTE: <i>Configurable options are not affected.</i>
Rate Out of Range Prompt	Instrument has calculated a rate less than 0.1 mL/h.	Verify and reenter settings.
Resistance Alert Alert	IV line resistance has reached preset alert level. C_O Resistance Alert feature is on.	Check downstream line and site. Raise resistance alert level, if appropriate.
Return To Dose Rate? Prompt	Channel was turned off during a Dose Rate program. NEW PATIENT? - no was selected during start-up.	Press yes soft key to return to Dose Rate program or press no soft key to return to primary setup page.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
Return To Loading Dose? Prompt	Channel was turned off during a Loading Dose program. NEW PATIENT? - no was selected during start-up.	Press yes soft key to return to Loading Dose program or press no soft key to return to primary setup page.
Return To Multi-Dose? Prompt	Channel was turned off during a Multi-Dose program. NEW PATIENT? - no was selected during start-up.	Press yes soft key to return to Multi-Dose program or press no soft key to return to primary setup page.
Return To Multi-Step? Prompt	Channel was turned off during a Multi-Step program. NEW PATIENT? - no was selected during start-up.	Press yes soft key to return to Multi-Step program or press no soft key to return to primary setup page.
Return To Secondary? Prompt	Channel was turned off during secondary infusion. NEW PATIENT? - no was selected during start-up.	Press yes soft key to return to secondary mode or press no soft key to return to primary setup page.
Secondary Complete Alert	Secondary delivery has just been completed.	Channel will automatically switch to primary infusion settings.
Sec Running Prompt	PRI or SEC was pressed while channel was running in secondary mode.	Channel must be on hold to change modes.
Select Channel Prompt Dual channel instrument only.	A key was pressed but no channel has been selected.	Press A or B and then continue with editing.
Set Must Be Loaded Prompt	The AccuSlide® Flow Regulator segment is not loaded in selected channel during a manual pressure baseline setting operation. C O Pressure Baseline feature is on.	Load the AccuSlide® Flow Regulator segment in selected channel. Repeat manual pressure baseline setting.
Set Out Prompt	The AccuSlide® Flow Regulator segment is not installed correctly.	Reinstall the AccuSlide® Flow Regulator segment.

Alarms, Alerts and Prompts (Continued)

MESSAGE	PROBABLE CAUSE	REMEDY
SET OUT  Alarm	Set has been removed during an infusion.	Reinstall set. Press run soft key.
Set Pressure Baseline Prompt	Set Pressure Baseline has been selected in options mode.	Press ok soft key to set Pressure Baseline or press return soft key to go to Primary Setup page.
Set Pri VTBI Prompt	A primary VTBI was not programmed.	Enter a primary VTBI.
Set Pri VTBI > Loading Dose VTBI Prompt	Loading Dose VTBI entered is greater than primary VTBI.	Raise primary VTBI or lower Loading Dose VTBI, as appropriate.
SETUP TIME EXCEEDED  Alarm	Instrument has been turned on but no keys have been pressed for ten minutes.	Press hold soft key to return to hold mode. Instrument will turn off if left in alarm more than five minutes. If an audio alarm remains on, turn instrument on and then off.
Stop Timer to Change Prompt	An invalid key was pressed while timer was running in Multi-Dose program.	Wait several seconds for popup to finish. Press stop timer soft key to make changes.
Time Out of Range Prompt	Programmed step time exceeds 24 hours and 59 minutes, or is less than one minute.	Verify and reenter settings.
Timer Running Prompt	PRI or SEC was pressed while timer was running in Multi-Dose program.	Wait several seconds for popup to finish. Press stop timer soft key to make changes.
VTBI = 0 (7130/7230) Alert	VTBI has counted down to zero. Channel is in KVO mode.	Put channel on hold to reenter a primary VTBI. Change solution container, if necessary. OR Terminate infusion.

THIS PAGE
INTENTIONALLY
LEFT BLANK

NOTE: All features and options are shown enabled in this section.
The optional features illustrated may not have been enabled on the instrument.

Dynamic Monitoring® System

The Dynamic Monitoring® System provides the clinician the ability to monitor downstream pressure or resistance, allowing rapid detection of full and partial occlusions. Resistance monitoring eliminates the impact of patient elevation and flow rate to provide the most direct assessment of patency.


Components of this system are:

- **Monitoring Options:** to select IV line/site monitoring modes of resistance, high resistance, and adjustable or fixed pressure.
- **Auto Restart Plus Feature:** allows instrument to automatically resume operation when specific instrument operating conditions are met.
- **Adjustable Resistance Alert:** to provide an early warning of increases in downstream flow resistance.
- **Adjustable Pressure Alarm:** to provide an early warning of increases in downstream pressure.
- **Trend Graph:** to display downstream pressure or flow resistance over time.
- **Pressure Baseline:** to provide a starting point from which to measure changes in system pressure.

Monitoring Options - General

IV lines, catheters, and applications create various levels of resistance to flow. Monitoring mode options are available to meet each clinical need.

- **Resistance:** designed to monitor IV line/site resistance providing optimum sensitivity for most IV applications.
- **High Resistance:** designed to monitor IV line/site resistance with optimum sensitivity where higher resistance catheters are used.

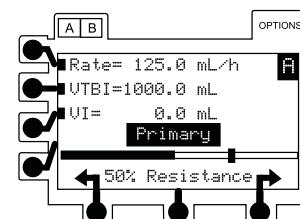


Resistance Monitoring

Dynamic Monitoring® System (Continued)

C Monitoring Options - General (Continued)

- **Adjustable Pressure:** designed to monitor IV line/site pressure and provide user adjustable pressure alarm limits. Used for Precision Flow mode or for high resistance systems; such as, infusion through transducers, into dialysis systems and through highest resistance catheters.
- **Pressure:** designed to monitor IV line/site pressure and alarm based on a fixed pressure limit.

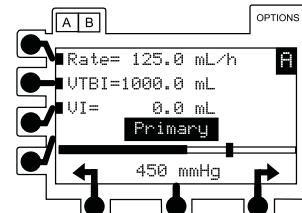




Pressure Monitoring

NOTE - Precision Flow: in fixed and adjustable pressure modes, the Signature Edition® Pump provides enhanced flow continuity at rates below 50 mL/h.

Selecting Monitoring Option

NOTE: For dual channel instruments, select the desired channel as necessary. The bar graph and numeric displays are not available when the split screen is displayed.

1. Press **[OPTIONS]**.
 - Options page appears.
2. Press **Monitoring Options** soft key.
 - Monitoring Options page appears.
3. Press soft key for **Resistance**, **High Resistance** or **Adjustable Pressure**.

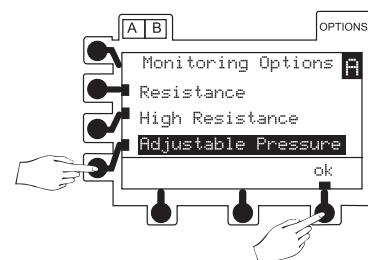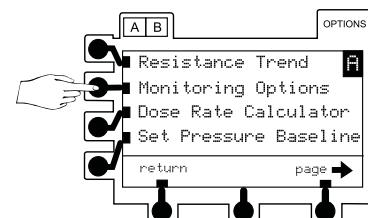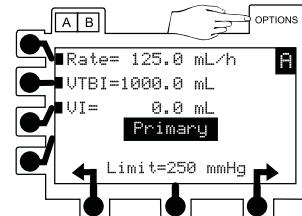

Dynamic Monitoring® System (Continued)

Monitoring Options - General (Continued)

4. Press **ok** soft key. Display automatically returns to normal operating screen.

NOTE: While the channel is on, the selected option, resistance alert and pressure alarm thresholds will remain in effect until changed by the operator.

- a. If **Resistance** option is selected, **% Resistance** displays below bar graph while infusing.

NOTE: Resistance alert limit may be adjusted using the soft keys located below the arrow symbols. (See "Resistance Alert" section.)

- b. If **High Resistance** option is selected, **% Hi Resist.** displays below bar graph while infusing.

NOTE: High Resistance alert limit may be adjusted using the soft keys located below the arrow symbols.

- c. If **Adjustable Pressure** option is selected, pressure system accuracy can be enhanced by ensuring no occlusion or other pressure source exists in IV line when activating




.

NOTES:

- Pressure alarm limits may be adjusted using the soft keys located below the arrow symbols. (See "Adjustable Pressure Alarm" section.)
- Maximum pressure limit settings may be configured by qualified service personnel.

WARNING



Each time the instrument is turned on, verify and/or set the monitoring mode, resistance alert and/or pressure alarm limit. If the monitoring mode, resistance alert and/or pressure alarm limit are not verified, the instrument may not be operating with the desired occlusion detection parameter(s).

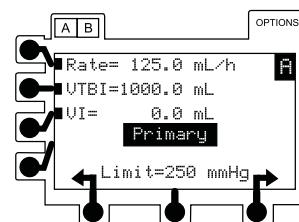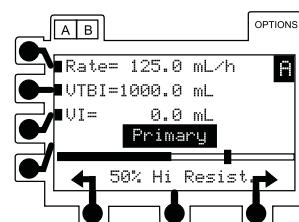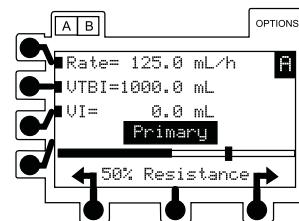


Monitoring Options - Resistance Mode

Detection of Downstream Occlusions

In the Resistance or High Resistance monitoring mode, a **RESISTANCE ALERT** condition occurs when the measured resistance reaches the alert limit.

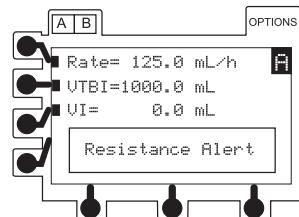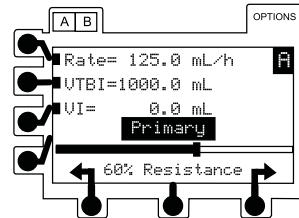



An **OCCLUSION DOWNSTREAM** condition is detected when the measured resistance reaches 100% of scale. For the Resistance mode, 100% results from a resistance producing 2 mmHg per mL/h of flow. For the High Resistance mode, 100% results from a resistance producing 6 mmHg per mL/h flow.

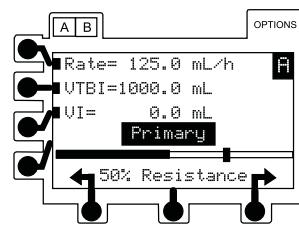

An **OCCLUSION DOWNSTREAM** condition will also be detected when the configured pressure limit is exceeded. This limit may be set, by qualified service personnel, from 1 mmHg to 600 mmHg ( Pressure Limit, Maximum).

When a Downstream Occlusion is detected, one of the following occurs:

- If Auto Restart Plus feature is on, instrument notifies clinician with a **Checking Line** message and audible tone. (See the following section, "Auto Restart Plus Feature", for further details.)
- If Auto Restart Plus feature is off, instrument notifies clinician with an **OCCLUSION DOWNSTREAM** alarm.

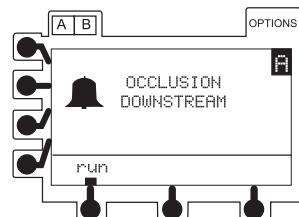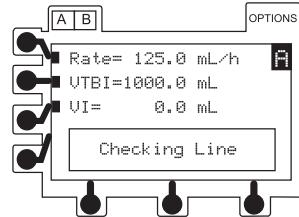

Resistance and High
Resistance Monitoring

Dynamic Monitoring® System (Continued)

Monitoring Options - Resistance Mode (Continued)

Auto Restart Plus Feature

The Auto Restart Plus feature provides the ability to automatically continue an infusion if downstream resistance or pressure measurements indicate that an occlusion condition has cleared within a 40-second **Checking Line** period (excluding High Resistance Monitoring Mode).

The **Checking Line** message and tone are presented when a resistance measurement exceeds the alarm threshold of 100%.

If resistance measurements initiate the **Checking Line** condition, the channel will continue infusing in order to determine if the measured flow resistance has changed. If the measured flow resistance falls to any value below 100% within 40 seconds, the channel will resume normal operating conditions automatically (excluding High Resistance Monitoring Mode).

Pressure measurements initiate the **Checking Line** period when the pressure exceeds the configured limit. If the pressure falls to less than one-third of the configured limit within 40 seconds, normal flow resumes. If the condition is not cleared, the **OCCLUSION DOWNSTREAM** alarm occurs and infusion is stopped until manually restarted.




Qualified service personnel can turn off this feature or program from one to nine **Checking Line** restarts. After the programmed number of restarts has occurred or the 40-second **Checking Line** period has been exceeded, the channel will immediately alarm **OCCLUSION DOWNSTREAM** when resistance or pressure conditions indicate an occlusion. The programmed number of restarts become available again when  or the soft key labeled run is pressed.

Resistance Alert

The Resistance Alert provides an early warning of increasing flow resistance. The Resistance Alert marker can be set from 0% to 100% of scale in 5% increments.

NOTE: To optimize the alert feature, it is advisable to set the alert level 20-30% higher than the initial displayed resistance. Read the resistance approximately two minutes after starting an infusion.

Qualified service personnel can turn this Alert feature on or off and set a power-on default alert level.

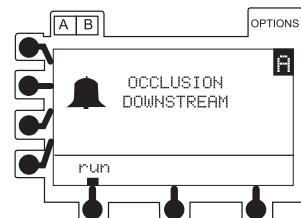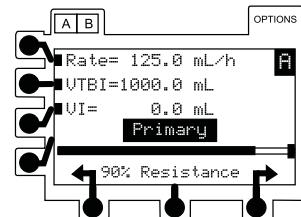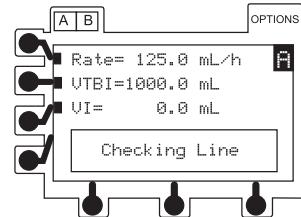



Dynamic Monitoring® System (Continued)

Resistance Alert (Continued)

Setting Alert Marker

To numerically display present alert level marker, press either  or  soft key. Vertical line on resistance bar graph visually indicates alert level.

- Each additional press of either arrow soft key increases or decreases alert level marker and numeric value by 5%.

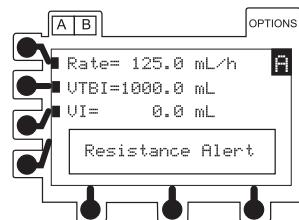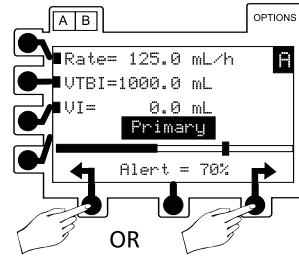

If Flow Resistance Exceeds Alert Level Marker


If flow resistance exceeds the alert level marker, a **Resistance Alert** message displays and an alert tone sounds. The channel will continue to infuse, and the message and tone will continue until one of the following occurs:

- Resistance of IV line/site falls below Alert level marker.
- Resistance Alert level marker is increased above current measured resistance value.
- Resistance rises to 100%, initiating a **Checking Line** or **OCCLUSION DOWNSTREAM** condition.

Resistance Trend Graphs

In Resistance and High Resistance monitoring modes, a trend graph displays flow resistance over time. Trend graphs of 15 minutes, 1 hour, 4 hours and 12 hours are available during normal operation. Qualified service personnel can turn this feature off or on.


Downstream Occlusions are indicated by a tick mark () at the top of the trend screen.

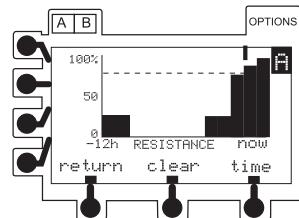

Viewing Resistance Mode Trend Graphs

NOTE: For dual channel instruments, select the desired channel, as necessary. The trend graph is not available while the split screen is displayed.

1. Press **[OPTIONS]**.
 - Options page appears.

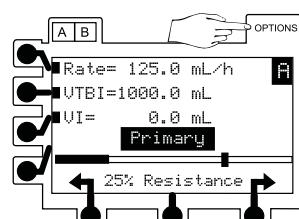


Dynamic Monitoring® System (Continued)

Resistance Trend Graphs (Continued)

Viewing Resistance Mode Trend Graphs (Continued)


2. Press **Resistance Trend** soft key.

- A trend graph appears.

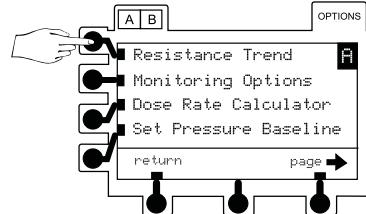


3. To change graph time frame, press **time** soft key.

- A dashed horizontal line represents current optional resistance alert level.
- Gaps in graph may indicate noninfusing conditions; such as, turned off, on hold, in alarm, etc.
- If channel has been placed in Pressure Monitoring mode for some portion of a trend graph window, resistance data is not available and zero values are plotted.
- A tick mark (|) at top of graph indicates an occlusion.

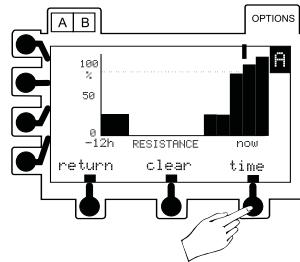


NOTE: When viewing Resistance Trend Graphs in the High Resistance mode, **HI RESIST** displays under the graph.

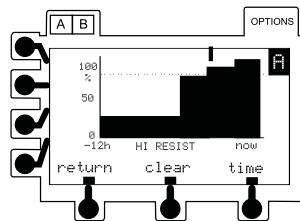


Clearing Resistance Trend Graphs

1. To clear graphed data, press **clear** soft key.

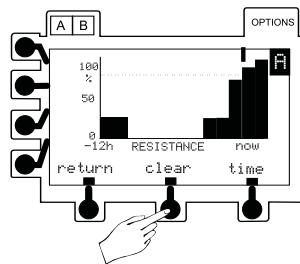

2. Press **ok** soft key.

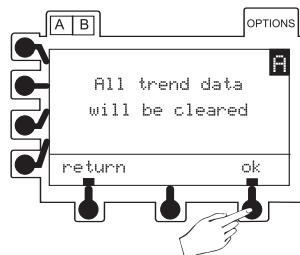


Dynamic Monitoring® System (Continued)

C Resistance Trend Graphs (Continued)

Clearing Resistance Trend Graphs (Continued)

- All data is cleared from graphs.

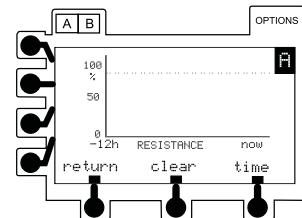



Returning to Normal Operating Screen

Press **return** soft key.

- Normal operating screen appears.

NOTE: Any of the following events will also turn off the trend graph.


- Pressing **A B** (dual channel instrument only).
- Pressing **RUN HOLD**.
- An alarm.
- Dual channel instrument Trend Graphs will disappear after one minute and be replaced with a split screen display if both channels are infusing.

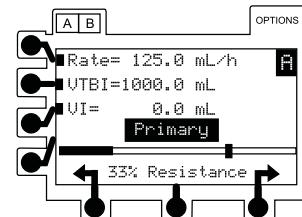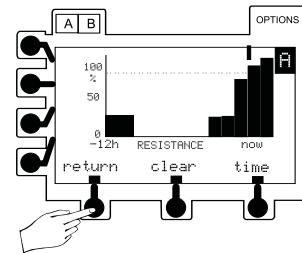

C Monitoring Options - Pressure Mode

Detection of Downstream Occlusions

When using the Adjustable Pressure monitoring mode, a pressure alarm limit may be selected, in 25 mmHg increments, from 25 mmHg to the maximum configured pressure limit. When measured pressure exceeds this level, an **OCCLUSION DOWNSTREAM** condition exists.

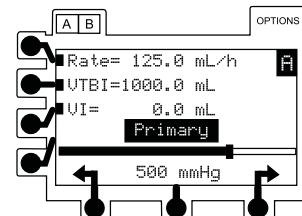



Dynamic Monitoring® System (Continued)

Monitoring Options - Pressure (Continued)

Detection of Downstream Occlusions (Continued)

When a Downstream Occlusion is detected, one of the following occurs:

- If Auto Restart Plus feature is on, instrument notifies clinician with a **Checking Line** message and audible tone. (See the following section, "Auto Restart Plus Feature", for further details.)
- If Auto Restart Plus feature is off, instrument notifies clinician with an **OCCLUSION DOWNSTREAM** alarm.

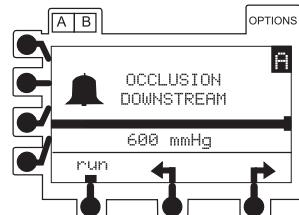
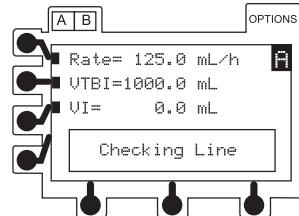


Auto Restart Plus Feature

The Auto Restart Plus feature provides the ability to automatically continue an infusion if downstream pressure measurements indicate that an occlusion condition has cleared within a 40-second **Checking Line** period (excluding High Resistance Monitoring Mode).

The **Checking Line** message and tone are presented whenever a pressure measurement exceeds the selected alarm threshold. If the pressure falls to less than one-third of the alarm limit within 40 seconds, normal flow resumes. The Adjustable Pressure mode allows the operator to control the pressure alarm limit. If the condition is not cleared, the **OCCLUSION DOWNSTREAM** alarm occurs and infusion is stopped until manually restarted.

Qualified service personnel can turn off this feature or program from one to nine **Checking Line** restarts. After the programmed number of restarts has occurred or the 40-second **Checking Line** period has been exceeded, the channel will immediately alarm **OCCLUSION DOWNSTREAM** when pressure conditions indicate an occlusion. The programmed number of restarts become available again when  or the soft key labeled run is pressed.

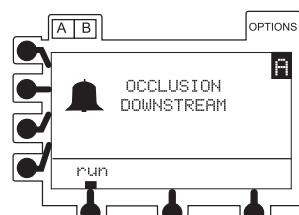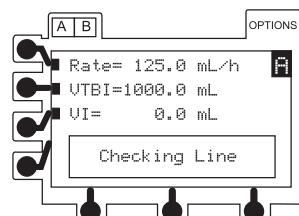

Adjustable Pressure Alarm


In the Adjustable Pressure monitoring mode, the pressure alarm limit may be varied from 25 mmHg to the maximum configured pressure limit, in 25 mmHg increments. Qualified service personnel can turn the adjustment feature on or off, set a default alarm level and set a maximum pressure limit.

Setting Alarm Limit Marker

To numerically display present alarm limit, press either  or  soft key.

- Each additional press of either arrow soft key changes alarm limit by 25 mmHg in corresponding direction.

NOTE: It is advisable to select an alarm limit appropriate for the flow rate. At lower flow rates, the alarm limit should be set lower, to shorten time to alarm.

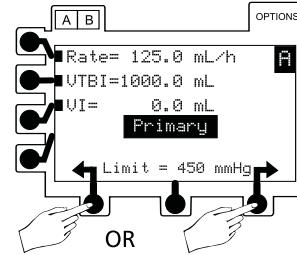

Pressure Monitoring Using Automatic Baseline Calibration

NOTE: The auto pressure baseline calibration will remain in effect until the instrument is turned off, the latch is opened, the set is reloaded, or the Set Pressure Baseline function is performed.

- First activation of  for a new infusion automatically establishes a pressure baseline based on current system pressure. Instrument maintains an optimal baseline upon subsequent activations of , as follows:
 - If current system pressure is same or higher than original baseline, pressure baseline will not change.
 - If current system pressure is less than original baseline, system will automatically reset to new system pressure value.
- Pressure measurement can be optimized, particularly at low flow rates (less than 3 mL/h), by pausing and restarting at least once every two hours (for example, when reprogramming VTBI). This allows pressure baseline to calibrate based on current system pressure.
- Prior to activation of , ensure that pressure has not built up in IV line due to either occlusion or flow from other instruments through a common catheter. This will result in a more accurate pressure measurement.

Dynamic Monitoring® System (Continued)

Adjustable Pressure Alarm (Continued)

Pressure Monitoring Using Automatic Baseline Calibration (Continued)

- When loading a set connected to a small diameter catheter, wait at least five seconds after loading set before activating . This allows pressure generated by loading process to dissipate and sensor to stabilize. (Very small PICC catheters; such as, 28 gauge/1.2 French, may require 60 seconds or more for stabilization.)
- When multiple instruments are infusing through a common small diameter catheter, pressure measurement accuracy can be optimized by temporarily stopping all infusions, then restarting all instruments beginning with instrument delivering at lowest rate.

Pressure Baseline

The Pressure Baseline feature provides a real-time bar graph and numeric display of line pressure. Qualified service personnel can turn this feature off or on.

NOTE: *The pressure limit may be reduced (clipped) if the pressure in the line is high or changing. This results in the pressure limit being lowered from the selected setting. If this occurs, first try to remove or reduce the downstream pressure. Following that, try to reload the set, wait 15 to 30 seconds and then perform a Set Pressure Baseline operation. The pressure baseline may need to be set a second time, after the pressure readings have stabilized. If this does not work, the set could be the cause of this clipping.*

Manually Setting Pressure Baseline While Operating in Adjustable Pressure Mode

NOTES:


- For dual channel instruments, select the desired channel as necessary. The pressure bar graph is not shown when the split screen display is active.
- For optimal results, set the baseline 15 minutes after starting an infusion. The pressure baseline can be optimized, particularly at low flow rates (less than 3 mL/h), by resetting the pressure baseline when the readings are negative. Check periodically for negative readings; for example, when programming VTBI. This allows the pressure baseline to calibrate based on current system pressure.

Dynamic Monitoring® System (Continued)


C_O Pressure Baseline (Continued)

Manually Setting Pressure Baseline While Operating in Adjustable Pressure Mode (Continued)

1. To place channel on hold, press channel's **RUN HOLD** key. (All infusions connected to the channel being base-lined must be on hold.)
2. Press **OPTIONS**.
 - Options screen appears

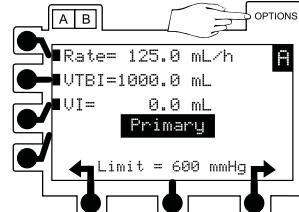


3. Press **Set Pressure Baseline** soft key.

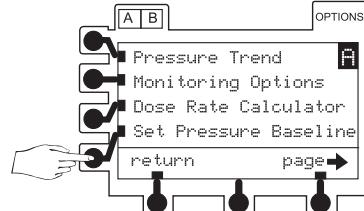

- Set Pressure Baseline screen appears.

NOTE: To return to the normal screen without setting the baseline, press **return** soft key.

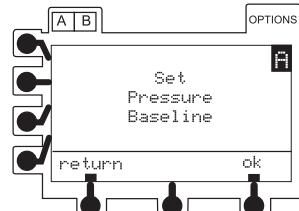

4. Verify no pressure, due to occlusion or other infusions through a common line, is present in IV line at this time.

NOTE: For best results, verify the outlet of the set (for example, stopcock) is located at the patient's heart level before continuing with the next step (pressing **ok** soft key to perform baseline).



Dynamic Monitoring® System (Continued)

^{CO} Pressure Baseline (Continued)

Manually Setting Pressure Baseline While Operating in Adjustable Pressure Mode (Continued)

5. Press **ok** soft key.
6. Verify pressure readout is zero (0) mmHg.


NOTE: True baseline pressure will be zero or within a few mmHg of zero. If not, and the pressure is unstable, allow the pressure to drop to the lowest level and then repeat the Set Pressure Baseline process.

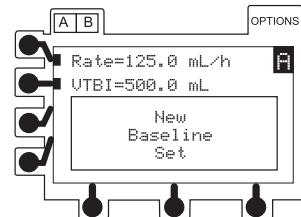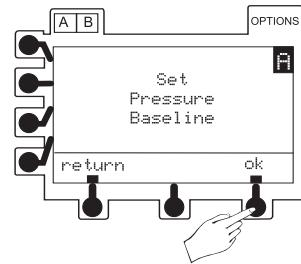

7. To start infusion, press **RUN HOLD**.

NOTES:


- The pressure baseline calibration will remain in effect until the instrument is turned off, the latch is opened, the set is reloaded, or the set Pressure Baseline function is performed again.
- Setting the manual baseline overrides the auto baseline until the instrument is turned off, the latch is opened, set is loaded, or another manual baseline is set.
- Setting a manual Pressure Baseline displays a horizontal real-time bar graph and numeric pressure readings. The vertical line on the pressure bar graph visually indicates the pressure alarm limit.

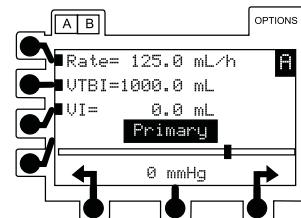

^{CO} Pressure Trend Graphs

In Pressure Monitoring mode, a trend graph displays monitored pressure over time. Trend graphs of 15 minutes, 1 hour, 4 hours and 12 hours are available during normal operation. Qualified service personnel can turn this feature off or on.

Downstream Occlusions, which occur in Pressure or Resistance modes, are indicated by a tick mark (|) at the top of the trend screen.

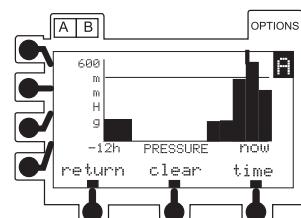


Dynamic Monitoring® System (Continued)

CO Pressure Trend Graphs (Continued)


Viewing Pressure Mode Trend Graphs

NOTE: For dual channel instruments, select the desired channel, as necessary. The trend graph is not available while the split screen is displayed.



1. Press **OPTIONS**.
 - Options page appears.

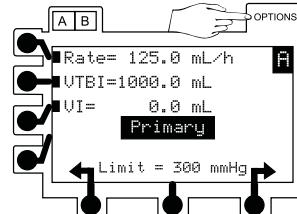

2. Press **Pressure Trend** soft key.
 - A trend graph appears.

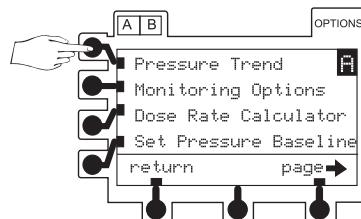

3. To change graph time frame, press **time** soft key.
 - A solid horizontal line represents current pressure alarm limit level.
 - Gaps in graph may indicate noninfusing conditions; such as, turned off, on hold, in alarm, etc.
 - If channel has been placed in a Resistance Monitoring mode for some portion of a trend graph window, pressure data is not available and zero values are plotted.

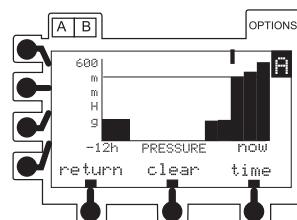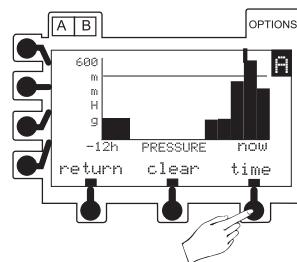


Dynamic Monitoring® System (Continued)


Pressure Trend Graphs (Continued)

Clearing Pressure Trend Graphs


- To clear graphed data, press **clear** soft key.

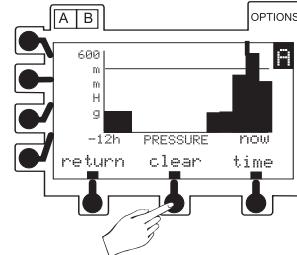

- Press **ok** soft key.

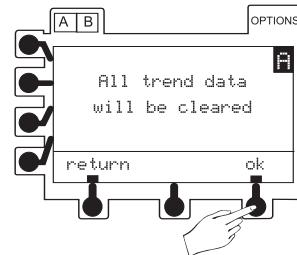


- All data is cleared from graphs.

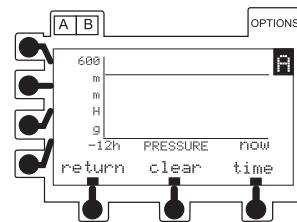

Returning to Normal Operating Screen


Press **return** soft key.

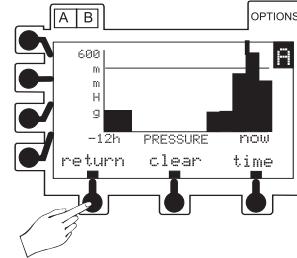

- Normal operating screen appears.

NOTE: Any of the following events will also turn off the trend graph.

- Pressing **A B** (dual channel instrument only).
- Pressing **RUN HOLD**.
- An alarm.
- Dual channel instrument Trend Graphs will disappear after one minute and be replaced with a split screen display if both channels are infusing.

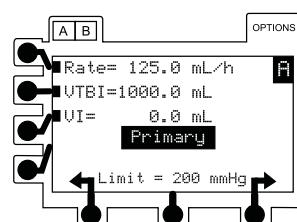


Detection of Upstream Occlusions

If the flow pathway between the fluid container and the AccuSlide® Flow Regulator is obstructed due to kinked tubing, a closed clamp or an improperly installed set, then an **OCCLUSION UPSTREAM** condition exists.

Depending on where the upstream path is occluded, flow may continue for a fraction of a mL before the **OCCLUSION UPSTREAM** alarm is produced. At high infusion rates, the instrument will take relatively little time to alarm. At low infusion rates, a longer time will elapse before the instrument detects the condition and alarms. In either case, some flow continues from the instrument during the time prior to the alarm, due to the elastic behavior of the tubing between the occlusion site and the pumping mechanism.

If an **OCCLUSION UPSTREAM** alarm does occur, investigate and remedy the cause. Ensure that the upstream flow path (tubing,etc.) is free of obstructions, that any clamp is open and that the blue flow control on the AccuSlide® Flow Regulator is in the open (up) position before resuming the infusion.

When the instrument detects an upstream occlusion condition, it will present the message **OCCLUSION UPSTREAM**, sound the audio alarm and stop infusion. In certain conditions, the upstream alarm system may briefly pause the instrument and present the **Checking Line** message for ten seconds to confirm or rule out the presence of an occlusion. If the occlusion condition is determined not to exist, flow will resume and no alarm is produced.

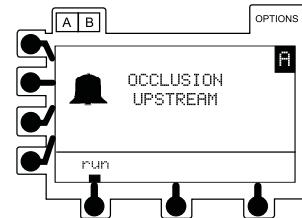

Drug Specific Dose Rate Calculator (DRC)

This feature allows the clinician to select a drug name to calculate a volumetric rate or a dose rate for continuous drug infusions and is based on parameters such as drug dosage, patient weight, concentration, etc. Once calculated, the instrument displays the drug name selected on the infusion screen. Generic calculation (**Drug?**) is provided for drugs not available on the drug list, or when **European** is selected as the Regional Setting.

When the DRC VTBI has counted down to 0.0 mL, the channel will switch to the preset KVO rate or remain at the current rate, whichever is less.

Qualified service personnel can turn the Dose Rate Calculator feature on or off.

CAUTION

Instruments with **European** selected as the Regional Setting do not have a drug list. When **Dose Rate Calculator** is chosen (from OPTIONS menu), followed by **Enter New Program**, the instrument goes directly to the generic dose rate calculation.

Drug Specific Dose Rate Calculator (DRC) (Continued)

Facts About DRC

- The patient weight, drug concentration and diluent volume cannot be changed while infusing. Changes to any of these items while on hold will recalculate the volumetric rate to maintain the dose rate.
- All drug names are generic. Dual channel instrument only: Drug names longer than ten letters scroll when displayed on the split screen.
- The **Drug?** selection can be used for calculating when a particular drug name is not available on the drug list.
- When a drug amount is greater than 10,000 units (Un), a K is used to indicate a value multiplied by 1,000 (for example, 1,000,000 = 1,000K).
- DRC cannot be used in conjunction with secondary or other operating modes.


WARNING

Ensure the correct entry of all drug calculation infusion parameters. References in this document to specific drugs and drug doses are for example only. Refer to specific drug product labeling for information concerning appropriate administration techniques and dosages.

Entering a New Program

Select the desired channel, as necessary. The channel must be infusing in the primary mode or on hold in the primary mode, secondary mode, or a Loading Dose program.



- Press **OPTIONS**.
 - Options page appears.

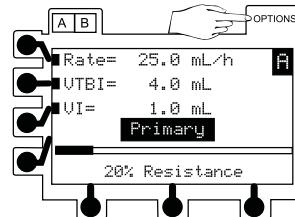

- Press **Dose Rate Calculator** soft key.

NOTE: For instruments with **European** selected as the  **Regional Setting**, proceed to step 3 of "Programming DRC When a Drug Name is Not Listed" section.


- DOSE RATE MENU appears.
- Press **Enter New Program** soft key.
 - An alphabetic preselection menu is displayed.

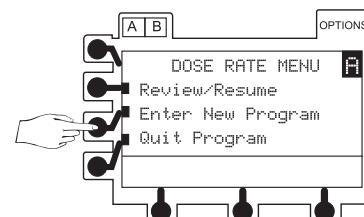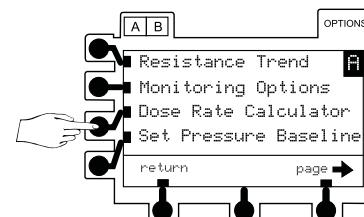


Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)

4. Press soft key corresponding to first letter of desired drug.
 - A list of drug names is displayed.

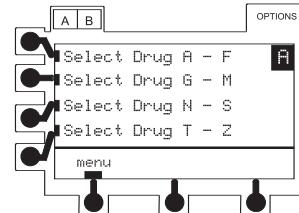


5. To view additional drug name selections, press **page** soft key.
 - If desired drug name is listed, proceed to "Programming DRC When a Drug Name is Listed" section.
 - If desired drug name is not listed, proceed to "Programming DRC When a Drug Name is Not Listed" section.

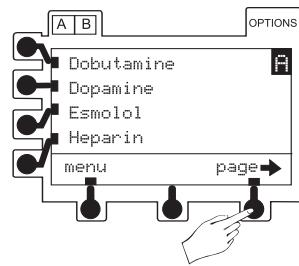


Programming DRC When a Drug Name is Listed

1. Press soft key next to a drug name to select it.
 - Appropriate dose units for selected drug are displayed. Dose units cannot be changed.

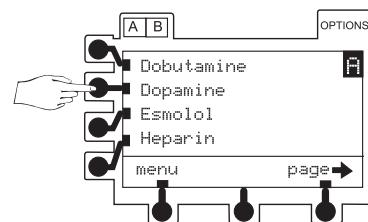

2. To approve all displayed information and advance to first setup page (see "Calculate Volumetric Rate"), press **ok** soft key.

OR (next step)

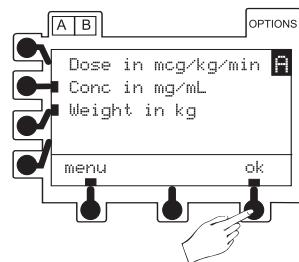


3. To change concentration, height, or weight units, press soft key next to a unit to select it.
 - Weight or height unit selections are displayed only if appropriate for drug selected.
 -  soft key appears.

Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)


Programming DRC When a Drug Name is Listed (Continued)

4. To scroll through units available, press and release  soft key. When correct unit is displayed, press .

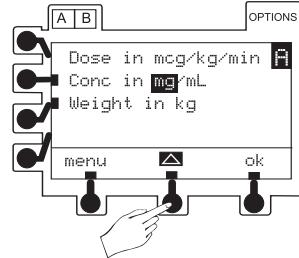


Concentration: mcg, mg, gm, Un, mUn, or mEq
Weight: kg or lb
Height: cm or inches

5. To approve all displayed information and advance to first setup page, press **ok** soft key.
- To calculate volumetric rate, proceed to "Calculating Volumetric Rate" section.
 - To calculate dose rate, proceed to "Calculating Dose Rate" section.

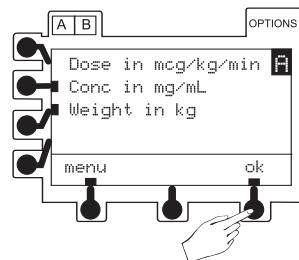


Programming DRC When a Drug Name is Not Listed

1. In alphabetic preselection menu, press soft key next to T - Z selection.

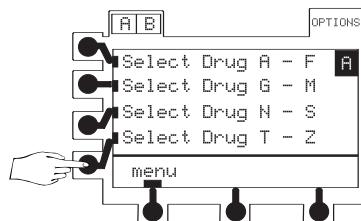

2. To use generic dose calculation feature, press **Drug?** soft key.
- Dose, concentration and weight units are displayed.
 - First segment is highlighted.

To approve all displayed information and advance to first setup page, press **ok** soft key at any time.

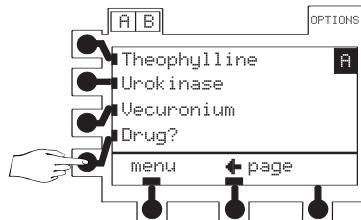

Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)

Programming DRC When a Drug Name is Not Listed (Continued)

3. If dose unit is appropriate, press **ENTER**.

OR


To scroll through units available, press and release **△** soft key. When correct unit is displayed, press **ENTER**.

Repeat this step for other two dose unit segments.

- Concentration unit is highlighted.

NOTES:

- If "--" is selected for the weight units, the weight field disappears.
- Day* is defined as continuous delivery for 24 hours per day.

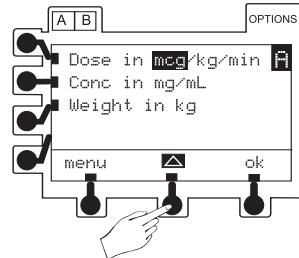

Dose Units:


- mcg, mg, gm, nan, mUn, Un, or mEq
- kg, m², or --
- min, h, or day*

4. If concentration unit is appropriate, press **ENTER**.

OR

To scroll through units available, press and release **△** soft key. When correct unit is displayed, press **ENTER**.

- Weight or height unit selections are displayed only if appropriate for dose unit selected.

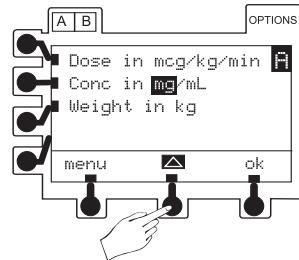


Concentration: mcg, mg, gm, Un, or mEq

5. If weight or height unit is appropriate, press **ENTER**.

OR

To scroll through units available, press and release **△** soft key. When correct unit is displayed, press **ENTER**.

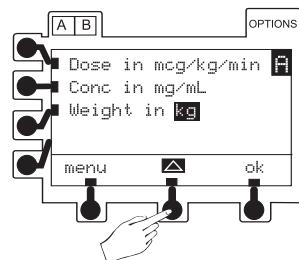


Weight: kg or lb
Height: cm or inches

 Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)



Programming DRC When a Drug Name is Not Listed
(Continued)

6. To approve all displayed information and advance to first setup page, press **ok** soft key.
 - To calculate volumetric rate, proceed to “Calculating Volumetric Rate” section.
 - To calculate dose rate, proceed to “Calculating Dose Rate” section.

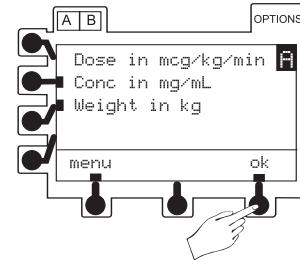


Calculating Volumetric Rate

1. To enter dose rate, use numeric keypad. Press **ENTER**.
 - Concentration is highlighted.

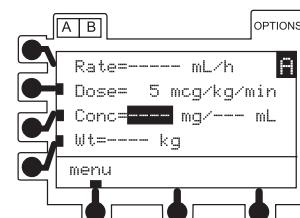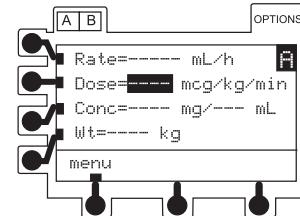

2. To enter desired value, use numeric keypad. Press **ENTER**.
 - Diluent volume is highlighted.

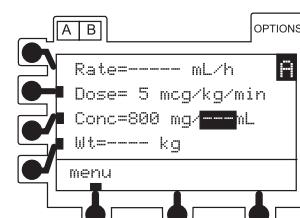

3. To enter diluent volume, use numeric keypad. Press **ENTER**.
 - If applicable, patient weight and/or height is highlighted.



Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)


Calculating Volumetric Rate (Continued)

4. To enter weight and/or height, use numeric keypad. Press **ENTER**.

- Instrument automatically calculates and displays volumetric infusion rate in mL/h.


NOTE: ↑↑↑↑ or ↓↓↓↓ appears if a calculated value is outside the display's range.

- Use soft key to highlight value to be edited.
- Use numeric keypad to enter value.
- Press **ENTER** to accept change.

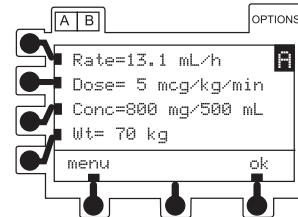


5. Verify all values and units. To approve all calculated and displayed information, press **ok** soft key.

NOTE: If the channel is running in the primary mode while setting up the calculation, proceed to the last step in this section.

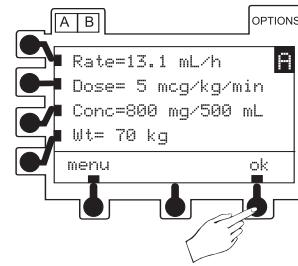

- Next setup page appears.
- VTBI is highlighted.

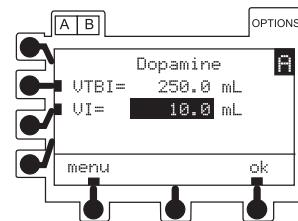


6. To enter VTBI, use numeric keypad. Press **ENTER**.

NOTE: If the flow sensor option is being used, Dose Rate VTBI can be turned off by selecting VTBI, then pressing **CLEAR**.

OR

Dose Rate VTBI can be deleted from VTBI/VI screen and main hold page ( Configurable Options).

- VI is highlighted.

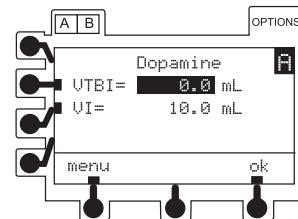


Drug Specific Dose Rate Calculator (DRC) (Continued)


Entering a New Program (Continued)

Calculating Volumetric Rate (Continued)

7. To clear VI, press **CLEAR** or 0 (zero key). Press **ENTER**.
8. To approve all displayed information and advance to main hold page, press **ok** soft key.

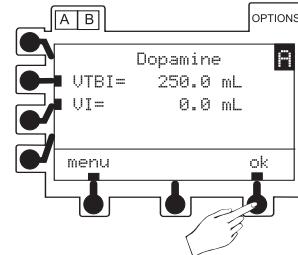


9. To start infusion, press **RUN HOLD** or **run** soft key.

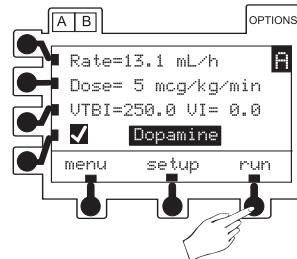


Calculating Dose Rate


1. To move highlight to volumetric rate, press **Rate** soft key. To enter rate, use numeric keypad. Press **ENTER**.

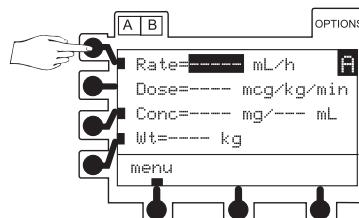

- Concentration is highlighted.

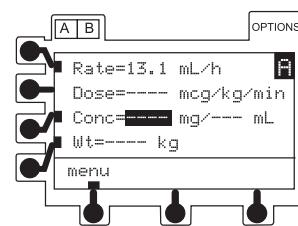

2. To enter concentration, use numeric keypad. Press **ENTER**.
 - Diluent volume is highlighted.

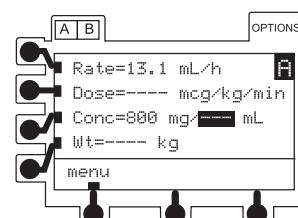


Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)

Calculating Dose Rate (Continued)

3. To enter diluent volume, use numeric keypad. Press **ENTER**.
- If applicable, patient weight and/or height is highlighted.

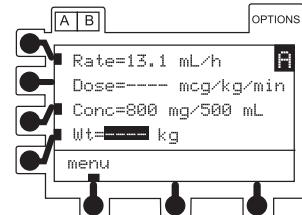


4. To enter weight and/or height, use numeric keypad. Press **ENTER**.

- Instrument automatically calculates and displays dose rate.

NOTE: ↑↑↑↑↑ or ↓↓↓↓↓ appears if a calculated value is outside the display's range.



- Use soft key to highlight value to be edited.
- Use numeric keypad to enter value.
- Press **ENTER** to accept change.

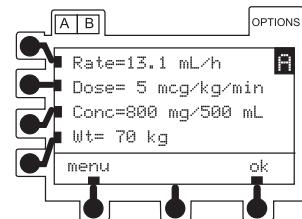

5. Verify all values and units. To approve all calculated and displayed information, press **ok** soft key.

NOTE: If the channel is running in the primary mode while setting up the calculation, proceed to the last step in this section.

- Next setup page appears.
- VTBI is highlighted.

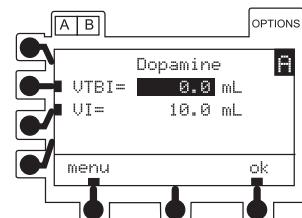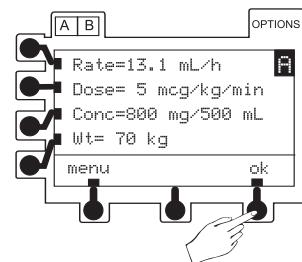

Drug Specific Dose Rate Calculator (DRC) (Continued)

Entering a New Program (Continued)

Calculating Dose Rate (Continued)



6. To enter VTBI, use numeric keypad. Press **ENTER**.

NOTE: If the flow sensor option is being used, Dose Rate VTBI can be turned off by selecting VTBI, then pressing **CLEAR**.

OR


Dose Rate VTBI can be deleted from VTBI/VI screen and main hold page ( Configurable Options).

- VI is highlighted.
7. To clear VI, press **CLEAR** or 0 (zero key). Press **ENTER**.
8. To approve all displayed information and advance to main hold page, press **ok** soft key.

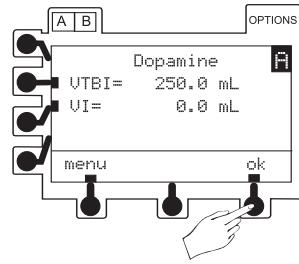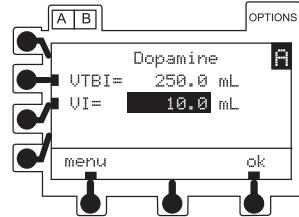

9. To start infusion, press **RUN HOLD** or **run** soft key.

NOTE: For instruments with **European** selected as the  Regional Setting, **Dose Calculator** is displayed as the channel label instead of the drug name or **Drug?**.

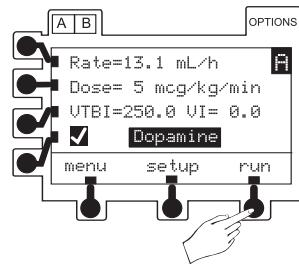

Making Changes During DRC Program

Select the desired channel, as necessary. The channel does not need to be on hold to change volumetric rate, dose rate, or VTBI, to clear the VI or to view more information.

NOTE: The instrument recalculates the program values if the volumetric or dose rate, drug amount, diluent volume, weight or height are changed.



Drug Specific Dose Rate Calculator (DRC) (Continued)

Making Changes During DRC Program (Continued)

Viewing More Information on Dose Rate Setup


Press **✓** soft key.

- Additional Dose Rate setup information is displayed for a short interval.

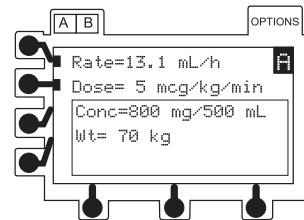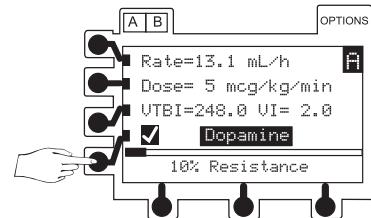

Changing Volumetric Rate or Dose Rate


- To highlight value, press **Rate** or **Dose** soft key.

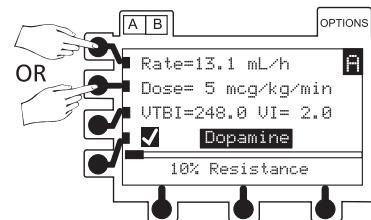

- To enter new value, use numeric keypad. Press **ENTER**.


- New/recalculated value takes effect as soon as **ENTER** is pressed.

NOTE: ↑↑↑↑↑ or ↓↓↓↓↓ appears in the dose field if rate titration causes the calculated dose value to be outside the display's range. Recheck the entered parameters.

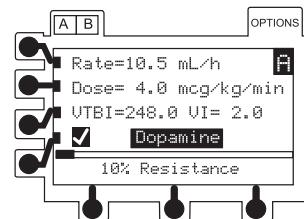

Changing VTBI

- To highlight value, press **VTBI** soft key.

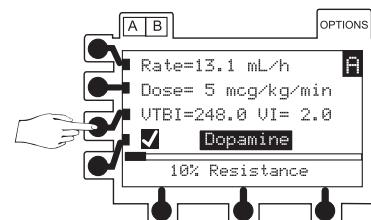

Drug Specific Dose Rate Calculator (DRC) (Continued)

Making Changes During DRC Program (Continued)

Changing VTBI (Continued)

- To enter new value, use numeric keypad. VI temporarily disappears. Press **ENTER**.

NOTE: If the flow sensor option is being used, Dose Rate VTBI can be turned off by selecting VTBI and then pressing

CLEAR.

OR


Dose Rate VTBI can be deleted from VTBI/VI screen and main hold page ( Configurable Options).

Clearing VI

- To move highlight to VI, press **VTBI** soft key twice.


OR

Press **VTBI** soft key and then press **ENTER**.

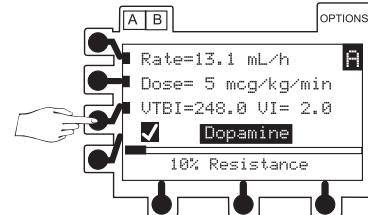

- Press **CLEAR** or 0 (zero key).
 - VTBI temporarily disappears and VI is highlighted.


Press **ENTER**.

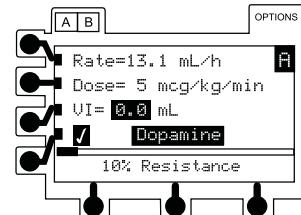

Changing Weight or Height

NOTE: Any change to the weight or height recalculates the volumetric rate to maintain dose rate.

- To place channel on hold, press **RUN HOLD**.
- To return to setup page, press **setup** soft key.

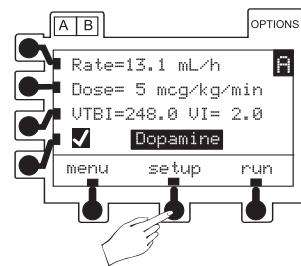


Drug Specific Dose Rate Calculator (DRC) (Continued)


Making Changes During DRC Program (Continued)

Changing Weight or Height (Continued)


- To highlight weight value, press **Wt** soft key once. To highlight **Ht**, press **Wt** soft key twice or press **Wt** soft key and then **ENTER**.

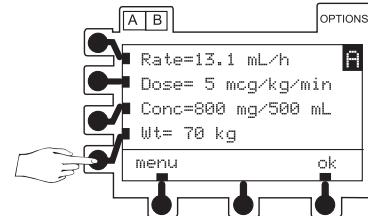

- To enter new value, use numeric keypad. Press **ENTER**.
 - Recalculated volumetric rate is displayed.
- To approve all displayed information and advance to main hold page, press **ok** soft key.

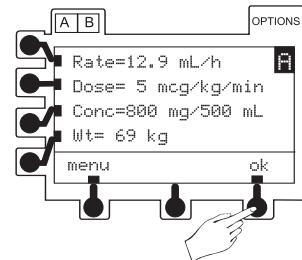


- To resume infusion, press **RUN HOLD** or **run** soft key.

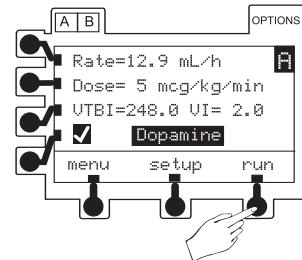

Changing Concentration

NOTE: Any change to the drug amount or diluent volume recalculates the volumetric rate to maintain dose rate.

- To place channel on hold, press **RUN HOLD**.
- To return to setup page, press **setup** soft key.

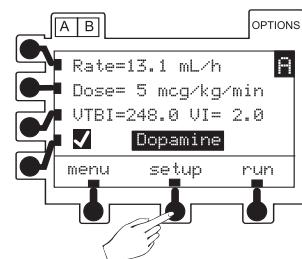


Drug Specific Dose Rate Calculator (DRC) (Continued)


Making Changes During DRC Program (Continued)

Changing Concentration (Continued)


3. To select concentration value, press **Conc** soft key once. To highlight diluent value, press **Conc** soft key twice, or press **Conc** soft key and then **ENTER**.

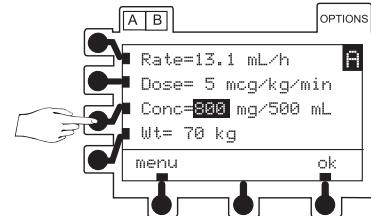


4. To enter new value, use numeric keypad. Press **ENTER**.
 • Recalculated volumetric rate is displayed.

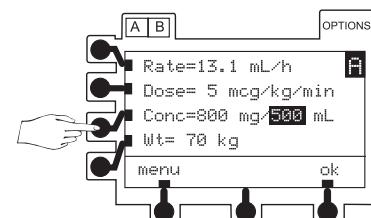

5. To approve all displayed information and advance to main hold page, press **ok** soft key.

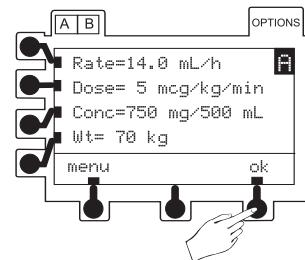

6. To resume infusion, press **RUN HOLD** or **run** soft key.

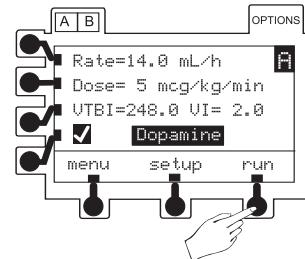

Drug Specific Dose Rate Calculator (DRC) (Continued)

Resuming an Interrupted DRC Program


The channel will retain its place in the program if the instrument is turned off.

1. Follow "Start-Up Sequence" steps and select **NEW PATIENT?** - **no**.


NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, **NEW PATIENT?** screen does not appear.

- **Return To Dose Rate?** page appears.
- 2. Press **yes** soft key.
 - Pressing **no** soft key returns screen to primary setup page. Verify settings prior to resuming an infusion.

3. To access setup parameters, press **Review/Resume** soft key.


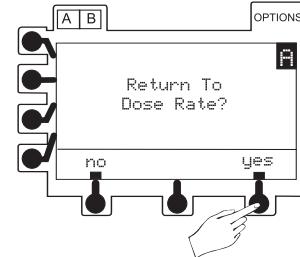


4. To verify drug being infused and advance through Dose Rate setup pages, press **ok** soft key.

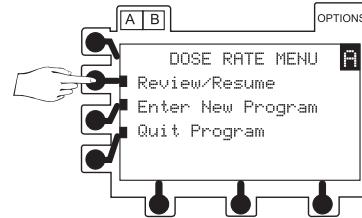

5. Verify all settings are correct. If a change is required, refer to "Making Changes During DRC Program" section.

6. To resume infusion, press **RUN HOLD** or **run** soft key.

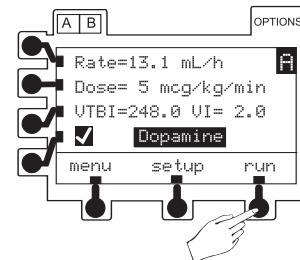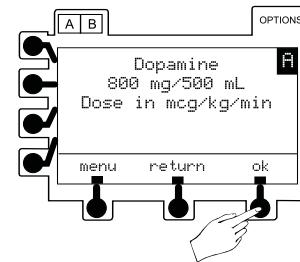


Drug Specific Dose Rate Calculator (DRC) (Continued)



Quitting DRC Program

The channel must be on hold.

1. Press **menu** soft key.

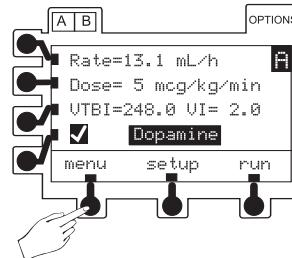

2. To return to primary setup page, press **Quit Program** soft key.

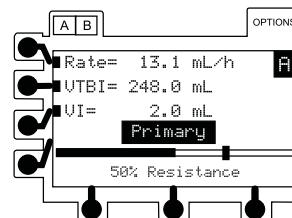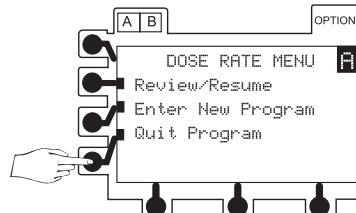

Multi-Step Program

This feature allows a sequential drug delivery program (up to nine steps) to be set, delivering volumes of fluid at different rates during each step. This allows the clinician to set up the instrument parameters once and deliver a step profile, eliminating the need to change the rate and VTBI after each step of the infusion.

The infusion may be programmed in either **Rate and Volume** or **Volume and Time**.

At completion of the last programmed step, the channel will switch to the preset KVO rate or remain at the current rate, whichever is less.



Qualified service personnel can turn the Multi-Step feature on or off.

Entering a New Program


Select the desired channel, as necessary. The channel must be on hold in the primary mode, secondary mode, or a Loading Dose program.

1. Press **OPTIONS**.
 - Options page appears.
2. Press **page** soft key.
 - Second options page appears.
3. Press **Multi-Step** soft key.
 - **MULTI-STEP MENU** appears.

4. Press **Enter New Program** soft key.
 - **PROGRAMMING OPTIONS** page appears.

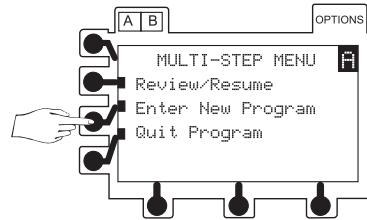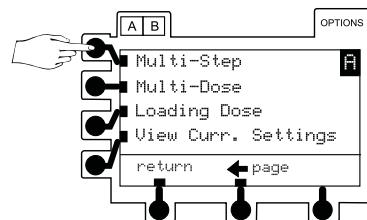


5. To select setup method, press a soft key.
 - If **Rate and Volume** is selected, instrument calculates step infusion time. Proceed to "Programming by Rate and Volume" section.
 - If **Volume and Time** is selected, instrument calculates rate. Proceed to "Programming by Volume and Time" section.

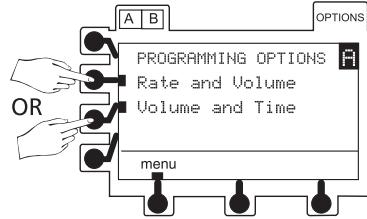


Programming by Rate and Volume

1. Press **Rate and Volume** soft key.

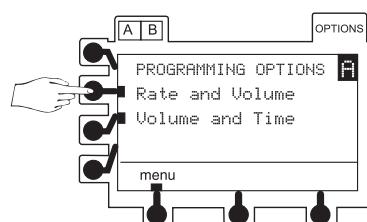

- **STEP 1** of infusion profile is displayed.
- Rate is highlighted.

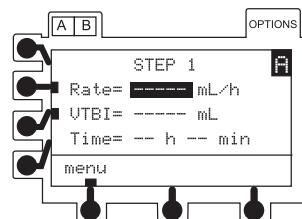


 Multi-Step Program (Continued)

Entering a New Program (Continued)

Programming by Rate and Volume (Continued)

2. To enter rate, use numeric keypad. Press **ENTER**.


- VTBI is highlighted.

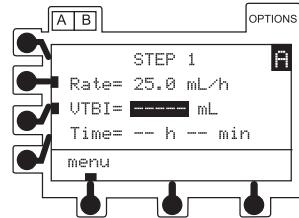

3. To enter VTBI, use numeric keypad. Press **ENTER**.

- Instrument automatically calculates and displays time in hours and minutes.


4. To approve all displayed information and advance to **STEP 2** of infusion profile, press **ok** soft key.

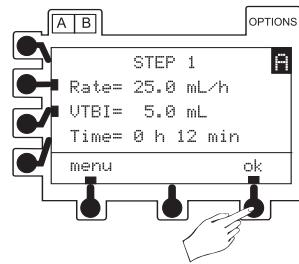


5. To set up each additional step of infusion profile, repeat steps 2 through 4.

6. When all steps have been entered and **ok'd**, press **done** soft key.

- Review page(s) display three profile steps at a time.

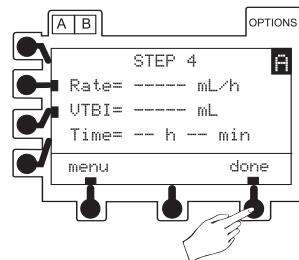


7. To approve and advance through review page(s), press **ok** soft key.

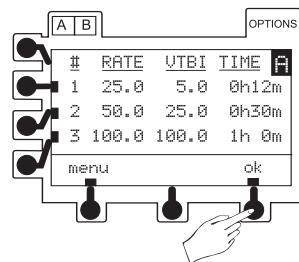

8. To clear VI, if desired, press **CLEAR** or 0 (zero key).

Press **ENTER**.

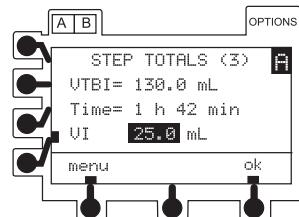


Multi-Step Program (Continued)


Entering a New Program (Continued)

Programming by Rate and Volume (Continued)

9. To approve **STEP TOTALS** page, press **ok** soft key.
 - Main hold page is displayed.

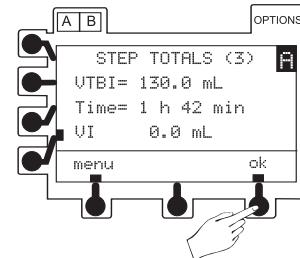


10. To start Multi-Step infusion program, press **RUN HOLD** or **run** soft key.

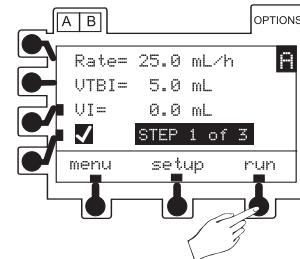


Programming by Volume and Time


1. Press **Volume and Time** soft key.

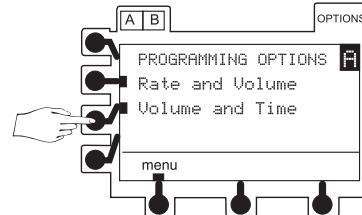

- **STEP 1** of infusion profile is displayed.
- VTBI is highlighted.

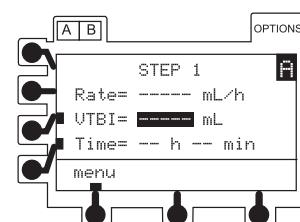

2. To enter VTBI, use numeric keypad. Press **ENTER**.
 - Time (hours) is highlighted.



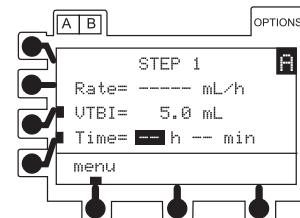


 Multi-Step Program (Continued)


Entering a New Program (Continued)

Programming by Volume and Time (Continued)

3. To enter hours, use numeric keypad. Press **ENTER**.
- Time (minutes) is highlighted.
-
4. To enter minutes (0-59), if desired, use numeric keypad. Press **ENTER**.
- Instrument automatically calculates and displays volumetric rate.
-
5. To approve all displayed information and advance to **STEP 2** of infusion profile, press **ok** soft key.
-
6. To set up each additional step of infusion profile, repeat steps 1 through 4.
-
7. When all steps have been entered and **ok'd**, press **done** soft key.
- Review page(s) display three profile steps at a time.

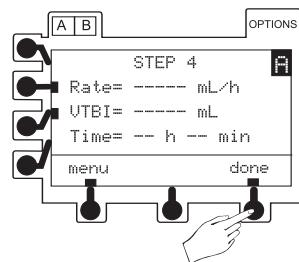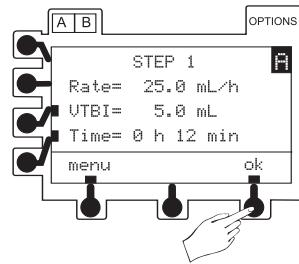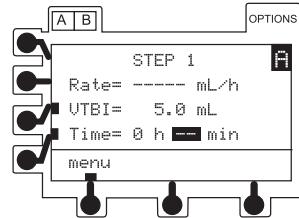

-
8. To approve and advance through review page(s), press **ok** soft key.

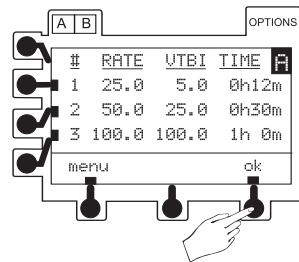

-
9. To clear VI, if desired, press **CLEAR** or 0 (zero key). Press **ENTER**.




Multi-Step Program (Continued)

Entering a New Program (Continued)


Programming by Volume and Time (Continued)

10. To approve **STEP TOTALS** page, press **ok** soft key.

- Main hold page is displayed.

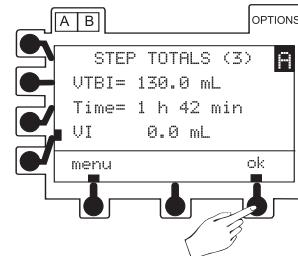

11. To start Multi-Step infusion program, press **RUN HOLD** or **run** soft key.

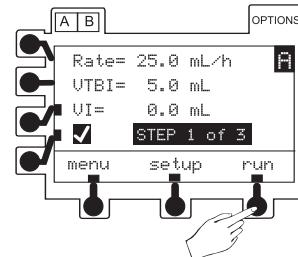


Making Changes During Multi-Step Program

Select the desired channel, as necessary. The channel does not need to be on hold to clear the VI or to view the totals remaining.

Clearing Volume Infused

1. Press **VI** soft key.

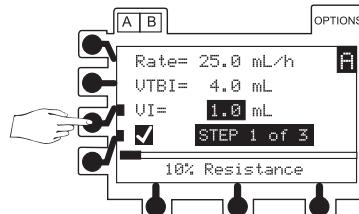

2. Press **CLEAR** or 0 (zero key).


3. Press **ENTER**.

Multi-Step Program (Continued)


Making Changes During Multi-Step Program (Continued)

Viewing Totals Remaining in Multi-Step Program

Press **✓** soft key.

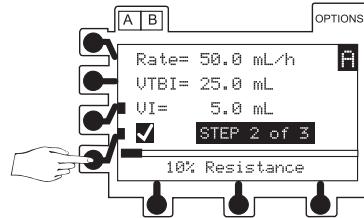

- Time and VTBI remaining in Multi-Step program are displayed for a short interval.

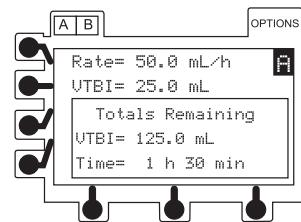



Viewing or Editing Multi-Step Program

The channel must be on hold to view or edit the steps in the program.


1. To place channel on hold, press **RUN HOLD**.

2. To return to review page(s), press **setup** soft key.

- A tick mark (■) next to a step on review page(s) indicates it has not started.
- Only steps having a ■ can be edited.
- Completed steps or a step in progress will not have a ■.
- A step number in progress is highlighted.

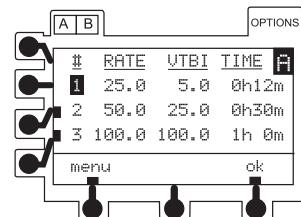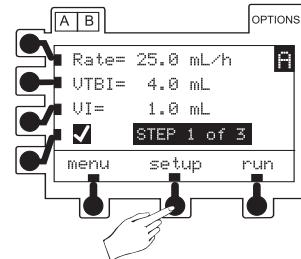

3. To advance through review page(s) of program, press **ok** soft key.

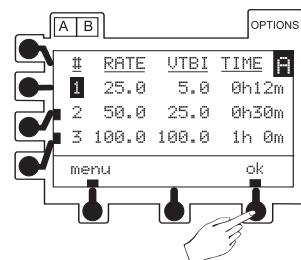


Multi-Step Program (Continued)

Making Changes During Multi-Step Program (Continued)

Viewing or Editing Multi-Step Program (Continued)


4. To select a step for editing, press a soft key.

- Step setup page is displayed.

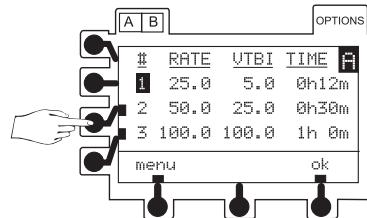


5. To select value for editing, press a soft key.


6. To enter new value, use numeric keypad. Press **ENTER**.

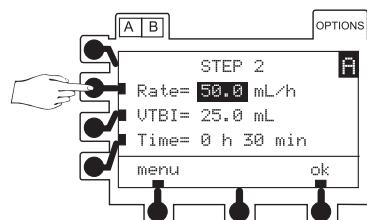


7. When programming is complete and to return to review page(s), press **ok** soft key.

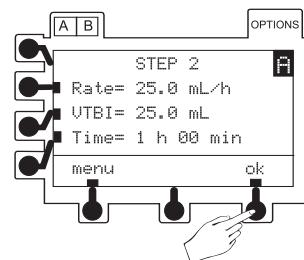

8. To approve review page(s) and **STEP TOTALS** page, press **ok** soft key.

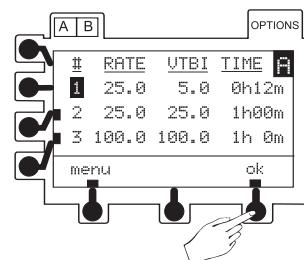

9. To resume infusion, press **RUN HOLD** or **run** soft key.

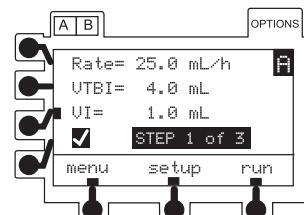

Multi-Step Program (Continued)


Resuming an Interrupted Multi-Step Program

The channel retains its place in the program if the instrument is turned off. The program can be restarted from **STEP 1** or resumed where it left off.

- Follow "Start-Up Sequence" steps and select **NEW PATIENT?** - **no**.

*NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, **NEW PATIENT?** screen does not appear.*

- Return To Multi-Step?** page appears.
- Press **yes** soft key.
 - Pressing **no** soft key returns screen to primary setup page.
 - Press **Review/Resume** soft key.
 - STEP In Progress** page appears.



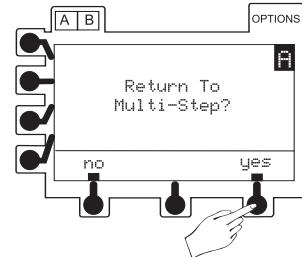


- To resume program from point of interruption, press **Continue Program** soft key.

OR

To restart program at beginning of **STEP 1**, press **Restart Program** soft key.


- Review page(s) appears.
- Verify all settings are correct. If a change is required, refer to "Making Changes During Multi-Step Program" section.
 - To approve review page(s) and **STEP TOTALS** page, press **ok** soft key.

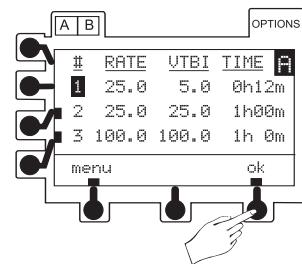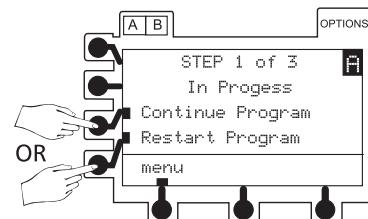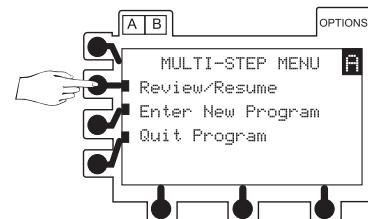

Multi-Step Program (Continued)

Resuming an Interrupted Multi-Step Program (Continued)


- To continue or restart program, press  or **run** soft key.

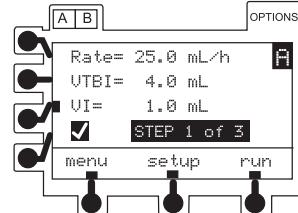

Quitting Multi-Step Program


The channel must be on hold.

- Press **menu** soft key.

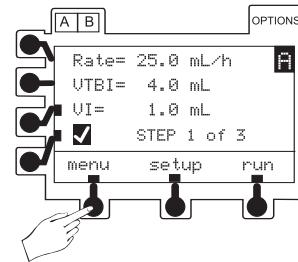

- To return to primary setup page, press **Quit Program** soft key.

*NOTE: Primary setup page parameters may be different from the **MULTI-STEP MENU**. Verify all parameters prior to resuming infusion.*

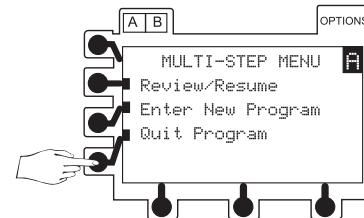

Multi-Dose Program

This feature permits the clinician to preprogram 1 to 24 infusions with the same rate and volume, over a period of up to 24 hours.

This feature also offers a delayed start option up to 8 hours and a Dose Complete Alert Option to alert the clinician of the completion of each dose delivered.

This program requires another infusing line to keep the vein open between programmed doses since there is no KVO infusion between doses or following program completion.


Qualified service personnel can turn the Multi-Dose and Dose Complete Alert Option features on or off.

 Multi-Dose Program (Continued)


Entering a New Program

Select the desired channel, as necessary. The channel must be on hold in the primary mode, secondary mode, or a Loading Dose program.


1. Press **OPTIONS**.
 - Options page appears.

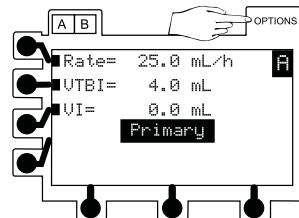



2. To view additional selections, press **page** soft key.

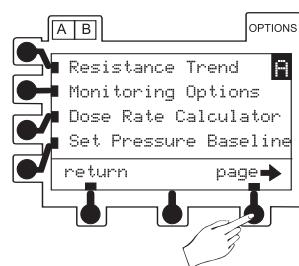

3. Press **Multi-Dose** soft key.
 - MULTI-DOSE MENU page appears.

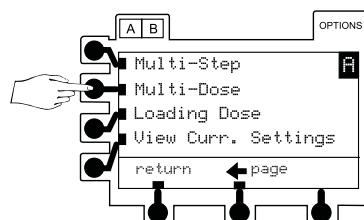


4. Press **Enter New Program** soft key.
 - Setup page appears.
 - Infusion rate is highlighted.

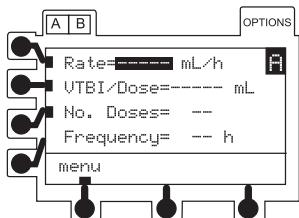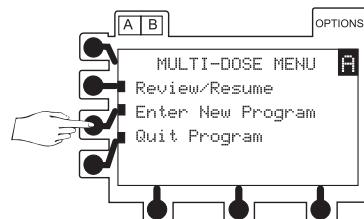


Multi-Dose Program (Continued)

Entering a New Program (Continued)


5. To enter infusion rate, use numeric keypad. Press **ENTER**.
• VTBI/Dose (volume to be infused per dose) is highlighted.

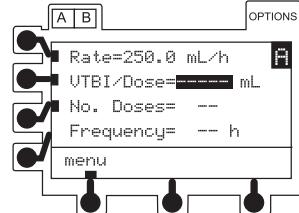


6. To enter VTBI/Dose, use numeric keypad. Press **ENTER**.
• Number of doses to be given is highlighted.

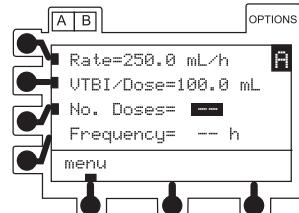


7. To enter number of doses, use numeric keypad. Press **ENTER**.
• Dose frequency is highlighted.

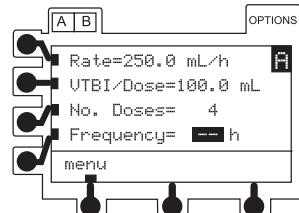

8. To enter dose frequency (time interval from start of one dose until start of next), use numeric keypad. Press **ENTER**.
9. To approve all information, press **ok** soft key.
• If Dose Complete Alert Option is enabled, **DOSE COMPLETE ALERT OPTION** page appears.

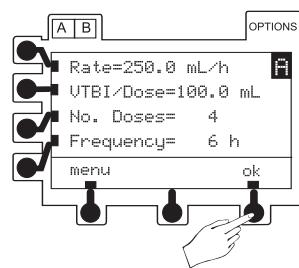

10. To select **On** or **Off**, use soft keys.

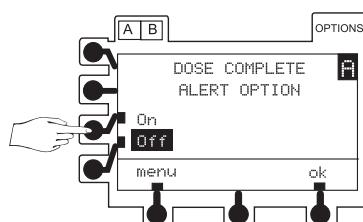


Multi-Dose Program (Continued)

Entering a New Program (Continued)

- To advance to time until first dose page, press **ok** soft key.


NOTE: All doses must be programmed to start within 24 hours.

- To start first dose immediately, proceed to "Starting First Dose Immediately After Programming" section.
- To delay start of first dose, proceed to "Delaying Start of First Dose" section.

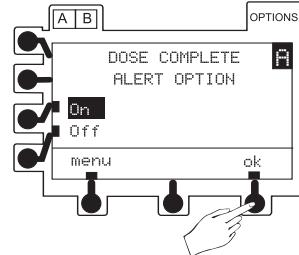


Starting First Dose Immediately After Programming

- A displayed time of 0 hours, 0 minutes identifies that first dose will start immediately after programming.
- To approve and advance to main hold page, press **ok** soft key.


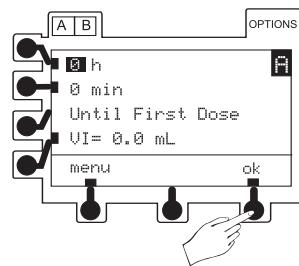


- To start infusion, press **RUN HOLD** or **run** soft key.

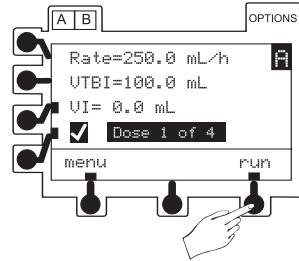

Delaying Start of First Dose

- To enter number of hours until first dose, use numeric keypad. Press **ENTER**.
 - Number of minutes is highlighted.
- To enter number of minutes (0 to 59) until first dose, use numeric keypad. Press **ENTER**.

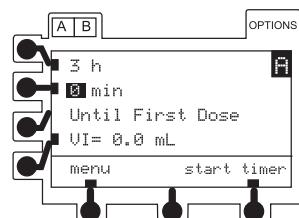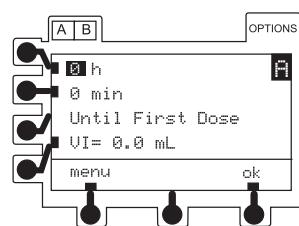


Multi-Dose Program (Continued)


Entering a New Program (Continued)

Delaying Start of First Dose (Continued)

- To advance to timer hold page, press **start timer** soft key.

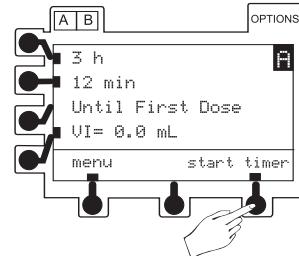

- Hourglass icon flashes to indicate timer is counting down to start of dose.
- Dose automatically starts its infusion when timer reaches 0 hours, 0 minutes.

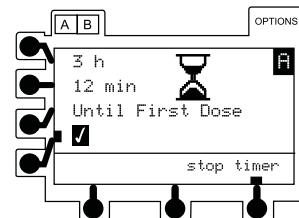

- To see Multi-Dose programmed information, press **✓** soft key.



Making Changes During Multi-Dose Program

Select the desired channel, as necessary. The channel does not need to be on hold to view more information.

Viewing More Information on Multi-Dose Setup

Press **✓** soft key.

- Additional Multi-Dose setup information is displayed for a short interval.

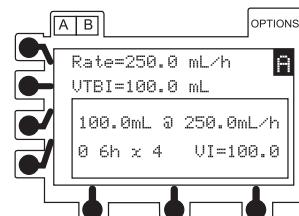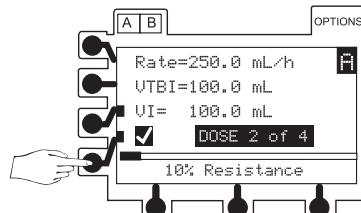


 Multi-Dose Program (Continued)


Making Changes During Multi-Dose Program (Continued)

Changing Time Interval Until Next Dose


1. Press **stop timer** soft key.

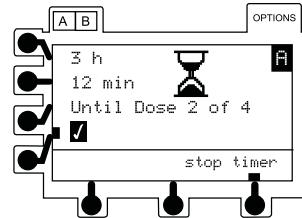

2. To select a value for editing, press a soft key.

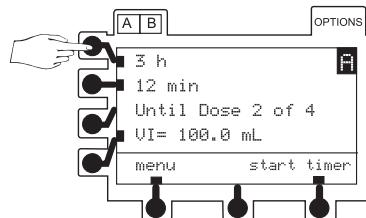

3. To enter new value, use numeric keypad. Press **ENTER**.

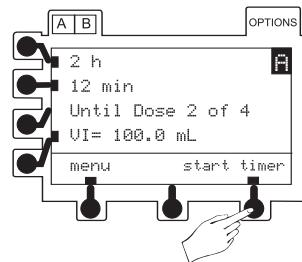


4. When editing is complete, press **start timer** soft key.

Resuming an Interrupted Multi-Dose Program

1. Follow "Start-Up Sequence" steps and select **NEW PATIENT?** - no.

NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, **NEW PATIENT?** screen does not appear.


- **Return To Multi-Dose?** page appears.
2. Press **yes** soft key.
 - Pressing **no** soft key returns screen to primary setup page.

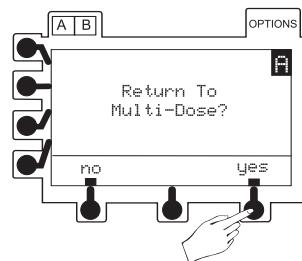

Multi-Dose Program (Continued)


Resuming an Interrupted Multi-Dose Program (Continued)

3. To access setup parameters, press **Review/Resume** soft key.
 - If infusion was in progress when interrupted, proceed to "If Infusion Was In Progress When Interrupted" section.
 - If infusion was not in progress when interrupted, proceed to "If Infusion Was Not In Progress When Interrupted" section.

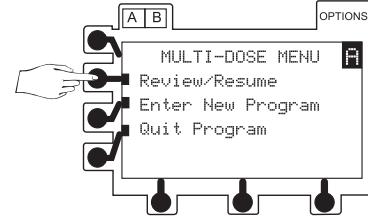


If Infusion Was In Progress When Interrupted

1. To approve and advance to main hold page, press **ok** soft key.

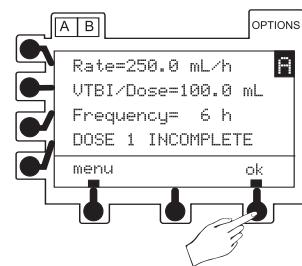


2. To resume infusion, press **RUN HOLD** or **run** soft key.

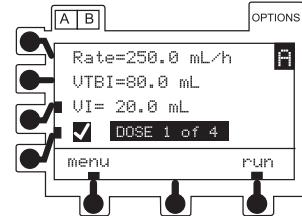


If Infusion Was Not In Progress When Interrupted

1. Press **ok** soft key.

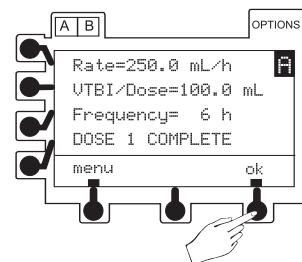

2. Edit time to delivery of next dose, as necessary.
3. To begin timer's countdown to delivery of next dose, press **start timer** soft key.

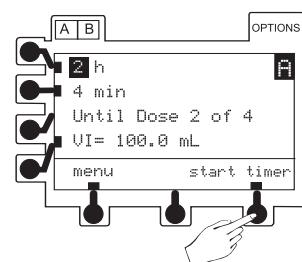


Multi-Dose Program (Continued)

Quitting Multi-Dose Program


The channel must be on hold or the last dose complete.

1. Press **menu** soft key.

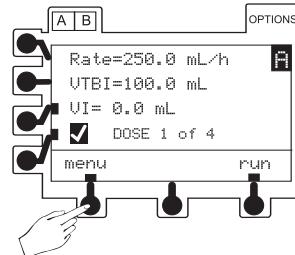

2. To return to primary setup page, press **Quit Program** soft key.

NOTE: Primary setup page parameters may be different from those of the Multi-Dose program. Verify all settings prior to resuming an infusion.

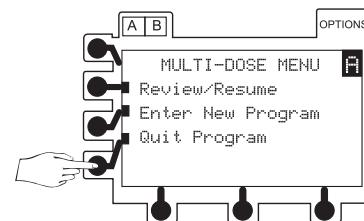

Loading-Dose

This feature allows the clinician to set up an initial infusion rate for a specific volume, automatically followed by a maintenance rate (primary settings) from the same container. The primary VTBI and VI include the Loading Dose volumes. When the Loading Dose VTBI reaches zero, a transition tone will sound ( if the transition tone feature is enabled), **Load Dose Complete** message will be displayed for a few seconds, and the primary settings will automatically take effect.

Qualified service personnel can turn the Loading Dose feature on or off.

WARNING


This mode is useful for loading a medication prior to the start of a continuous infusion or delivering fluid challenges. This feature is for delivery from primary containers only. Using this feature with two separate containers may result in unintended flow rates.

NOTE: Verify the primary mode parameters prior to accessing the Loading Dose option.

Entering a New Program

Select the desired channel, as necessary. The channel must be on hold in the primary or secondary mode.


1. Press **OPTIONS**.
- Options page appears.

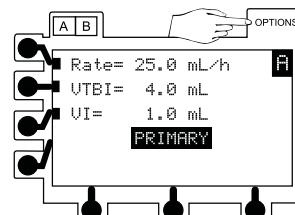

Loading-Dose (Continued)


Entering a New Program (Continued)

- To view additional selections, press **page** soft key.

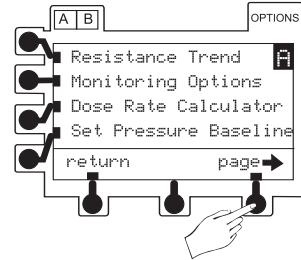

- Press **Loading Dose** soft key.

- Loading Dose infusion rate is highlighted.

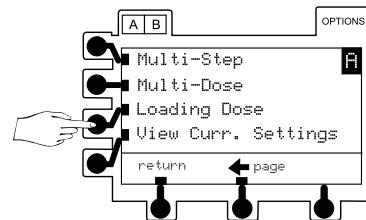


- If current value is appropriate, press **ENTER**.

OR

To enter a new infusion rate, use numeric keypad and press **ENTER**.

- Loading Dose VTBI is highlighted.

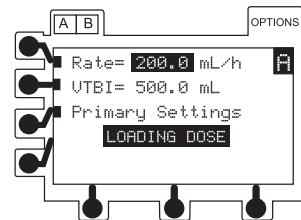


- If current value is appropriate, press **ENTER**.

OR

To enter a new VTBI, use numeric keypad and press **ENTER**.

NOTE: The Loading Dose VTBI must be less than the primary VTBI.

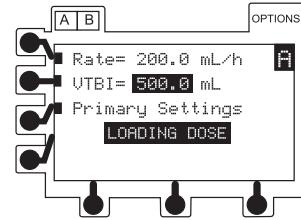

- To start Loading Dose infusion, press **RUN HOLD**.


Loading-Dose (Continued)

Making Changes During Loading Dose Program


Select the desired channel, as necessary. The channel does not need to be on hold to change settings for Loading Dose Rate or VTBI.

1. Press soft key next to parameter to be edited.
 - Current value is highlighted.

Changing Loading Dose Infusion Rate

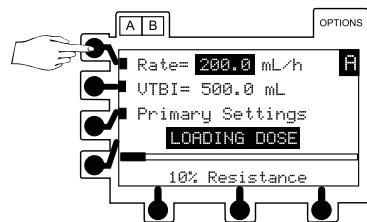


Changing Loading Dose Volume To Be Infused

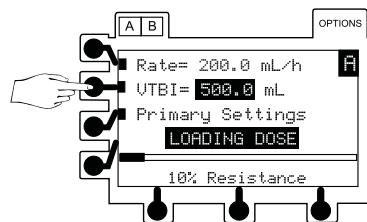

2. To enter new value, use numeric keypad.
3. To accept new value(s), press **ENTER**.

Viewing or Changing Primary Settings During Loading Dose Infusion

1. Select desired channel, as necessary.
2. Press **Primary Settings** soft key.
 - Primary rate (**Pri Rate**), primary volume to be infused (**Pri VTBI**) and total volume infused (**Total VI**) are displayed.
 - Display returns to normal **Loading Dose** page after six seconds.

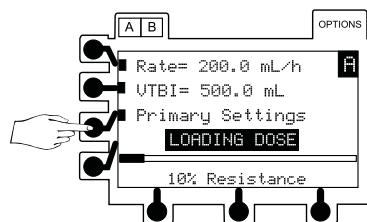


Loading-Dose (Continued)

Viewing or Changing Primary Settings During Loading Dose Infusion (Continued)

3. Press soft key for **Pri Rate**, **Pri VTBI** or **Total VI** to:

- “freeze” display
- highlight value

Changing Primary Rate During
Loading Dose Infusion

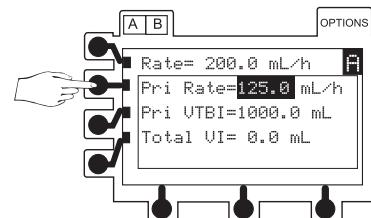


NOTE: If the flow sensor option is in use, VTBI can be turned off by selecting VTBI, pressing **CLEAR** and then **ENTER**.

OR

Primary VTBI can be deleted from the primary mode setup page ( Configurable Options).

Changing Primary VTBI During
Loading Dose Infusion

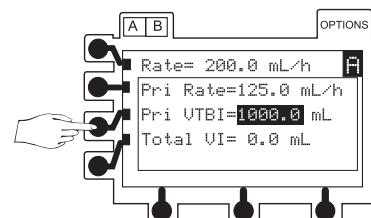


4. To enter a new value, use numeric keypad.

5. To accept new value(s), press **ENTER**.

Clearing Total Volume Infused During Loading Dose Infusion

1. To highlight value, press **Total VI** soft key.

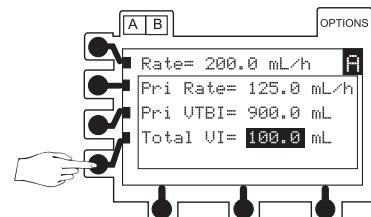

2. To reset volume infused to 0.0 mL, press **CLEAR** or 0 (zero key).

3. To accept new value(s), press **ENTER**.

- Display returns to normal **LOADING DOSE** page after six seconds.



Loading-Dose (Continued)

Resuming an Interrupted Loading Dose Program

- Follow "Start-Up Sequence" steps and select NEW PATIENT? - no.

NOTE: If resuming an infusion on a dual channel instrument with an infusion currently running, NEW PATIENT? screen does not appear.

- Return To Loading Dose? page appears.
- Press yes soft key.
 - Pressing no soft key returns screen to primary set up page.
 - Verify all settings are correct. If a change is required, refer to "Making Changes During Loading Dose Program" section.
 - To resume infusion, press .

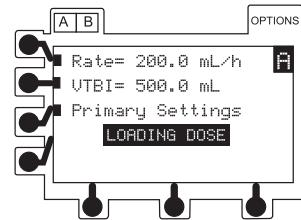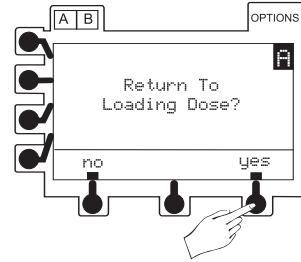

THIS PAGE
INTENTIONALLY
LEFT BLANK


NOTE: All features and options are shown enabled in this section.
The optional features illustrated may not have been enabled on the instrument.

Battery Management System

The Battery Management System incorporates features which enhance battery maintenance in order to maximize the life of the battery, reduce associated costs and increase instrument availability. The system provides:


- Green  : lights when instrument is plugged in.
- Amber  : flashes when instrument is operating on battery power.
- Automatic battery power: if instrument is unplugged or in the event of a power failure.
- Low battery alert: indicates battery depletion is imminent, beginning at least 30 minutes prior to a **BATTERY DEPLETED** alarm.

Maximum battery capacity, as well as gauge accuracy, is reached after several complete charge/discharge/recharge cycles in the refresh process. ALARIS Medical Systems recommends that the battery be fully charged/discharged/recharged, using the refresh cycle, before placing the instrument in use. Refer to the Technical Service Manual for detailed information on the refresh cycle.

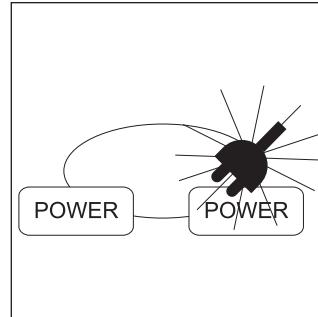

Battery Power Gauge and Indicator

The gauge indicates approximate battery run time remaining under current operating conditions. It is located in the lower display and is always on. To ensure a more accurate battery gauge reading, review the remaining battery run time five minutes after starting an infusion. The gauge updates for each program change while infusing.

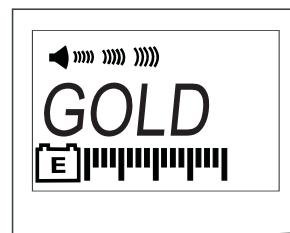

NOTES:

- *Battery run time may be affected by the operating mode, rate, monitoring options and back pressure.*
- *The gauge accuracy is based on the last refresh cycle and is affected by the number of charge/discharge/recharge cycles.*
- *The instrument label and battery gauge are always displayed, even when the instrument is turned off; however, the battery gauge does not represent the battery time remaining when the instrument is turned off.*


Battery Management System (Continued)

Battery Recharge

The battery recharges whenever the instrument is plugged into an AC outlet.

Qualified service personnel can replace the battery when charging capacity gets too low.

NOTE: All batteries gradually lose their capacity to hold a charge over time and use. To maintain optimal battery performance, ensure the instrument is connected to AC power whenever possible, including when it is powered off or stored.

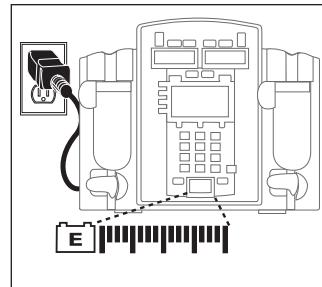


Nurse Call (7130/7230 Only)

If the instrument is equipped with the optional nurse call feature, alarms and some alerts from the instrument will be relayed to the hospital's existing nurse call system. No operating features of the instrument are changed. The instrument will alarm with or without the nurse call installed.

Activating Nurse Call Feature

1. Plug nurse call cable into  on instrument back panel.

NOTE: A false remote alarm may occur if the nurse call plug is not properly inserted.

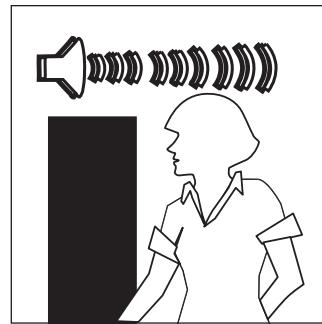

2. Press channel's .
3. Instrument beeps briefly to signal proper operation.
4. Plug nurse call cable into nurse call system.
5. Operate instrument as described in this document.

NOTE: All alarms and some alerts activate the nurse call system. The following alerts will not activate the nurse call system:
Checking Line, Load Dose Complete, Secondary Complete.

If an Alarm Occurs

1. Go to instrument.
2. Use "Alarms, Alerts and Prompts" section of this document to determine cause and appropriate corrective action.

Nurse Call (7130/7230 Only) (Continued)

If an Alarm Occurs (Continued)

- Reset nurse call system, as required.

NOTE: Disconnecting the nurse call cable from the wall or turning off the instrument activates the nurse call system. Disconnecting the nurse call cable from the instrument will not activate the nurse call system.

Panel Lock



The panel lock feature helps prevent unauthorized changes of any instrument settings, including turning the instrument off.

The panel lock key, , is located behind the handle.

Turning Panel Lock Feature On

Press and hold  until  appears in lower display.


- Dual channel instrument only: ,  and  keys can be used to view settings.
-  Panel Locked** appears in Main LCD Display if any other key is pressed.

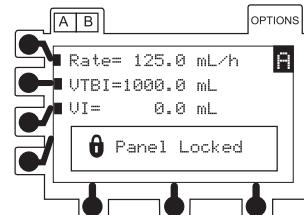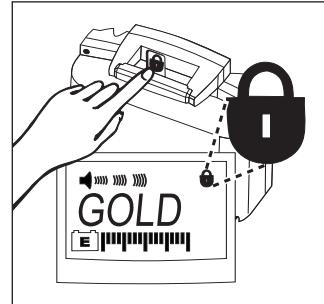

Turning Panel Lock Feature Off

Press and hold  until  in lower display disappears.

NOTE: To make changes or respond to an alarm, the panel lock must be turned off.

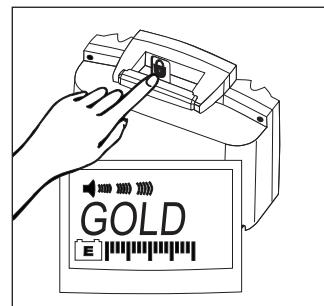


Pole Clamp

NOTE: The illustrated pole clamp knob may not reflect the knob in use on the instrument.

The uniquely designed pole clamp adapts to a wide variety of surfaces (such as, poles, bed rails) to provide greater versatility and to simplify transports. It features:

- 360° rotation in 90° increments
- ergonomically designed knob
- accommodates diameters from 15 to 35 millimeters
- no restrictions for pole mounting except physical space

NOTE: When using multiple instruments, care should be taken to evenly distribute the instruments to ensure stability.

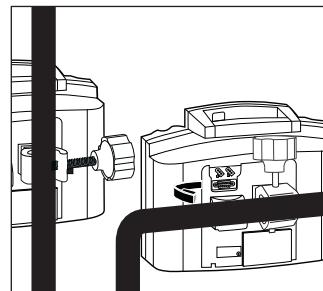


WARNING

To ensure proper occlusion detection, DO NOT operate the instrument tilted back more than 45° from the upright position.


Changing Pole Clamp Orientation

NOTE: The illustrated pole clamp knob may not reflect the knob in use on the instrument.

1. Press and hold rotation lever.

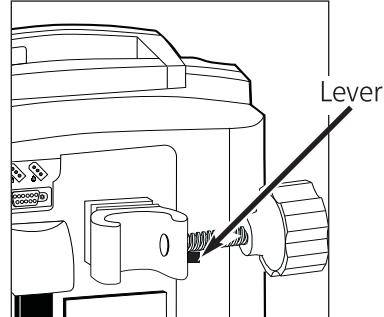

2. Reposition clamp.
3. Release lever at desired position.

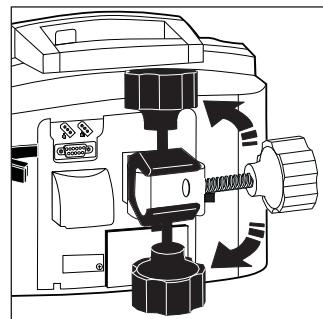


Flow Sensor

The optional Flow Sensor notifies users of empty containers and/or upstream occlusions. A handle cap accessory is available for storing the flow sensor when not in use.

NOTE: If a flow sensor is not connected to the instrument, ensure protective plugs are installed at the connector site to prevent entry of foreign material.

1. Plug a Model 180 Flow Sensor into applicable channel connector on back of instrument.

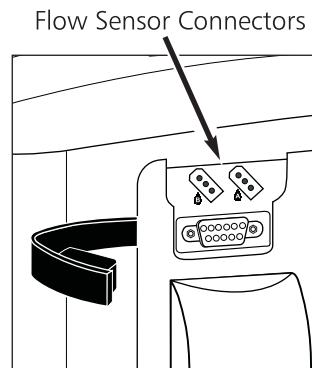


2. Attach flow sensor to upper portion of drip chamber.

- When using flow sensor, correct placement is essential for proper operation. Drip chambers of some administration sets have a flange at top to which flow sensor can be attached. Attachment on flange will ensure proper placement.

Upper surface of flow sensor should be slightly below drop-forming orifice but above level of fluid in drip chamber.

Ensure fluid level in drip chamber is at fill line and sensor optics are clean.

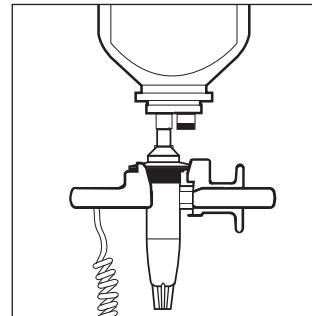


NOTE: Fluid level in drip chamber must be checked/re-established after each empty container condition.

- When using flow sensor option while ambulating or transporting a patient from one area to another, use care to avoid excessive swinging of solution container(s).

Flow Sensor (Continued)

3. Attach flow sensor to instrument handle when not in use.

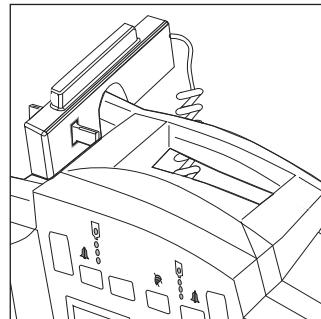

NOTES:

- The flow sensor should be routinely cleaned with warm water while actuating the slider, then dried thoroughly.
- See the "Radio Frequency Interference" information in the "Warnings and Cautions - User Precautions" section.

CAUTION

Do not use solvents or cleaning agents. Damage to plastic parts of the flow sensor could occur.

CAUTION

Infusing fluids which form smaller drops, through a 60 drops/mL set, at high rates may result in a "No Upstream Flow Detected" alarm. (This is because the small, rapidly falling drops form a continuous stream which does not trigger the flow sensor.) In this event, unplug the flow sensor from the instrument.

RS-232 Computer Link

The optional Computer Link feature allows a hospital computer to interact with the instrument. The computer cannot start or stop the instrument, set the rate, or make any change in status. If the feature is off, the computer cannot communicate with the instrument. If the feature is **Monitor**, the computer can only receive information from the instrument.

NOTE: To assure continued electromagnetic compatibility performance, the communications cable attached to the instrument should be no longer than one meter, have fully shielded connector housings, and have a 100% coverage braid/foil shield attached to the connector housings around the signal conductors with the cable jacket.

Qualified service personnel can turn the Computer Link feature on or off.


WARNING

Use of accessories or cables other than those specified may result in degraded electromagnetic compatibility performance of this device.


RS-232 Computer Link (Continued)

Connecting to a Computer


1. Press **OPTIONS**.
 - Options page appears.
2. To view additional selections, press **page** soft key.

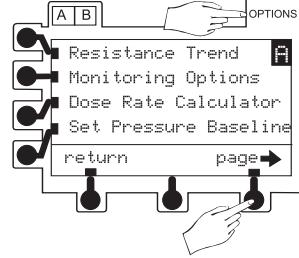


3. Press **Computer Link** soft key.
 - Computer Link page appears.

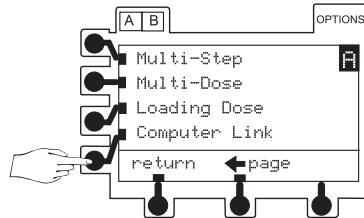

4. Press **Monitor** soft key.
5. Press **ok** soft key.

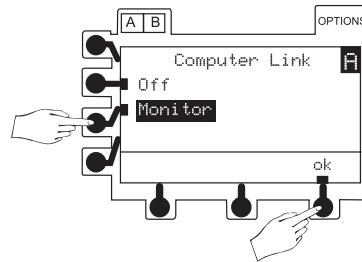


6. Connect an RS-232 cable from hospital computer to  on instrument's back panel.
 - During communication between host computer and instrument, MNTR (Monitor Mode) appears in lower LCD.
 - If communication is interrupted, MNTR (Monitor Mode) flashes for 60 seconds.

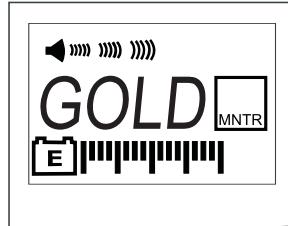



NOTE: MNTR remains in the lower display once the mode is selected and communication with the computer has been established.

Disconnecting from a Computer

1. Press **OPTIONS**.
 - Options page appears.
2. To view additional selections, press **page** soft key.

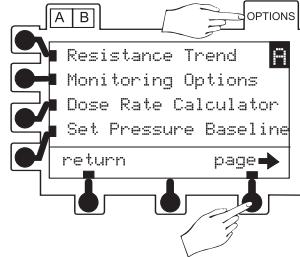

3. Press **Computer Link** soft key.
 - Computer Link page appears.
4. Press **Off** soft key.
5. Press **ok** soft key.

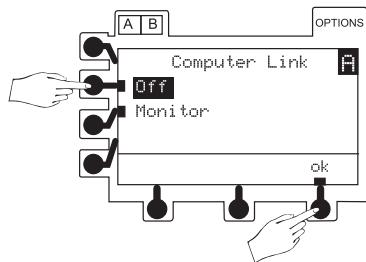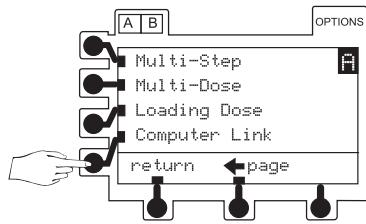

Specifications

Administration Sets:	Use only ALARIS Medical Systems® 72 Series administration sets.		
Alarms:	Accumulated Air In Line Air In Line Battery Depleted Channel Malfunction Computer Link Failure Flow Sensor Unplugged Hold Time Exceeded Instrument Malfunction	Key Stuck Latch Open No Upstream Flow Detected Occlusion Downstream Occlusion Upstream Primary Flow Detected During Secondary Set Out Set Up Time Exceeded	
Battery:	<p>Rechargeable nickel-cadmium. A single channel instrument will operate for 4 hours nominal and a dual channel instrument will operate for 3 hours nominal, under the following conditions:</p> <ul style="list-style-type: none"> • new, fully charged battery • ambient room temperature, $73\pm7^{\circ}\text{F}$ ($23\pm4^{\circ}\text{C}$) • resistance monitoring modes • rate: 100 mL/h on a single channel instrument and 50 mL/h on each channel of a dual channel instrument <p>Battery run time is affected by operating mode, rate, monitoring options and back pressure. (See "Battery Management System" section of this document.)</p>		
Case:	Impact and flame resistant plastic.		
Critical Volume:	Maximum incremental volume in case of single point failure will not exceed 1.0 mL at 999.9 mL/h.		
Dimensions: (Nominal)	<u>7130/7131</u>	<u>7230/7231</u>	
<i>Depth*</i>	5.0 in/12.7 cm	5.0 in/12.7 cm	
<i>Height</i>	8.6 in/21.8 cm	8.6 in/21.8 cm	
<i>Power Cord</i>	10 ft/3 m	10 ft/3 m	
<i>Weight**</i>	6.6 lb/3.0 kg	8.4 lb/3.8 kg	
<i>Width</i>	7.6 in/19.3 cm	10.7 in/26.7 cm	

* Without pole clamp.

** Without power cord.

Specifications (Continued)

Downstream Occlusion:

NOTE: Time to Occlusion and Bolus Volume data tested to standards defined in AAMI ID26:1998, Section 51.101 b).

Time to Alarm

Time to Detect Downstream Occlusion (minutes)		Monitoring Options			
		Pressure		Resistance and High Resistance	
Threshold Settings		25 mmHg	600 mmHg	100% 25 mmHg	100% 600 mmHg
1 mL/h	Maximum	2	75	2	7
	Typical	0.6	30	0.6	4
25 mL/h	Maximum	1	25	1	3
	Typical	0.1	1	0.1	1

When the occlusion alarm pressure limit is set to the maximum threshold setting, the maximum infusion pressure generated into a hard occlusion at 25 mL/h is 11.6 ± 3.9 psi.

Bolus Volume

Bolus Volume Released Upon Correcting Downstream Occlusion (mL)		Monitoring Options			
		Pressure		Resistance and High Resistance	
Threshold Settings		25 mmHg	600 mmHg	100% 25 mmHg	100% 600 mmHg
1 mL/h	Maximum	0.5	0.5	0.5	0.5
	Typical	<0.1	0.3	<0.1	<0.1
25 mL/h	Maximum	0.5	0.5	0.5	0.5
	Typical	<0.1	0.3	<0.1	0.3

Testing performed using IV set model 72003, at $68 \pm 8^\circ\text{F}$ ($20 \pm 4^\circ\text{C}$).

Environmental Conditions:

	<u>Operating</u>	<u>Storage</u>
Atmospheric Pressure	700 to 1060 hPa	500 to 1060 hPa
Relative Humidity	20 to 90%	5 to 95%
	Noncondensing	Noncondensing
Temperature Range (Serial numbers <u>above</u> 3682241)	41 to 104°F (5 to 40°C)	-40 to 140°F (-40 to 60°C)
Temperature Range (Serial numbers <u>below</u> 3682242)	50 to 104°F (10 to 40°C)	-40 to 140°F (-40 to 60°C)

Flow Rate Range:

0.1 to 270.0 mL/h in 0.1 mL/h increments (secondary mode)
0.1 to 999.9 mL/h in 0.1 mL/h increments (all other modes) 

Specifications (Continued)

Ground Current Leakage:	Electrical leakage current, enclosure: <100 microamperes Electrical leakage current, patient: <10 microamperes
KVO Flow Range:	0.1 to 20.0 mL/h in 0.1 mL/h increments 
Mode of Operation:	Continuous
Power Requirements:	100-240 V~, 50/60 HZ (40 watts), 3-wire grounded system Class 1 with Internal Power Source
Rate Accuracy:	For rates greater than 1 mL/h, up to 999.9 mL/h: $\pm 5\%$, 95% of the time with 95% confidence, under the conditions listed below. For rates equal to or less than 1 mL/h: $\pm 6.5\%$, 95% of the time with 95% confidence, under the conditions listed below.
	Rate Accuracy Test Conditions: Infusion rate range: 0.1 to 999.9 mL/h Head height: 24 ± 1 in. (61 ± 2.5 cm) Test solution: distilled water Environment temperature: $68 \pm 8^\circ\text{F}$ ($20 \pm 4^\circ\text{C}$) Back pressure: 0 psi Needle: 18 gauge Set Model: 72003 Minimum collection volume: 6 mL

CAUTION

Variations of head height, back pressure, time, monitoring mode option, pump tilt or any combination of these may affect rate accuracy. Factors that can influence head height and back pressure are: IV set configuration, IV solution viscosity, and IV solution temperature. Back pressure may also be affected by catheter type. Refer to **Appendix - Trumpet and Start-up Curves** for data on how certain factors influence rate accuracy.

Volume Infused Range: 0.0 to 9999.9 mL in 0.1 mL increments

Volume To Be Infused Range: 0.1 to 9999.9 mL in 0.1 mL increments (primary and dose rate modes)
0.1 to 999.9 mL in 0.1 mL increments (all other modes)

NOTE: The Signature Edition® Pump has been assessed and complies with the following Technical Standards:
IEC 60601-1 / BS 5724, including amendments A1 and A2; IEC 60601-2-24; CISPR 11, Group 1, Class B Emissions;
IEC 60601-1-2.

C₀ Configurable Options

The following features can be customized by qualified service personnel in the Configuration and Diagnostics Modes.

<u>Feature</u>	<u>Options</u>	<u>Default</u>
Air in Line:		
Air-in-Line Accumulator	On/Off	On
Air-in Line Alarm Threshold	50, 100, 200, or 500 mcL	100 mcL
Air-in-Line Reset	On/Off	Off
Audio:		
Transition Tone	On/Off	On
Volumes	Low/Med/Hi Med/Hi Hi	Low/Med/Hi
Computer Link:		
Baud Rate	300/600/1200/1800/2400/4800/9600	9600
Mode	Monitor/Off, Off	Off
Parity	Even/Odd/None	None
Dynamic Monitoring®:		
Auto Restart Plus	0 (Off) /1 to 9	3
Monitoring Options	Resistance/High Resistance/Pressure	Pressure
Trends	On/Off	On
Pressure:		
Manual Pressure Baseline	On/Off	On
Pressure Alarm	Adjustable/Fixed	Adjustable
Pressure Display	On/Off	On
Pressure Limit, Initial <i>(Configuration Mode: Def Alarm)</i>	25-600 mmHg	600 mmHg
Pressure Limit, Maximum	25-600 mmHg/600 mmHg	600 mmHg
Resistance:		
Default Resistance Alert	0-100%	100%
Resistance Alert	On/Off	On
Resistance Display	On/Off	On
Resistance Pressure Setting	1-600 mmHg	600 mmHg
Instrument ID*	9 digits	000000000
Instrument Label	4 alpha-numeric	GOLD
KVO Rate	0.1 - 20.0 mL/h	5.0 mL/h
Maintenance:*		
Maintenance Interval	1-52 wks	52 wks
Maintenance Reminder	On/Off	On
Optional Modes:		
Dose Rate Calculator	On/Off	On
Loading Dose	On/Off	On
Multi-Dose	On/Off	Off
Multi Dose Alert	On/Off	Off
Multi-Step	On/Off	Off
Panel Lock	On/Off	On

 Configurable Options (Continued)

<u>Feature</u>	<u>Options</u>	<u>Default</u>
Pressure Sensor*		
Self Check Interval	1-52 wks	12 weeks
Profiles	Off	Off
Rate, Maximum	0.1 - 999.9 mL/h	999.9 mL/h
Regional Settings	Region: N. America, European Language: English	North America English **
VTBI	On/Off (Flow Sensor use)	On


* These features are configured in the Diagnostics Mode.

** Instruments manufactured for sale in Europe will be set, at the factory, to European English. If a "new" logic board is installed or the instrument is set to factory defaults, the instrument defaults to North America English. If the language needs to be reset, contact qualified service personnel.

Unpacking

1. Remove instrument from its carton.
2. **Important:** Plug instrument into an AC outlet a minimum of 24 hours prior to use.
 - Maximum battery capacity, as well as gauge accuracy, is reached after several charge/discharge/recharge cycles, in the refresh process. ALARIS Medical Systems recommends that the battery be fully charged/discharged/recharged, using the refresh cycle, before placing the instrument in use.
3. Perform Periodic Inspections as indicated in "Inspection Requirements" section of this document.

See the "Configurable Options" section of this document for a list of the configurable features. Complete programming instructions are in the Technical Service Manual.

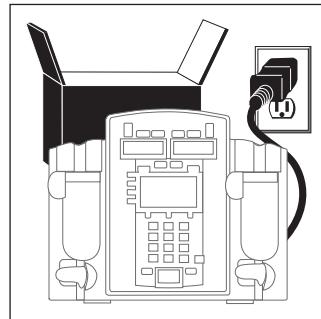

WARNING

Failure to properly charge the battery will result in an instrument malfunction.

Check-In and Configuration

This is a quick reference procedure for check-in and configuration of new and recently serviced instruments. The following check-in and configuration procedures are taken from the current service manual and service bulletins.

- Rate Accuracy Qualification Test (Rate Verification)
- Set Sensor Check / Pressure Calibration Verification
- Functional Test
- Flow Stop Test
- Ground Current Leakage Test
- Ground Resistance Test
- Instrument Configuration

References (used in conjunction with this document):

- 710X/720X Series Technical Service Manual
- Service Bulletin 490 (or most current version), "Release of Software Version 4.06" (7130/7230)
- Service Bulletin 495 (or most current version), "Release of Software Version 4.08" (7131/7231)

CAUTION

Charge the battery for a minimum of 24 hours prior to performing the following check-in and configuration procedures. Batteries without a full charge on initial use may become damaged and/or cause a malfunction.

Rate Accuracy Qualification Test

This procedure is to be used only for the testing of an instrument during "New Instrument Check-In" or when just received from the Service Depot Center. Rate accuracy of a properly calibrated Signature Edition® Pump is $\pm 5\%$, 95% of the time with 95% confidence. (Refer to the Trumpet and Start-Up Curves in the Appendix for additional information.) This test is to verify that damage or changes to the instrument did not occur during shipment and handling.

Check-In and Configuration (Continued)

Rate Accuracy Qualification Test (Continued)


NOTES:

Rate accuracy of the Signature Edition® Pump should be tested using a Model 80VCS Calibration Set. The system is designed to produce overall accuracy of $\pm 5\%$ for rates greater than 1 mL/h and up to 999.9 mL/h, and $\pm 6.5\%$ for rates equal to or less than 1 mL/h, 95% of the time with 95% confidence. The system performance with a calibration set will produce a smaller variability. In order to ensure overall accuracy is achieved, new instruments are tested to an accuracy of $\pm 3\%$ with the Model 80VCS set during "New Instrument Check-In."

Due to the Dynamic Monitoring® Feature, the rate is varied during operation. For this reason, ALARIS Medical Systems does not recommend using automatic testers to check rate accuracy. Generally, these devices collect small samples and may cause the results to be incorrect, even though the instrument is accurate.

Do not use the Model 80VCS Calibration Set for more than 30 rate verification runs (15 rate calibration number changes). Keep track of the number of times the set is used by recording each use on the 80VCS insert or on a separate record.

Rate Accuracy Qualification Test Setup

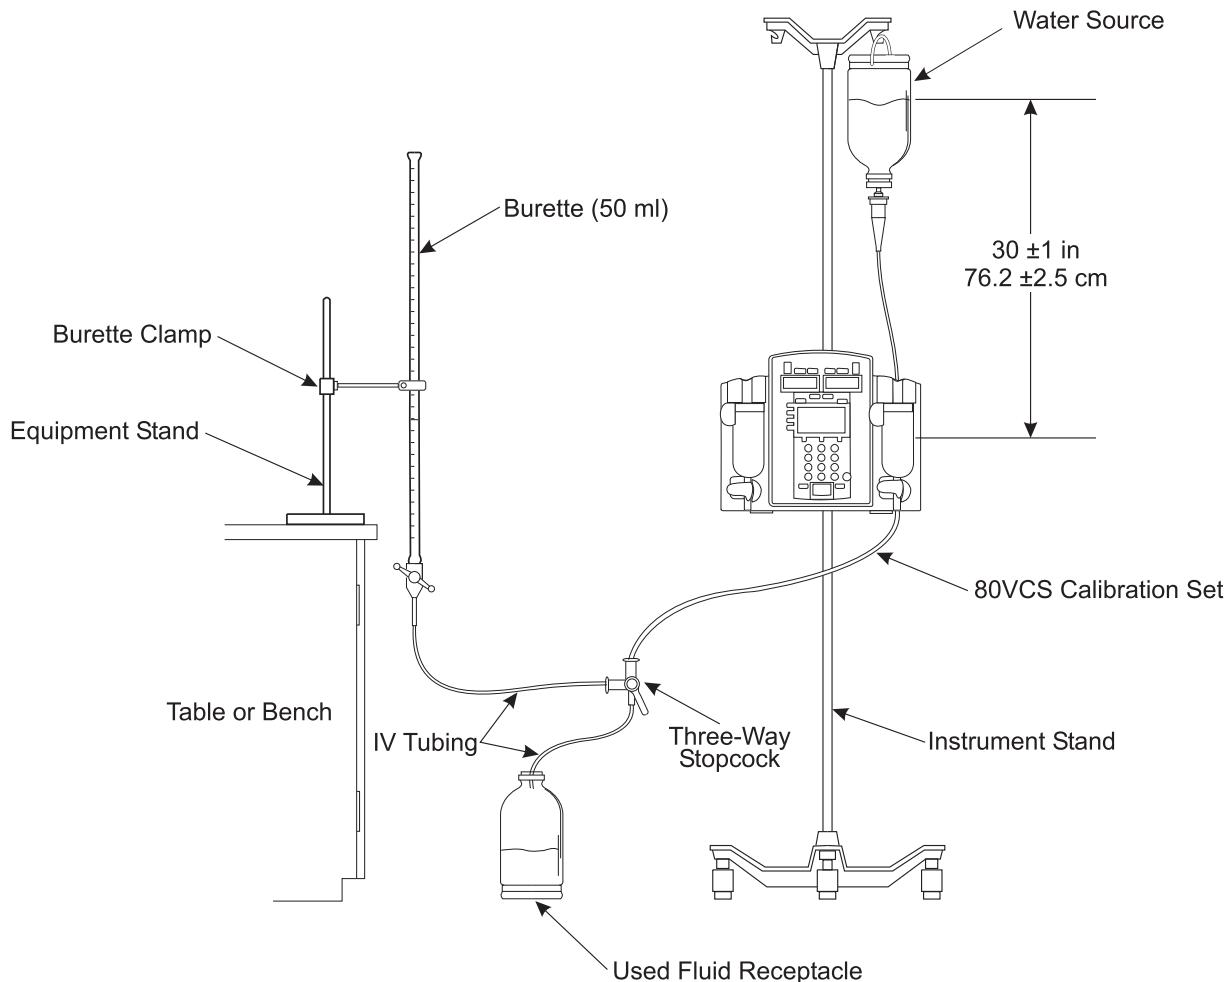

Check-In and Configuration (Continued)

Rate Accuracy Qualification Test (Continued)

1. Fill solution container with clean tap water. Close AccuSlide® Flow Regulator clamp on 80VCS Calibration Set and then insert spike into solution container.
2. Open AccuSlide® Flow Regulator clamp and prime set. Pay particular attention to ensure all air is expelled from set. Close AccuSlide® Flow Regulator clamp.
3. Connect output of set to one side of three-way stopcock.
4. Load set into instrument.
5. Close latch.
6. Verify there is no fluid flow or drops falling in drip chamber.
7. Plug instrument into a properly grounded AC outlet.
8. Set stopcock to output into a class A or B burette.
9. Press **[POWER]** to turn channel on.
10. Set primary infusion rate to 400 mL/h.
11. Set VTBI to 20 mL.
12. Ensure instrument (both channels if dual channel) is set to **Pressure** mode.

NOTE: The factory default for the **Monitoring Options** mode is **Pressure**.

13. Press **[RUN HOLD]** to start primary infusion. Infuse until tubing and burette are fully primed (approximately one minute).
14. Press **[RUN HOLD]** to stop infusion.
15. Adjust height of instrument and/or fluid container to attain a head height of 30 ± 1 inches/ 76.2 ± 2.5 centimeters between middle of pumping mechanism and fluid level in:

NOTE: A 30" head height was used in the initial qualification of this process and is the recommended head height for the Check-In Rate Accuracy Test. Based on observed field use, a 24" head height was also tested and verified for the Rate Accuracy Specification.

- bag or vented bottle (vent closed on administration set)
or
- drip chamber (unvented bottle with vent open on administration set).

Check-In and Configuration (Continued)

Rate Accuracy Qualification Test (Continued)

16. Adjust fluid level in burette until meniscus is level with zero mark on burette.

NOTE: The instrument may need to be run to prime the line to the zero level of the burette (step 13).

17. Verify primary infusion rate is 400 mL/h.
18. Reset VTBI to 40 mL and clear volume infused.
19. Press  to start primary infusion
20. Instrument will run approximately 360 seconds (six minutes) to complete delivery and then go into KVO mode. Stop instrument within one second of its entering KVO mode.
21. Make a note of volume collected in burette.
22. Note expected volume, as identified on 80VCS calibration set insert.
23. Do not remove 80VCS set from instrument until one of following is determined:
 - Instrument has passed rate verification and calibration is not needed.
 - Rate calibration number was changed and instrument now passes verification.
 - Mechanism replacement is required.
24. Calculate volume accuracy, as follows:

Volumetric Volume Accuracy Error Computation

$V_{\text{collected}}$ = volume in burette in milliliters

V_{expected} = characterized volume printed on 80VCS set insert

Step 1: $A = V_{\text{collected}} \div V_{\text{expected}}$

Step 2: $B = A \times 100$

Step 3: % Error (round % Error to nearest tenth of a percent)
 $= B - 100$

25. Result should be $0.0 \pm 3\%$.
26. If volume accuracy does not fall within required range of $\pm 3\%$ from expected volume and test results were:
 - inside a range of -5.5% to +7.0% from expected volume, perform rate calibration per "Preventive Maintenance" section of Service Bulletin 490 (or most current version). Set rate calibration number to 0.0% before running rate test, to determine a new calibration number.

-- Continued on Next Page --

Check-In and Configuration (Continued)

Rate Accuracy Qualification Test (Continued)

- outside a range of -5.5% to +7.0% from expected volume,
return instrument to ALARIS Medical Systems for repair or replace mechanism.
27. Set stopcock to drain fluid in burette to zero level, in preparation for next test.


Set Sensor Check / Pressure Calibration Verification

1. Access **DIAGNOSTICS MODE** by pressing and holding upper left soft key on power-up. Reference "Troubleshooting" chapter of service manual for details or contact ALARIS Medical Systems® Technical Support (see "Service Information" in this document).

NOTE: "XX.XX" in the illustrated display represents the current software revision.

2. Advance to **D6** page and choose **Cal Pressure** (both Channel A and Channel B for dual channel instruments).
3. Verify both **0 mmHg** and **500 mmHg** readings indicate Pass.
4. Install a standard set and close latch. Verify reading is over 170, to confirm set sensor operation.
5. Remove standard set and verify **Sensor** = reading is in -80 to +30 mmHg range without set installed, to verify pressure calibration.

NOTE: If the reading is out of range, refer to the "Pressure Calibration" section of Service Bulletin 490 or 495 (or most current version) or contact ALARIS Medical Systems® Technical Support for assistance.

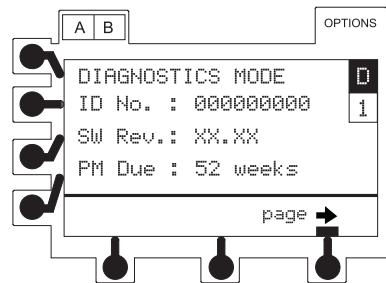

Functional Test

1. Turn instrument on without set installed. Verify it "beeps" and red alarm light flashes but does not stay lit.
2. Set infusion rate to 460 mL/h and VTBI to 100 mL.
3. Press **RUN HOLD** with latch closed, and rate and VTBI ≠ 0 to cause **Set Out** and **Air In Line** messages.
4. Open latch.

Check-In and Configuration (Continued)

Functional Test (Continued)

5. Install primed administration set with latch open.
6. Verify instrument displays **Air In Line** and **Latch Open** messages.
7. Close latch and verify display returns to setup page.
8. Perform Upstream Occlusion Test, as follows:
 - a. Verify infusion rate is set to 460 mL/h.
 - b. With instrument on hold, or at start-up, verify primary VTBI is set to greater than 100 mL.
 - c. Press  to begin infusion.
 - d. Clamp off IV line just above instrument (about two inches) to simulate an upstream occlusion.
 - e. Verify instrument stops running, alarms, and displays **OCCLUSION UPSTREAM** within 60 seconds.
 - f. Press  to silence alarm and put instrument on hold.
 - g. Release or open clamp and remove from tubing.
 - h. Press  to resume infusion. Alarm should not reoccur.
9. Perform Downstream Occlusion Test, as follows:
 - a. Continue infusing (from step 8h).
 - b. Verify rate is set to 460 mL/h.
 - c. Clamp off IV line just below instrument (about two inches) to simulate a downstream occlusion.
 - d. Allow instrument to run until it alarms **OCCLUSION DOWNSTREAM**. Verify this occurs within 60 seconds.
 - e. Press  to silence alarm and put instrument on hold.
 - f. Release or open clamp and remove from tubing.
 - g. Press  to resume infusion. Alarm should not reoccur.
 - h. Press  to stop infusion.

Check-In and Configuration (Continued)

Flow Stop Test

1. With an administration set primed and loaded in instrument, turn off power.
2. With all tubing clamps open and fluid container two or more feet about instrument, verify no fluid flows through set.
3. Open latch and remove set. Verify no fluid flows through set.

Ground Current Leakage Test

Use a DNI Nevada Model 232D (or equivalent) to measure the ground leakage current. Refer to the test equipment's operation manual for the proper setup and measurement technique.

Leakage current must be $\leq 100\mu\text{A}$ for normal and reversed line polarity.

Ground Resistance Test

Use a DNI Nevada Model 232D (or equivalent) to measure the ground resistance. Measure resistance from the AC power plug ground pin to the screw for the power cord strap, or to the screw for the battery cover on the chassis. Refer to the test equipment's operation manual for the proper setup and measurement technique. Resistance must be $\leq 0.10\Omega$.

CAUTION

Do not connect the ground resistance probe to the pressure transducer.

Instrument Configuration


Refer to the "Checkout and Configuration" chapter in the service manual and Service Bulletin 490 or 495 (or most current version) for the procedure and options.

Storage

Plug the instrument into an AC outlet during storage to ensure a fully charged battery when needed.

-  (AC indicator light) will be green whenever instrument is plugged in.

Close the latch(es) whenever the instrument is not in use.

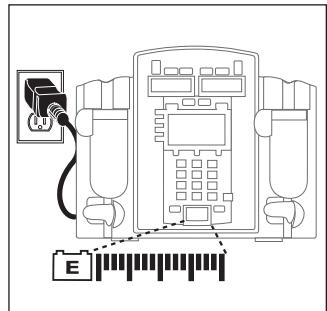


Cleaning

1. Unplug power cord from AC outlet before cleaning.
2. Verify RS-232 connector is covered. Do not spray fluid directly into any connector.
3. Use a soft cloth dampened with warm water and a mild, nonabrasive cleaning solution.
 - A soft-bristled brush may be used to clean narrow areas.
 - Use light pressure when cleaning pressure transducer and air-in-line detector areas of pumping channels.
 - Acceptable cleaning solutions (*use per manufacturers' instructions*):
Warm water
Vespene
Manu-Klenz (*cleaning only*)
10% Bleach Solution (*1part bleach to 9 parts water*)
4. Flow sensor should be routinely cleaned by running warm water over it while actuating slider, and then thoroughly dried.

CAUTION

DO NOT SPRAY onto or immerse the instrument in fluids. Cleaning solutions should be applied to the instrument with a soft cloth.

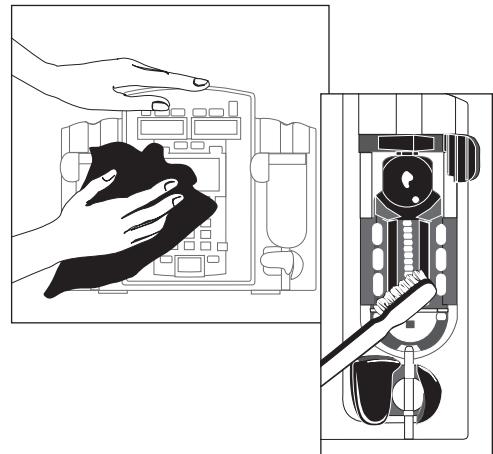

CAUTION

Do not use solvents or cleaning agents. Damage to plastic parts of the case or flow sensor could occur.

- DO NOT** use solutions containing aromatic solvents (naphtha, paint thinner, etc.), chlorinated solvents* (Trichloroethane, MEK, Toluene, etc.), alcohol, or phosphoric acid.
- DO NOT** use hard or pointed objects or pressurized sprays to clean any part of instrument.
- DO NOT** steam autoclave, EtO sterilize, or immerse instrument.
- DO NOT** use pressurized sprays on instrument.

* Excluding 10% bleach solution in water.

Cleaning (Continued)


Air-in-Line Assembly

It may be necessary from time to time to clean the Air-in-Line Detector so that optimal contact is maintained between the detection system and the IV tubing. This allows the ultrasound emitter in the Air-in-Line Arm to send a clear signal through the IV tubing to the receiver. Cleaning can be accomplished using a cotton-tipped applicator moistened with water, as follows:

1. Open instrument latch.
2. Moisten a cotton-tipped applicator with warm water.
3. Place cotton tip over Air-in-Line Detector (see illustration to right).
4. Close latch so tip of applicator is enclosed between Air-in-Line Detector and Air-in-Line Arm.
5. Swab up and down at least three times.
6. Open latch and remove applicator.

CAUTION

Do not use solvents or chemical cleaners.

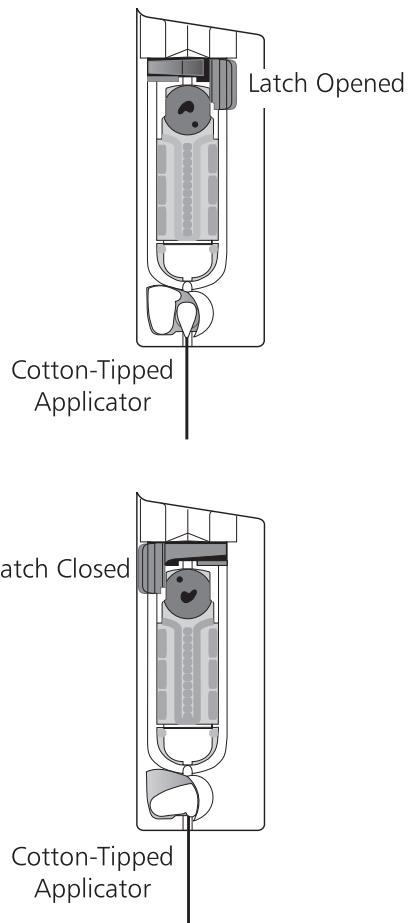

Inspection Requirements

To ensure the instrument remains in good operating condition, both regular and periodic inspections are required.

WARNING

Failure to perform these inspections may result in improper instrument operation. Instruments are tested and calibrated before they are packaged for shipment. To ensure proper operation after shipment, it is recommended that an incoming inspection be performed by your facility before putting the instrument into use.

Regular inspections consist of a visual inspection for damage and cleanliness, and performing the procedure described in the "Start-Up Sequence" section of this document before each usage of the instrument. Regular inspections are not covered under any contract or agreement offered by ALARIS Medical Systems and must be performed by the user.

Preventive maintenance inspections are recommended at the indicated intervals.

The preventive maintenance inspections listed are recommended in accordance with ALARIS Medical Systems requirements and guidelines. Customers within the United States and Canada should note that these inspections are also intended to complement the intent of the Joint Commission on the Accreditation of Healthcare Organizations' requirements.

For detailed instructions on performing preventive maintenance inspections and maintenance, refer to the Technical Service Manual and supplemental service bulletins. A service agreement may be obtained from ALARIS Medical Systems for the performance of all required periodic inspections.

For more information, see the "Service Information" section of this document.

Regular Inspections

PROCEDURE	FREQUENCY
Cleaning	As required
Inspect for Damage:	
Case	Each usage
Communication Cable	Each usage
Power Cord	Each usage
Start-Up Sequence	Each usage

Preventive Maintenance Inspections

PROCEDURE	FREQUENCY
Battery Refresh Cycle	12 months
Flow Stop Test	12 months
Functional Test	12 months
Ground Current	
Leakage Test	12 months
Ground Resistance Test	12 months
Pressure Calibration	12 months
Rate Accuracy Calibration	12 months
Regular Inspection	12 months
Reset Time	12 months

Service Information

NOTE: If the instrument shows evidence of damage in transit, notify the carrier's agent immediately. Do not return damaged equipment to the factory before the carrier's agent has authorized repairs.

If the instrument fails to respond as described in this document and the cause cannot be determined, do not use the instrument. Contact qualified ALARIS Medical Systems service personnel.

Customer Service

Information or assistance may be obtained by calling one of the following Customer Service numbers:

United States:	(800) 482-4822
Canada:	(800) 387-8309
UK:	
<i>Freephone</i>	0800 917 8776
<i>Fax</i>	01256 330 860

Technical Support

Technical support, service information, applications, and manuals may be obtained by contacting an ALARIS Medical Systems representative.

United States:	(800) 854-7128, extension 6003
Canada:	
<i>Eastern</i>	(800) 908-9918
<i>Western</i>	(800) 908-9919
UK, <i>Freephone</i> :	0800 389 6972

When submitting any request for service, include:

- a description of difficulty experienced
- instrument settings
- administration set/lot number
- solution(s) used
- message displayed at time of difficulty

Product Return

If it is necessary to return the instrument for service, obtain a return authorization number prior to shipment. Carefully package the instrument (preferably in the original packaging), reference the return authorization information, and return it to the appropriate service or distribution center. ALARIS Medical Systems does not assume any responsibility for loss of, or damage to, returned instruments while in transit.

WARRANTY

ALARIS Medical Systems, Inc., (hereinafter referred to as "ALARIS Medical Systems") warrants that:

- A. Each new ALARIS Medical Systems® Signature Edition® Pump, excluding the battery, is free from defects in material and workmanship under normal use and service for a period of two (2) years from the date of delivery by ALARIS Medical Systems to the original purchaser.
- B. The battery and each new accessory are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from the date of delivery by ALARIS Medical Systems to the original purchaser.

If any product requires service during the applicable warranty period, the purchaser should communicate directly with ALARIS Medical Systems headquarters (San Diego, CA) to determine the appropriate repair facility. Except as provided otherwise in this warranty, repair or replacement will be carried out at ALARIS Medical Systems' expense. The product requiring service should be returned promptly, properly packaged and postage prepaid by purchaser. Loss or damage in return shipment to the repair facility shall be at purchaser's risk.

In no event shall ALARIS Medical Systems be liable for any incidental, indirect or consequential damages in connection with the purchase or use of any ALARIS Medical Systems® product. This warranty shall apply solely to the original purchaser. This warranty shall not apply to any subsequent owner or holder of the product. Furthermore, this warranty shall not apply to, and ALARIS Medical Systems shall not be responsible for, any loss or damage arising in connection with the purchase or use of any ALARIS Medical Systems® product which has been:

- (a) repaired by anyone other than an authorized ALARIS Medical Systems service representative;
 - (b) altered in any way so as to affect, in ALARIS Medical Systems' judgment, the product's stability or reliability;
 - (c) subjected to misuse or negligence or accident, or which has had the product's serial or lot number altered, effaced or removed;
- or
- (d) improperly maintained or used in any manner other than in accordance with the written instructions furnished by ALARIS Medical Systems.

This warranty is in lieu of all other warranties, express or implied, and of all other obligations or liabilities of ALARIS Medical Systems, and ALARIS Medical Systems does not give or grant, directly or indirectly, the authority to any representative or other person to assume on behalf of ALARIS Medical Systems any other liability in connection with the sale or use of ALARIS Medical Systems® products.

ALARIS MEDICAL SYSTEMS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE OR APPLICATION.

See packing inserts for international warranty, if applicable.

THIS PAGE
INTENTIONALLY
LEFT BLANK

Trumpet and Start-Up Curves

DESCRIPTION AND EXPLANATION OF TRUMPET AND START-UP CURVES

In this instrument, as with all infusion systems, the action of the pumping mechanism and variations in individual administration sets cause short-term fluctuations in rate accuracy. The following graphs show typical performance of the system for both Pressure and Resistance Modes in two ways:

1. the accuracy during various time periods over which fluid delivery is measured (trumpet curves), and
2. the delay in onset of fluid flow when infusion commences (start-up curves).

Product operation is not affected by the selection of Resistance or High Resistance at 0.1, 1.0, and 25 mL/h; therefore, High Resistance graphs are not included.

Trumpet curves are named for their characteristic shape. They display discrete accuracy data averaged over particular time periods or "observation windows", not continuous data versus operating time. Over long observation windows, short-term fluctuations have little effect on accuracy, as represented by the flat part of the curve. As the observation window is reduced, short-term fluctuations have greater effect, as represented by the "mouth" of the trumpet. Knowledge of system accuracy over various observation windows may be of interest when certain drugs are being administered. Because the clinical impact of short-term fluctuations on rate accuracy depends on the half-life of the drug being infused and on the degree of intravascular integration, the clinical effect cannot be determined from the trumpet curves alone. Knowledge of the start-up characteristics should also be considered.

The start-up curves represent continuous flow rate versus operating time for two hours from the start of the infusion. They exhibit the delay in onset of delivery due to mechanical compliance and provide a visual representation of uniformity. Trumpet curves are derived from the second hour of this data.

FLOW CHARACTERISTICS UNDER VARYING DELIVERY CONDITIONS

Effects of Pressure Variations

Under conditions of +100 mmHg pressure, the Signature Edition® Pump typically exhibits a long-term accuracy offset of approximately -1.4% from mean values.

Under conditions of +300 mmHg pressure, the Signature Edition® Pump typically exhibits a long-term accuracy offset of approximately -1.5% from mean values.

Under conditions of -100 mmHg pressure, the Signature Edition® Pump typically exhibits a long-term accuracy offset of approximately -0.8% from mean values.

Resulting trumpet observation points typically track those of accuracy; therefore, no significant change in short-term variations result under these pressure conditions.

Effects of Negative Solution Container Heights

With a negative head height of -0.5 meters, the Signature Edition® Pump typically exhibits a long-term accuracy offset of approximately -5.8% from mean values.

Resulting trumpet observation points typically track those of accuracy; therefore, no significant change in short-term variations result under negative head height conditions.







Effects of Rate

For applications where flow uniformity is a concern, use of the Pressure Mode at rates of 1.0 mL/h or above is recommended.

NOTE: Tests conducted in accordance with IEC 60601-2-24, "Particular requirements for safety of infusion pumps and controllers" and AAMI ID26-1998 "Medical electrical equipment - Part 2: Particular requirements for the safety of infusion pumps and controllers", using a Model 72003 Administration Set (includes AccuSlide® Flow Regulator).

Trumpet and Start-Up Curves (Continued)

Pressure Mode

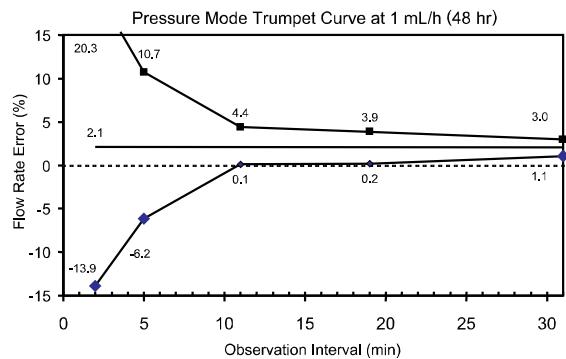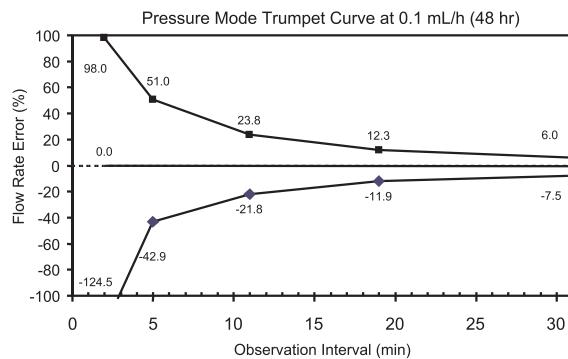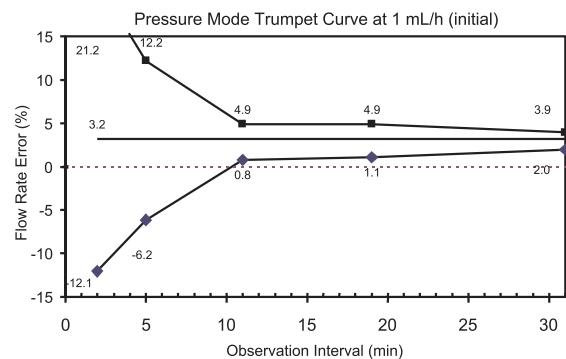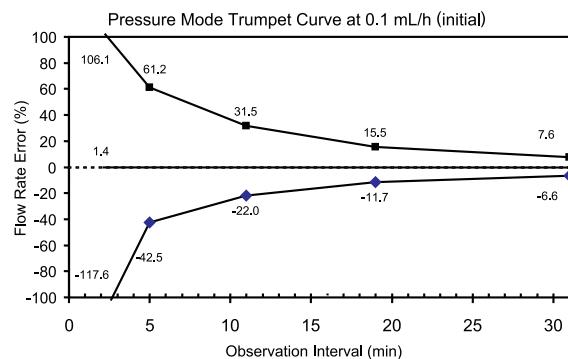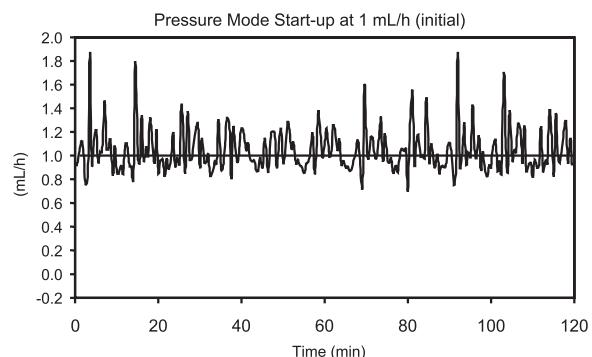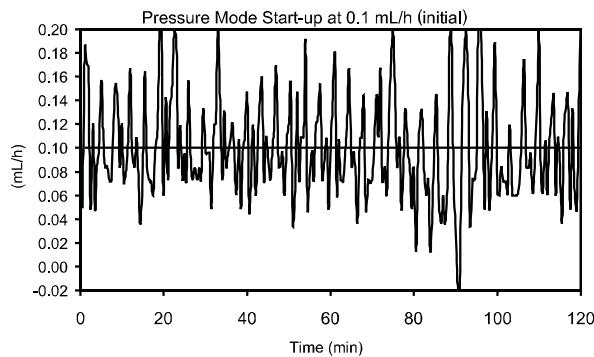







NOTE: The plot range has been increased to $\pm 100\%$, to allow visualization of the graph.

Legend:

- Maximum rate error
- Overall rate error
- ◆ Minimum rate error

Trumpet and Start-Up Curves (Continued)

Pressure Mode (Continued)

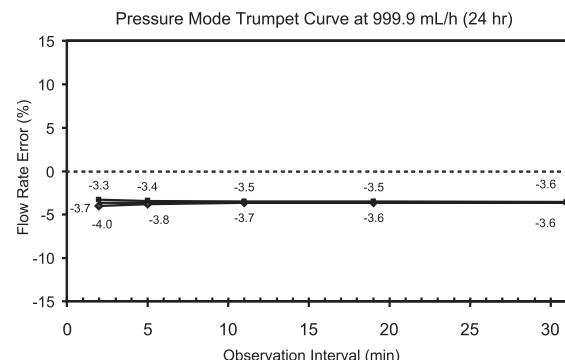
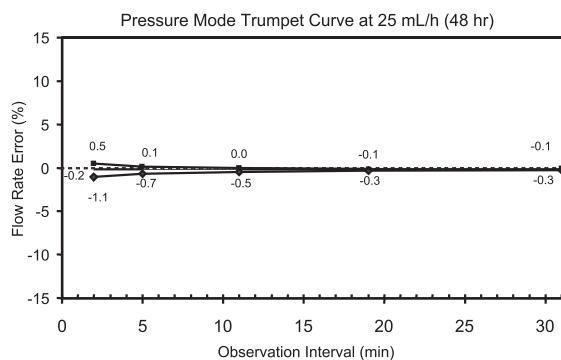
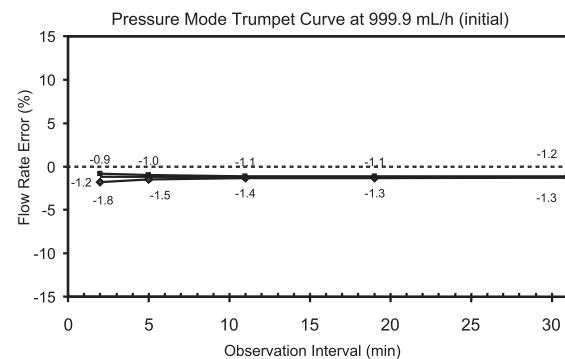
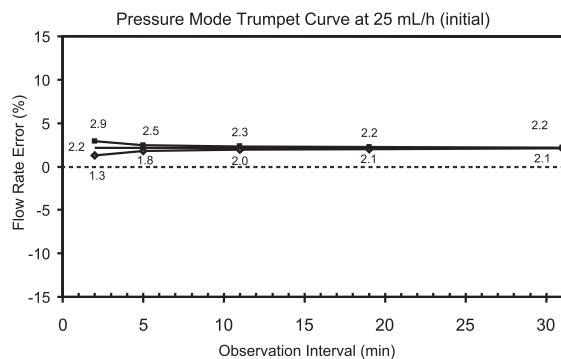
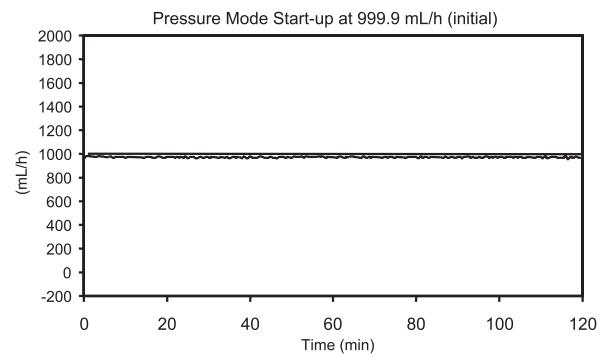
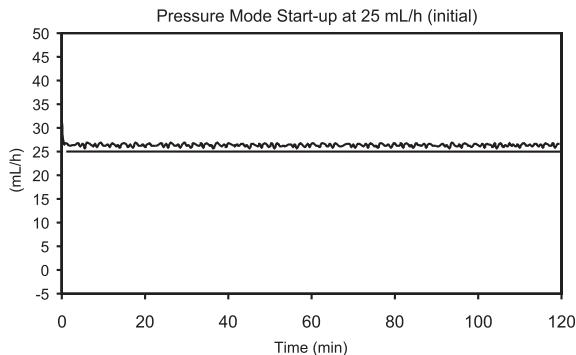


Legend:

- Maximum rate error
- ▬ Overall rate error
- ◆ Minimum rate error

Trumpet and Start-Up Curves (Continued)

Resistance Mode

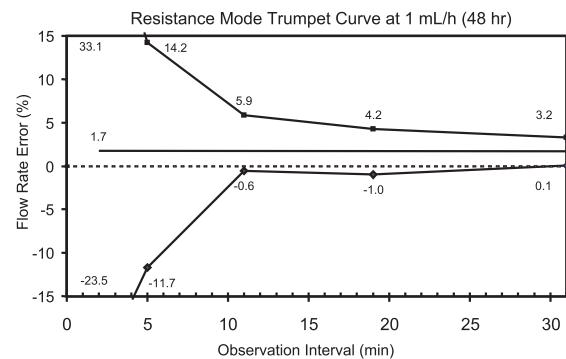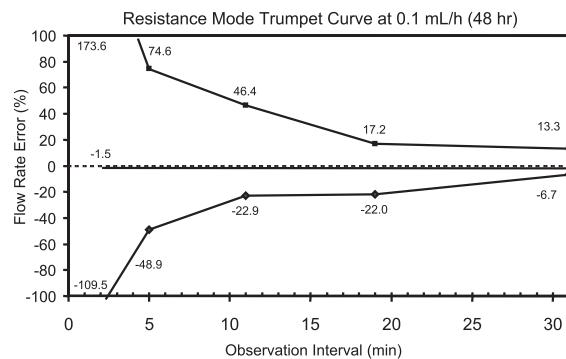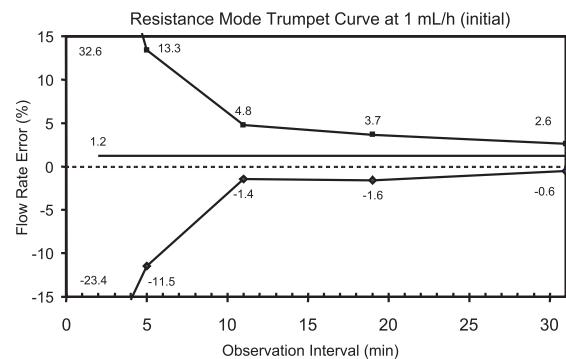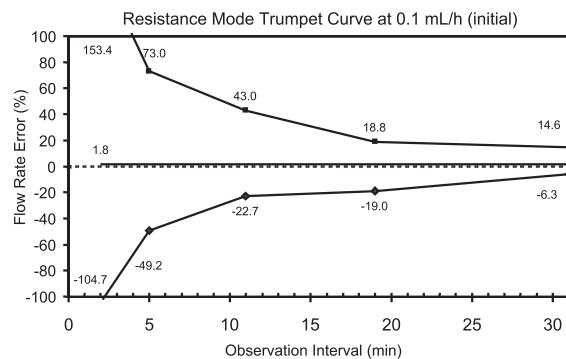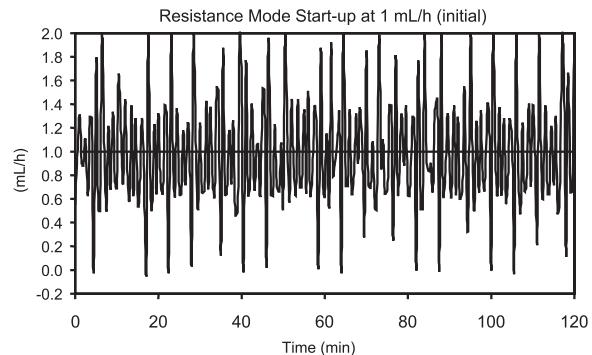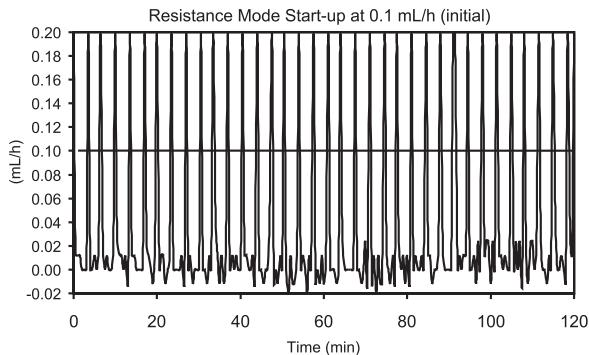







NOTE: The plot range has been increased to $\pm 100\%$, to allow visualization of the graph.

Legend:

- Maximum rate error
- Overall rate error
- ◆ Minimum rate error

Trumpet and Start-Up Curves (Continued)




Resistance Mode (Continued)

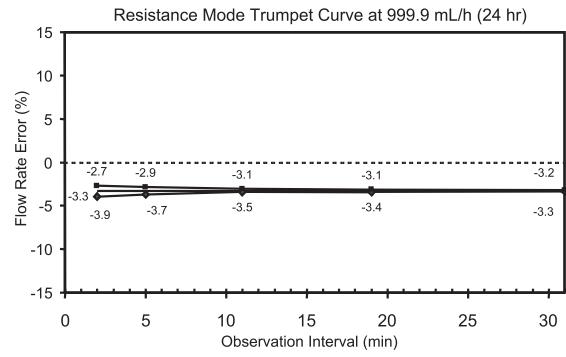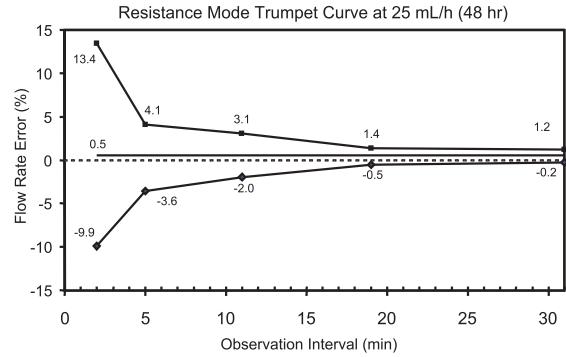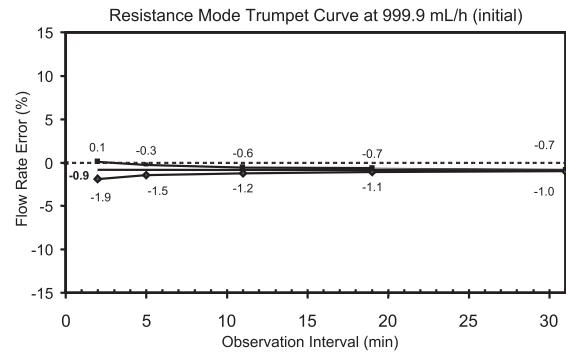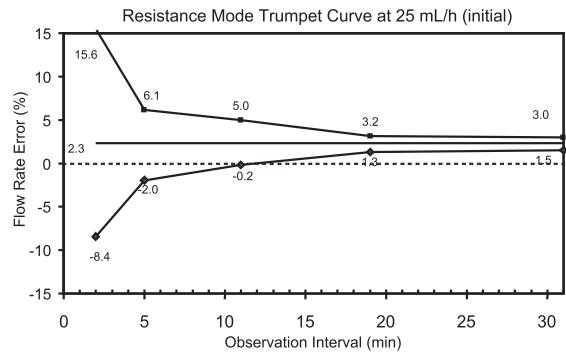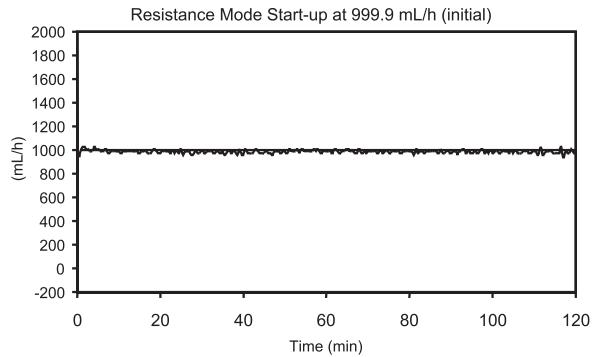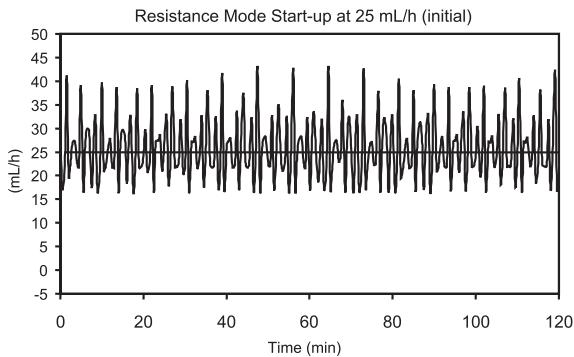

Legend:
■ Maximum rate error
▲ Overall rate error
◆ Minimum rate error

Trumpet and Start-Up Curves (Continued)

High Resistance Mode

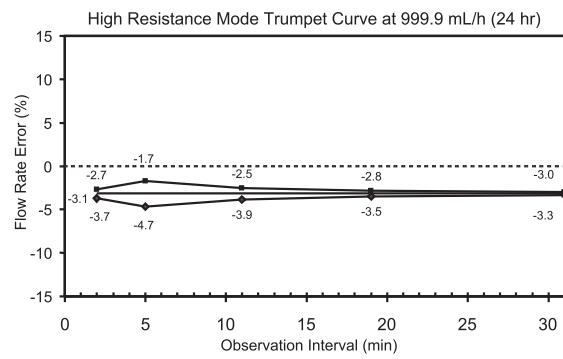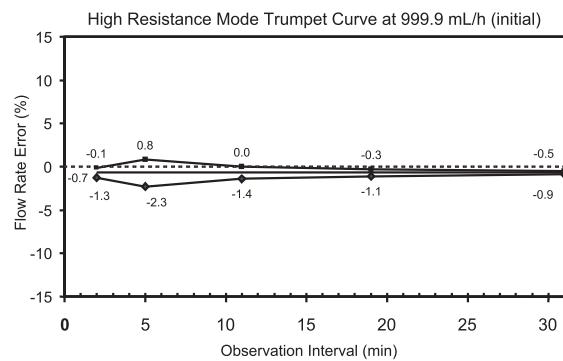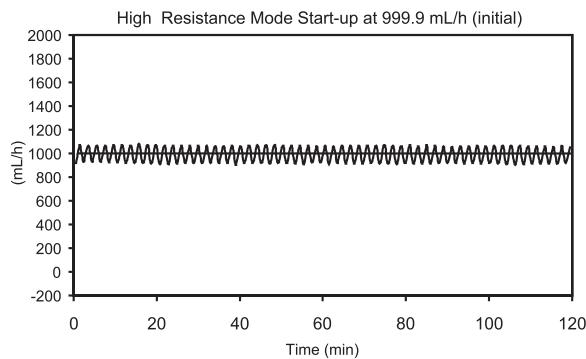

Legend:
■ Maximum rate error
— Overall rate error
◆ Minimum rate error

ALARIS®

MEDICAL SYSTEMS

ALARIS Medical Systems, Inc.
10221 Wateridge Circle
San Diego, California 92121 U.S.A.

Mail:
P.O. Box 85335
San Diego, California 92186-5335 U.S.A.

Authorized EU Representative
ALARIS Medical UK Ltd.
The Crescent, Jays Close
Basingstoke, Hampshire
RG22 4BS, UK

ALARIS Medical Systems®, AccuSlide®, Dynamic Monitoring®, Guardrails®, Signature Edition®, and SmartSite® are registered trademarks of ALARIS Medical Systems, Inc.

All other trademarks belong to their respective owners.

U.S. Patent Nos.: 4,898,576; 5,087,245; 5,096,385; 5,534,691; 5,537,853; 5,542,826; 5,563,347; 5,568,912; 5,575,632; 5,601,420; 5,603,613; 5,609,576; 5,712,795; 5,716,194; 5,719,761; 5,803,917; 5,827,223; 6,016,044; 6,211,642; 6,358,225; D367,527; D367,528; D371,194; CA Patented/Breveté: 78,376; 78,377; 78,378; 1,219,497; 1,279,800; 2,029,267; 2,199,156; 2,199,157; 2,199,160; 2,199,405; 2,199,631; 2,233,640; EP078635; CH: +122,210; +122,211; +122,212; +248,632; +121,931; DE D.B.P. Nos.: M9501995.2; M9501996.0; M9501997.9; P3482620.3; P3778211.8-08; P69004833.5-08; P690244,923; 69402231T3; FR Brevet Nos.: 121,931; 248,632; 387,724; 431,310; 612,004; 951,426; 951,427; 951,428; GB Patent Nos.: 121,931; 248,632; 387,724; 431,310; 612,004; 2,045,812; 2,045,813; 2,045,814; Hong Kong Nos.: HK1006005; HK1006006; HK1006041; JP Patent Nos.: 特許番号; 登録第1,003,444号; 登録第1,003,445号; 登録第1,006,528号; 特許第1,743,342号; 特許第1,924,062号; 特許第2,553,557号; 特許第2,802,171号; 特許第3,025,018号; 特許第3,025,019号; 特許第3,064,014号; SE Sv. pat. nr.: 387,724. Other Patents Pending.